

Type SE58 M

Transmitter



CE

Operating Instructions

INDEX

INTRODUCTION	3
SAFETY INFORMATION	3
SAFETY CONVENTION	4
TECHNICAL CHARACTERISTICS	5
TORQUES	12
SE58 M CONSTRUCTION	14
SE58 M CONSTRUCTION (STAINLESS STEEL VERSION)	15
INTERNAL LAYOUT	16
ELECTRICAL CONNECTION AND GROUNDING INSTRUCTIONS	17
INTERNAL LITHIUM BATTERY	18
ELECTRICAL CONNECTION TRANSMITTER- SENSOR	20
DIGITAL INPUT ON/OFF OPERATION	21
OUTPUTS WIRING	22
RS485 MODBUS MODULE (OPTIONAL)	23
CONNECTORS MIL	24
START VISUALIZATION PAGES <i>(DISPLAY VERSION AND/OR MCP)*</i>	25
MEANING OF FLAGS <i>(DISPLAY VERSION AND/OR MCP)*</i>	27
MEANING OF LED COLORS <i>(DISPLAY VERSION AND/OR MCP)*</i>	27
ACCESS TO THE CONFIGURATION MENU <i>(DISPLAY VERSION AND/OR MCP)*</i>	28
FLOW RATE VISUALIZATION <i>(DISPLAY VERSION AND/OR MCP)*</i>	31
FLOW RATE ALERT <i>(DISPLAY VERSION AND/OR MCP)*</i>	31
QUICK START MENU <i>(DISPLAY VERSION AND/OR MCP)*</i>	31
TRANSMITTER ACCESS CODE <i>(DISPLAY VERSION AND/OR MCP)*</i>	32
FUNCTIONS MENU <i>(DISPLAY VERSION AND/OR MCP)*</i>	35
FUNCTIONS DESCRIPTION <i>(DISPLAY VERSION AND/OR MCP)*</i>	39
MENU 1 - SENSOR <i>(DISPLAY VERSION AND/OR MCP)*</i>	40
MENU 2 - UNITS <i>(DISPLAY VERSION AND/OR MCP)*</i>	43
MENU 3 - SCALE <i>(DISPLAY VERSION AND/OR MCP)*</i>	45


MENU 4 - MEASURE <i>(DISPLAY VERSION AND/OR MCP)*</i>	47
MENU 5 - ALARMS <i>(DISPLAY VERSION AND/OR MCP)*</i>	49
MENU 6 - INPUTS <i>(DISPLAY VERSION AND/OR MCP)*</i>	50
MENU 7 - OUTPUTS <i>(DISPLAY VERSION AND/OR MCP)*</i>	51
MENU 8 - COMMUNICATION <i>(DISPLAY VERSION AND/OR MCP)*</i>	53
MENU 9 - DISPLAY <i>(DISPLAY VERSION AND/OR MCP)*</i>	54
MENU 10 - DATA LOGGER <i>(DISPLAY VERSION AND/OR MCP)*</i>	55
LOGGED DATA EVALUATION <i>(ONLY MCP)*</i>	57
MENU 11 - FUNCTION <i>(DISPLAY VERSION AND/OR MCP)*</i>	62
MENU 12 - DIAGNOSTIC <i>(DISPLAY VERSION AND/OR MCP)*</i>	63
MENU 13 - SYSTEM <i>(DISPLAY VERSION AND/OR MCP)*</i>	66
MENU 14 - FILE <i>(ONLY MCP)*</i>	72
MENU 15 - PROCESS DATA <i>(ONLY MCP)*</i>	73
METER DATA	76
ALARM MESSAGES (CAUSES AND ACTIONS TO BE TAKEN)	78
ERROR CODE TEST SYSTEM OF SENSOR	80
MANUAL REVIEWS	82

(*) Any changes using MCP are not recommended, unless:

- after receiving corresponding training by burkert,
- done by professional,
- agreed by the end user, and done inline with the MCP manual

INTRODUCTION

- These operating instructions and description of device functions are provided as part of the scope of supply.
- They could be modified without prior notice. The improper use, possible tampering of the device or parts of it and substitutions of any components not original, renders the warranty automatically void.
- The flowmeter realizes a measure with liquids of conductivity greater than $5\mu\text{S}/\text{cm}$ in closed conduits, and is composed of a transmitter (described in this manual) and a sensor (refer to the specific manual).
- The transmitter could be coupled directly on the sensor (compact version) or coupled to the sensor by cable supplied with it (remote version).

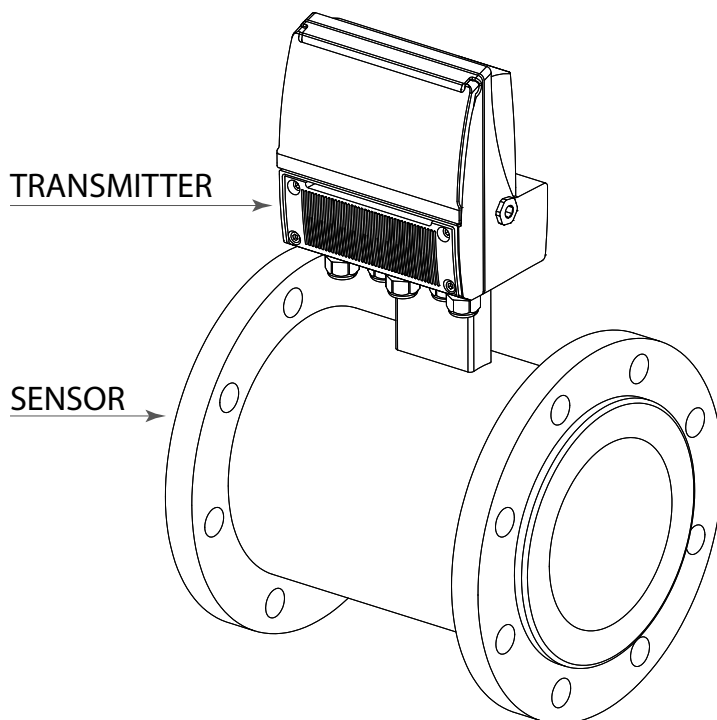

SAFETY INFORMATION

Any use other than described in this manual affects the protection provided by the manufacturer and compromises the safety of people and the entire measuring system and is, therefore, not permitted. The manufacturer is not liable for damaged caused by improper or non-designated use.

- Transport the measuring device to the measuring point in the original packaging. Do not remove covers or caps before starting installation. In case of cartons packaging it is possible to place one above the other but no more than three cartons. In case of wooden packaging do not place one above the other.
- Disposal of this product or parts of it must be carried out according to the local public or private waste collection service regulations.
- The transmitter must only be installed, connected and maintained by qualified and authorized specialists (e.g. electrical technicians) in full compliance with the instructions in this Operating Instruction, the applicable norms, legal regulations and certificates (depending on the application).

- The specialists must have read and understood these Operating Instructions and must follow the instructions it contains. The Operating Instructions provide detailed information about the transmitter. If you are unclear on anything in these Operating Instructions, you must call the Bürkert service department.
- The transmitter should only be installed after have verified technical data provided in these operating instructions and on the data plate.
- Specialists must take care during installation and use personal protective equipment as provided by any related security plan or risk assessment.
- Never mount or wire the transmitter while it is connected to the power supply and avoid any liquid contact with the device's internal components. To connect remove the terminals from the terminal block.
- Each part of the instrument must be examined or supplied exclusively by the manufacturer or his representative
- Before connecting the power supply check the functionality of the safety equipment.
- Repairs may only be performed if a genuine spare parts kit is available and this repair work is expressly permitted.
- For the cleaning of the device use only a damp cloth and for the maintenance/repairs contact the service center.
- If the instrument is used in a another way than the one specified by the manufacturer, the protection provided by the device may be compromised.

Before starting up the equipment please verify the following:

- Power supply voltage must correspond to that specified on the data plate
- Electric connections must be completed as described
- Ground (earth) connections must be completed as specified

Verify periodically (every 3-4 months):

- The power supply cables integrity, wiring and other connected electrical parts
- The transmitter housing integrity
- The suitable tightness of the sealing elements
- The front panel integrity (display and keyboard)
- The mechanical fixing of the transmitter to the pipe or wall stand

SAFETY CONVENTION



DANGER ELECTRIC
SHOCK



WARNING



PRECAUTIONS

TECHNICAL CHARACTERISTICS

Electrical Characteristic



Converter classification: class I,

IP67 (where: 6 = totally protected against dust, 7 = Protected against the effects of temporary immersion) /

IP68 (where: 6 = totally protected against dust, 8 = continuous immersion 1.5 m; 1 h)

for aluminum and PA6 housing, installation category (overvoltage) II, rated pollution degree 2.

Power supply versions	Power supply voltage	Power supply frequency	Min Power	Max power
HV	100-240V~	45-66HZ	1,5 W (Sensor only)	12 W (all Loads)
LV	24-36V ---	//		
	24-36V~	45-66HZ		
LLV	12-48V ---	//		

- Voltage variations must not exceed $\pm 10\%$ of the nominal one.
- Input/output insulated
- The output 4-20mA (optional) is electrically connected to the ON/OFF outputs and the output power supply (24V ---).
- Version LV/LLV : inrush current < 20A
Version HV : inrush current < 25A

Note: The devices powered at 24-36 V and 12-48 V must only be powered with power supplies compliant with the IEC61010 standard

Environmental Use Conditions



The transmitter can be installed internally or externally

Altitude: until 4000m

Humidity range: 0-100%

AMBIENT TEMPERATURE				
	Aluminium		Reinf. Nylon	
	Min*	Max	Min*	Max
°C	-20	+ 60	-10	+ 50
°F	-4	+140	+14	+122



ATTENTION

The battery will not be charged outside the below limits:

T board SE58 M < 0 °C

T board SE58 M > 50 °C


If the transmitter is supplied in compact version (transmitter over the sensor), consider the ambient temperatures more restrictive, otherwise refer to the relevant manuals.

* For discontinuous use, a thermostat heat source installation may be necessary.

Data Plate

The device label contain the following information:

burkert		
Transmitter model	Type SE58 M (B0A1C2B1A4A0)	Min-Max supply voltage range-supply voltage type-max. power consumption
Transmitter serial number	S/N ANZ000001	Sensor serial number
Identification code	ID XXXXXX	
Maximum ambient operation temperature	Power 100-240VAC 5VA 44-66 Hz	
	MaxTa 50°C S/N-S 04Z000002	
	CE Y 21 MADE IN ITALY	

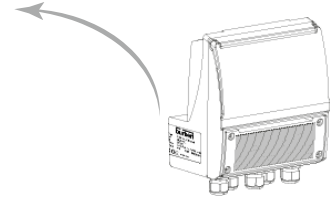

Maintenance





ATTENTION

In case of the maintenance involving the change of SE58 transmitter or sensor, an additional measurement deviation can occur.



To ensure the original accuracy announced in the datasheet, a flow calibration of the full instrument must be performed by Burkert.

Dimensions


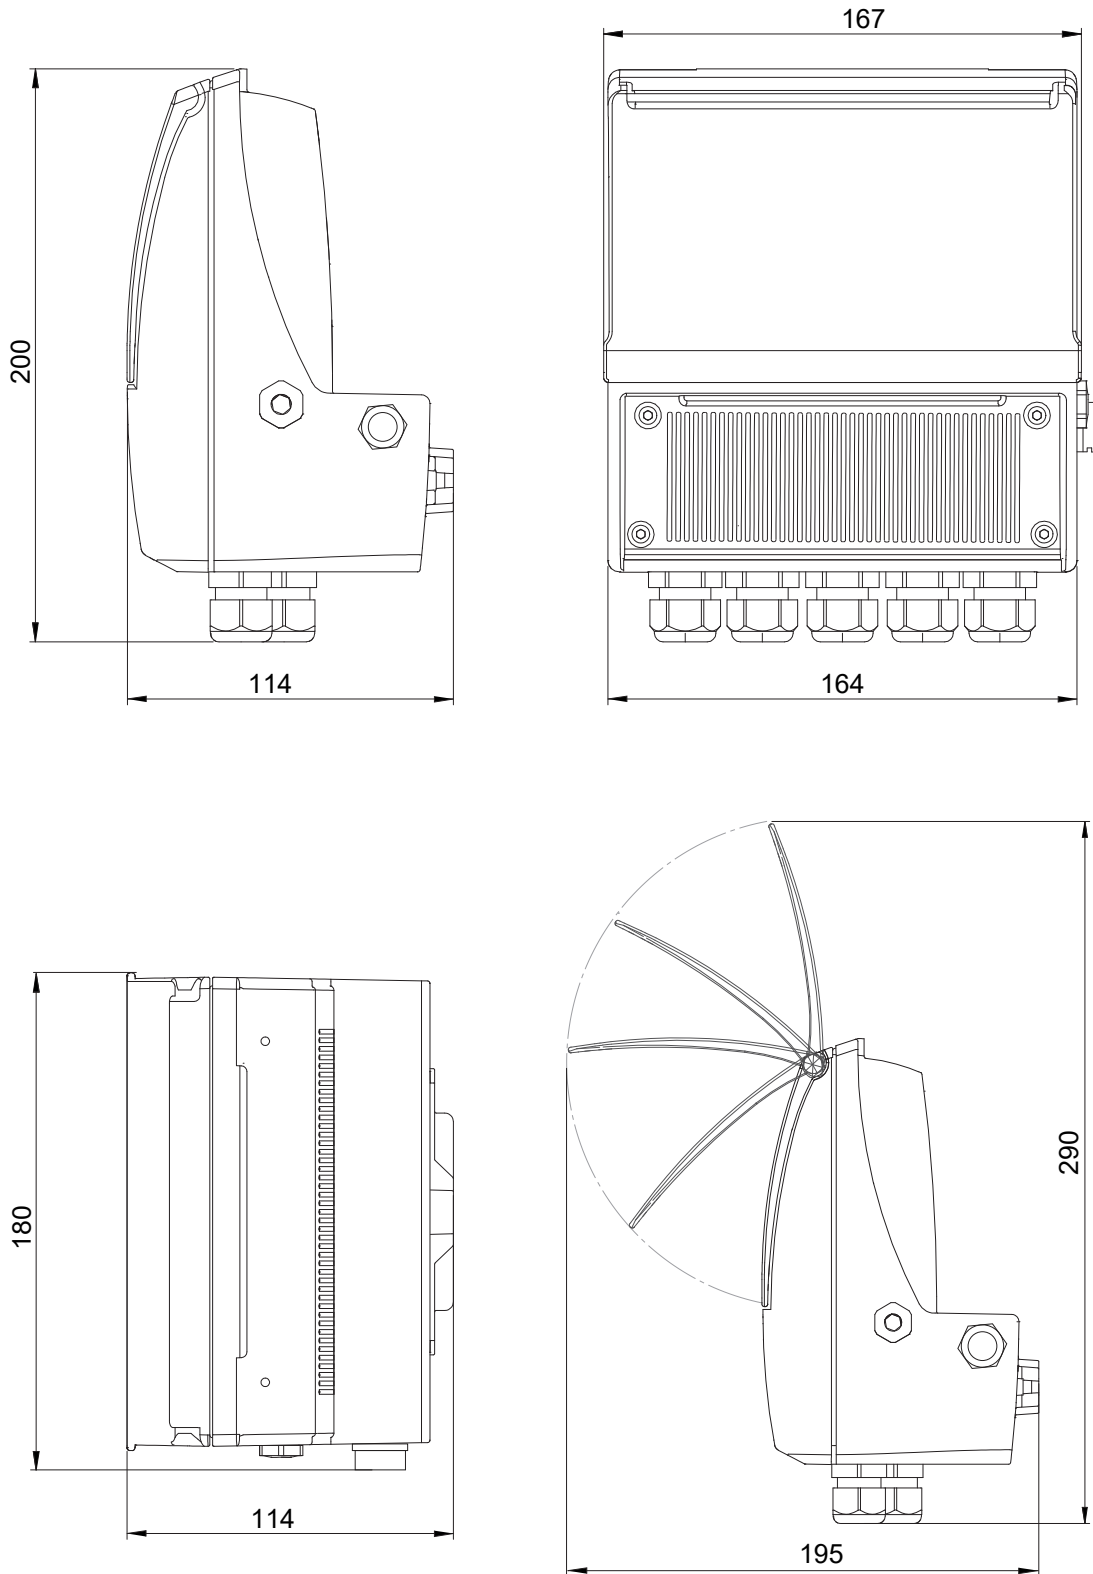





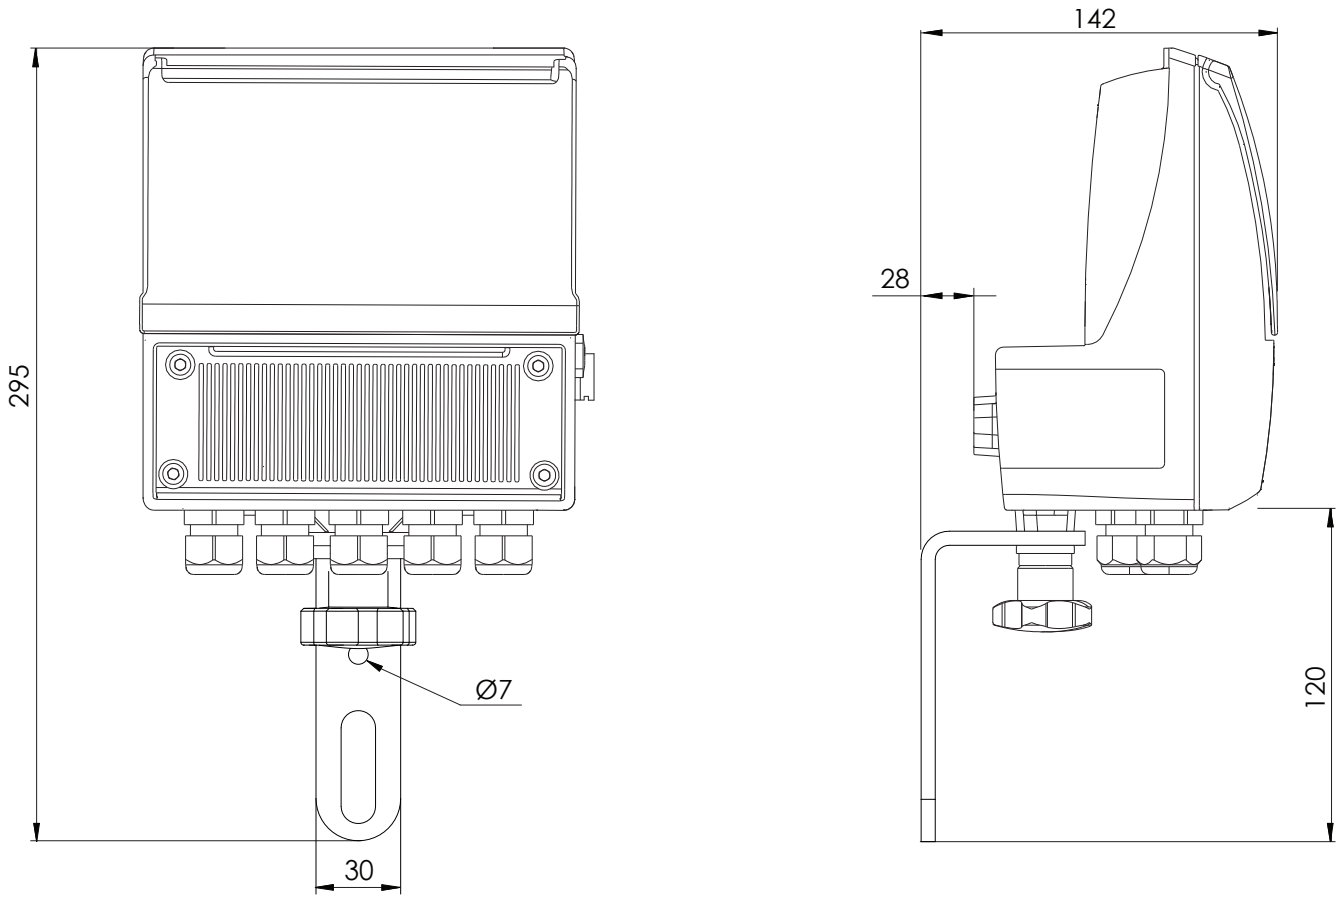
Remote version

Horizontal version



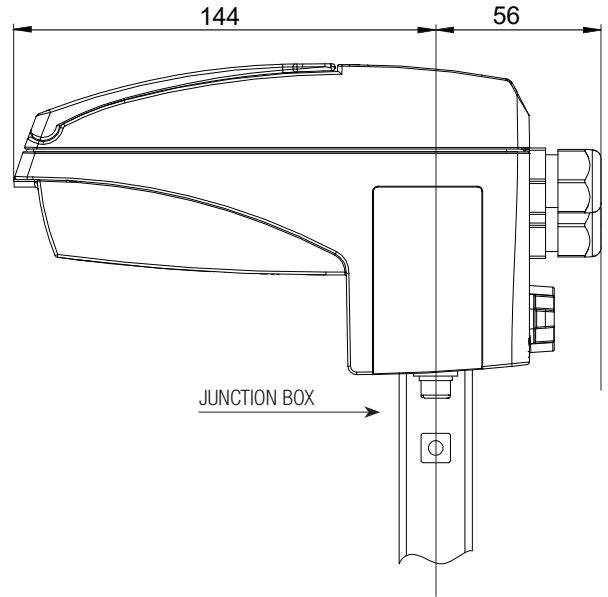
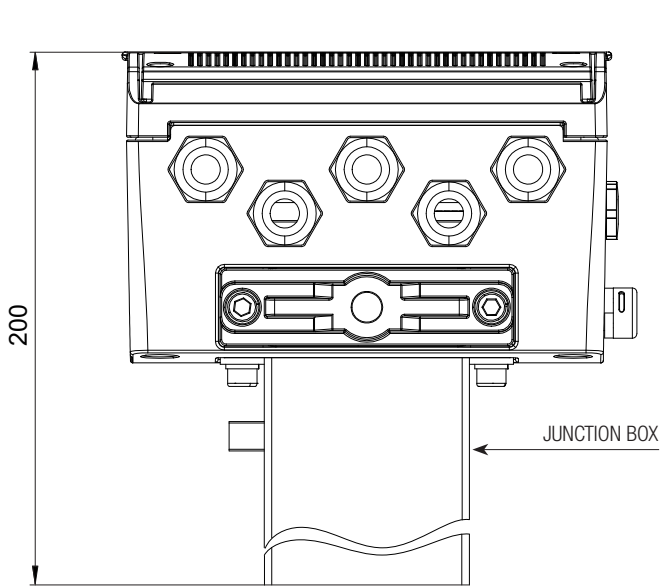


Vertical version

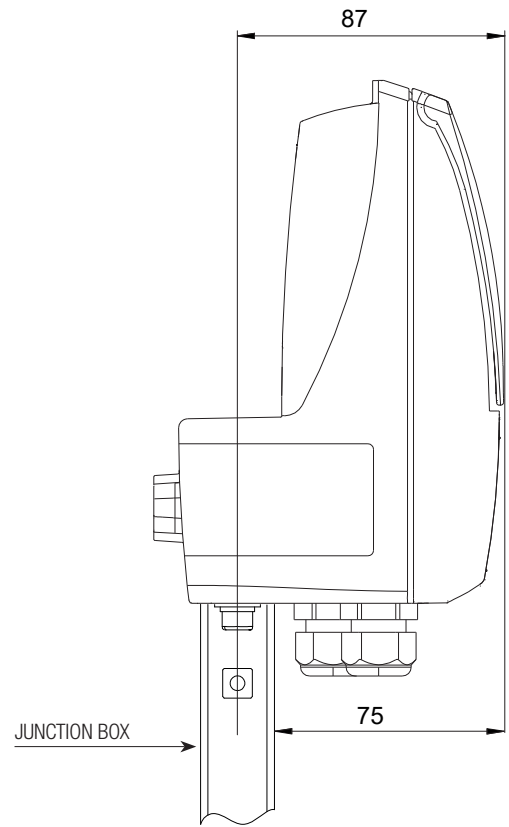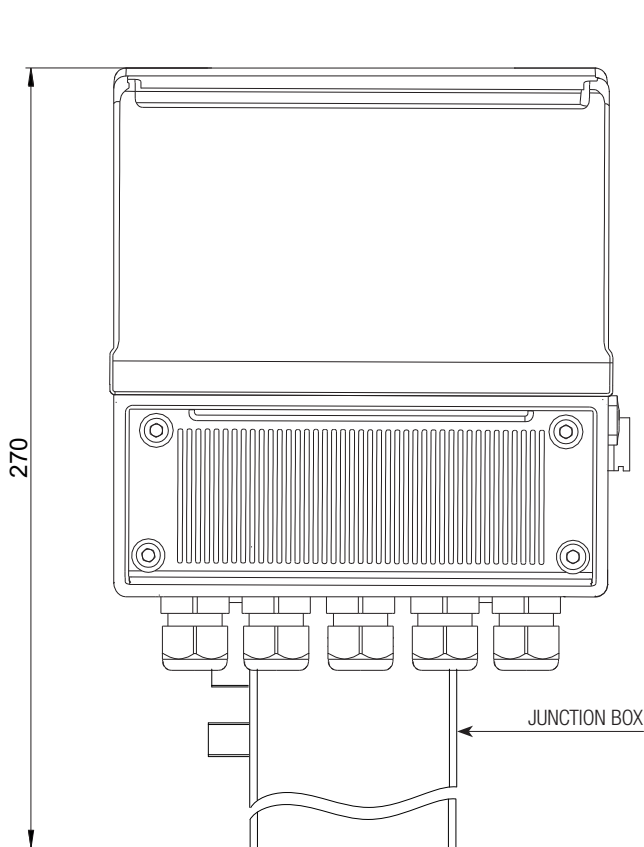

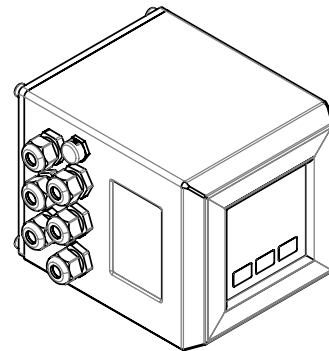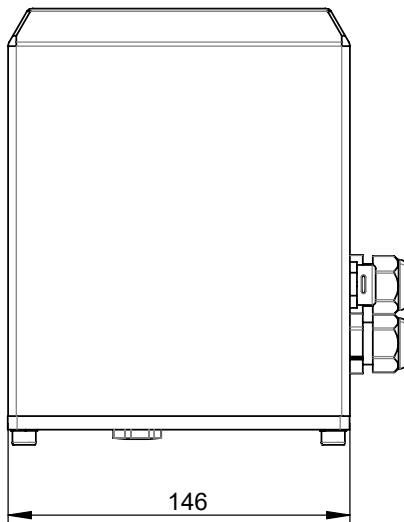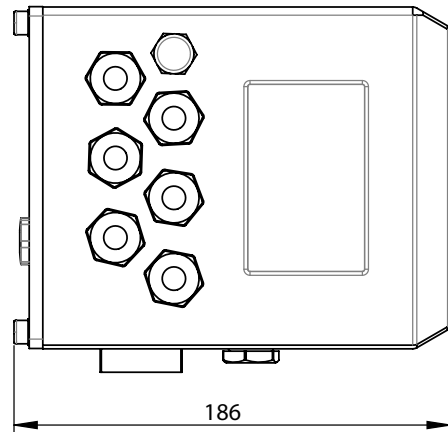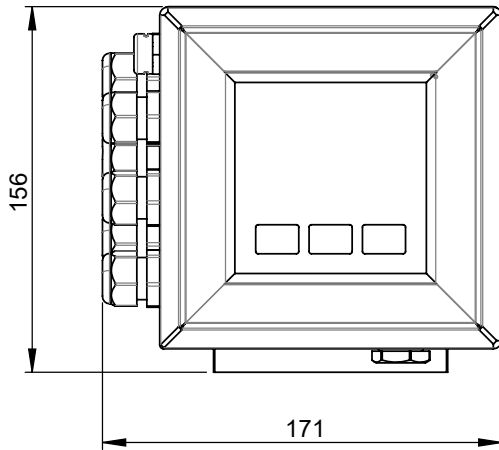DIMENSIONS (STAINLESS STEEL VERSION)**Compact Version**


Separate Version

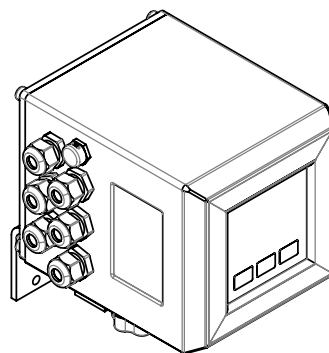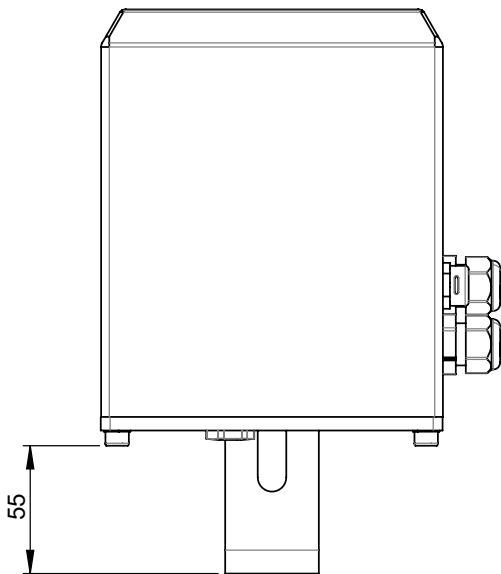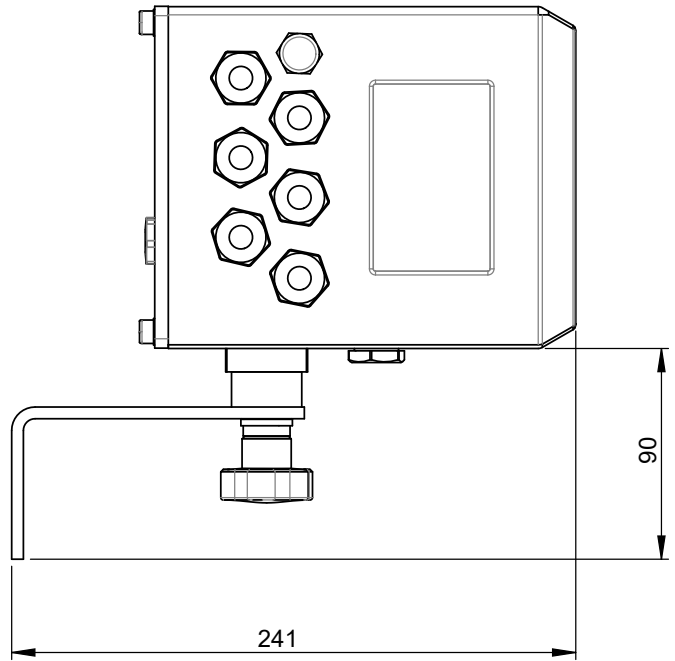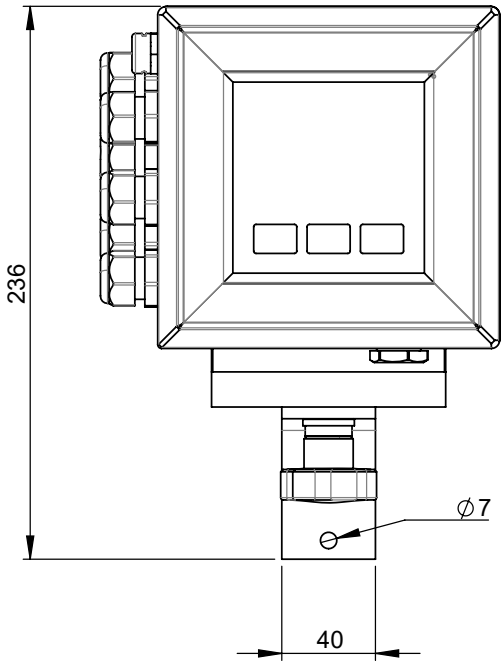

TORQUES


To guarantee the housing's IP degree the following torques are required:

HOUSING MATERIAL	Housing screws (1)	Screws Terminal block cover (2)	Screws for display frame	PCB Screws	Version Cap (3)	Cable Glands (4)	Cap USB-B (5)
ALUMINIUM HOUSING	6 Nm	5.5 Nm	3 Nm	0.8 Nm	8 Nm	4 Nm	4 Nm
PLASTIC HOUSING	2 Nm	2 Nm	2.5 Nm	0.8 Nm	7 Nm	4 Nm	4 Nm

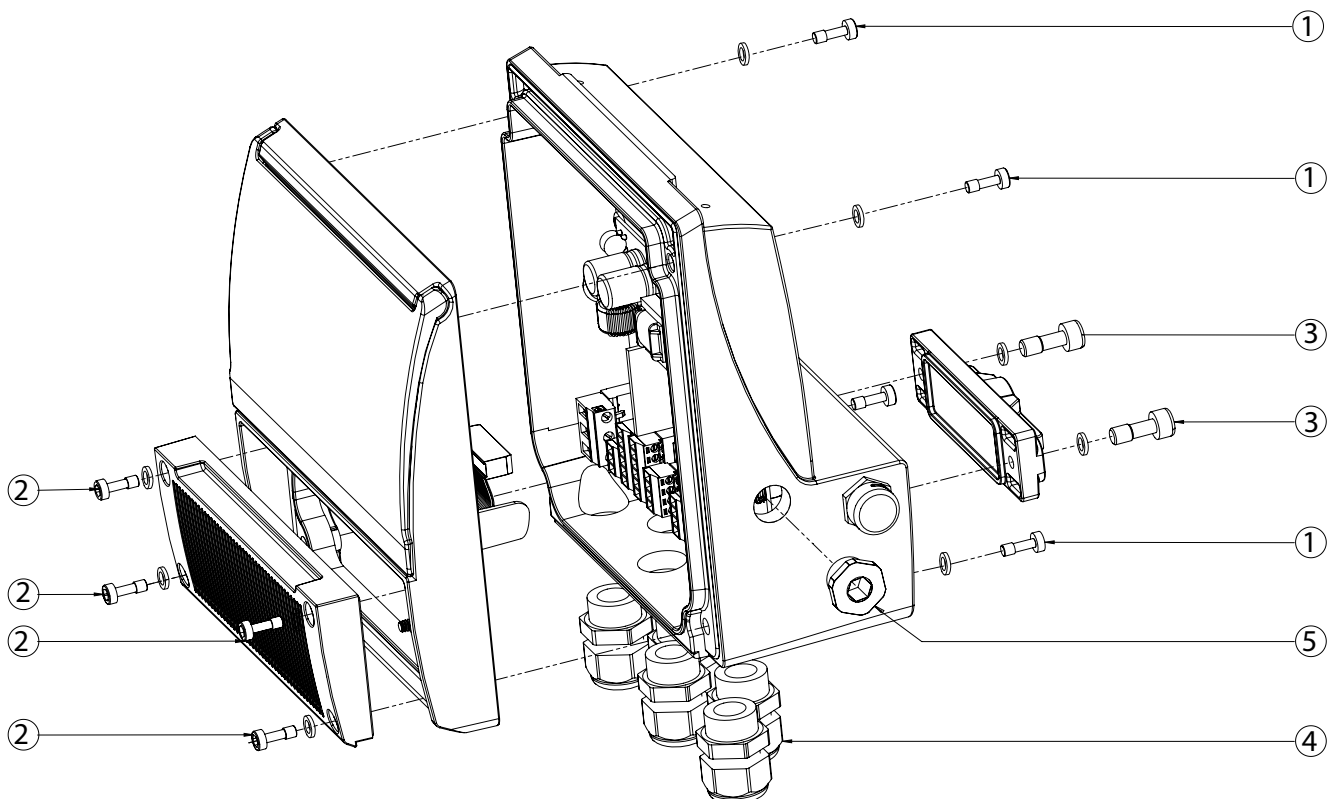

Stainless steel housing


HOUSING MATERIAL	Housing screws (1)	PCB Screws (2)	Cable Glands (4)	Cap USB-B (5)
Stainless steel HOUSING	2.5 Nm	0.8 Nm	4 Nm	2.5 Nm

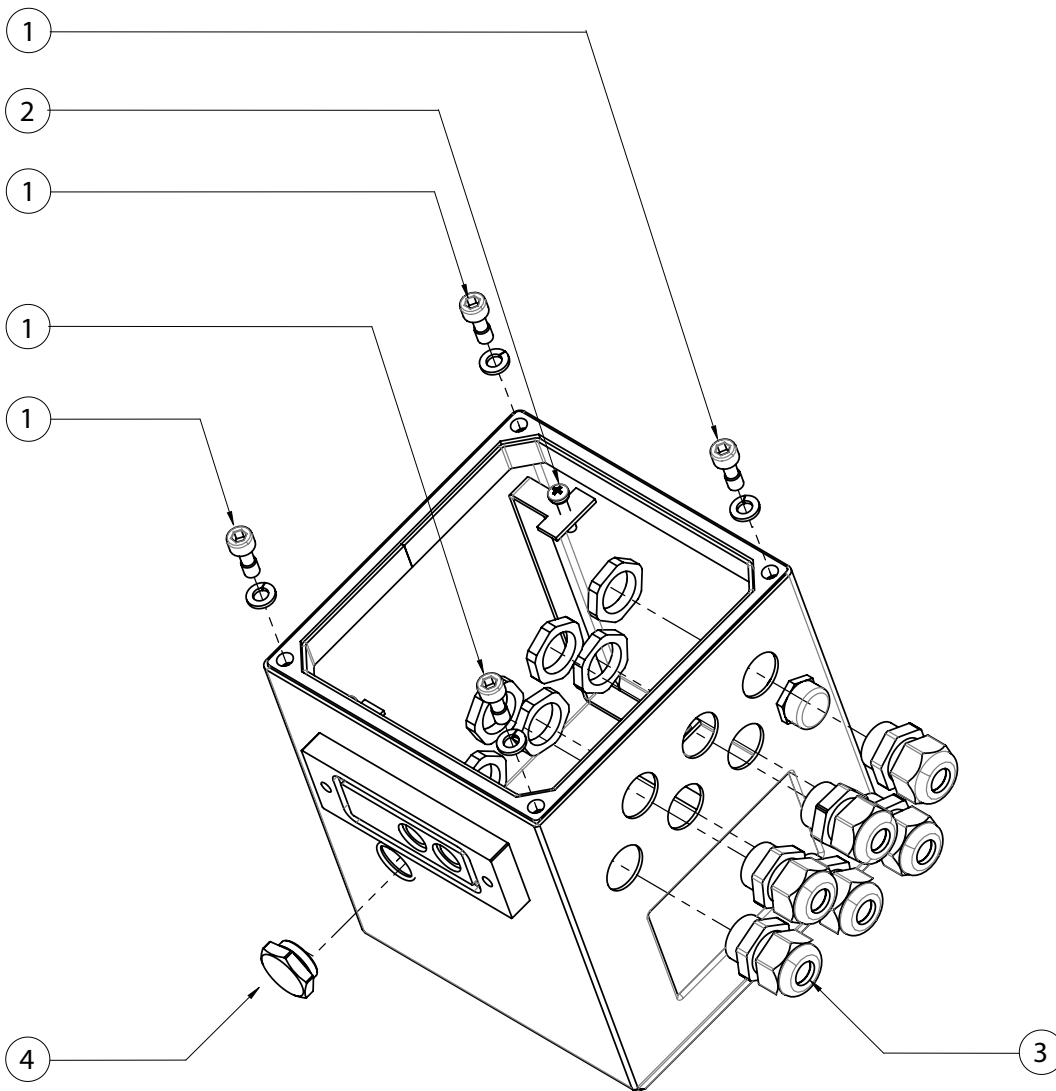


MAN 1000495957 EN Version: B Status: RL (released | freigegeben) printed: 01.04.2022

SE58 M CONSTRUCTION


TERMINAL BLOCK COVER

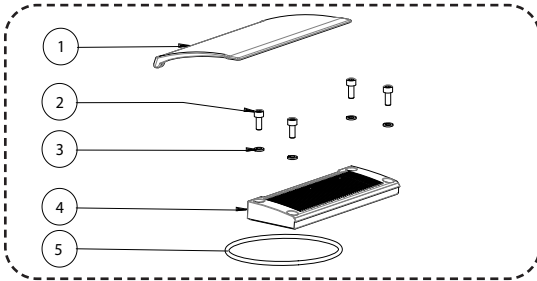


MAIN HOUSING COVER

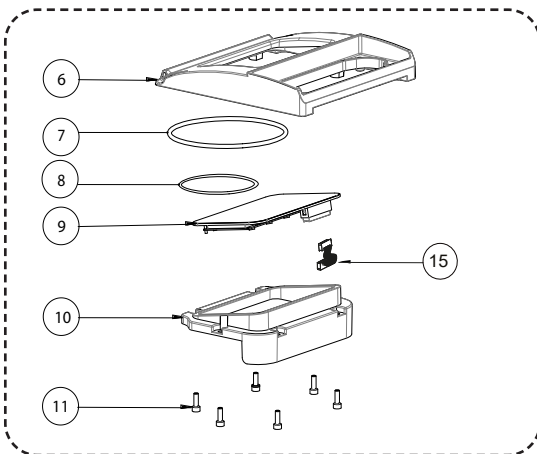

PCB SE58 M

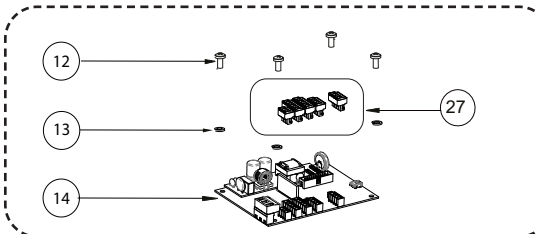


MAIN HOUSING

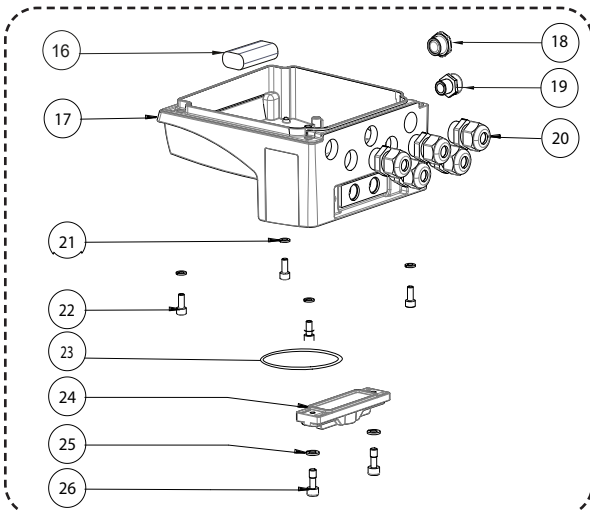

POS.	DESCRIPTION	
	PA6 VERSION	ALLUMINIUM VERSION
1	PROTECTION COVER	
2	VITE M4x12	VITE M5x12
3	GROWER Ø4	GROWER Ø5
4	TERMINAL COVER	TERMINAL COVER
5	O-RING-4400	
6	HOUSING COVER	HOUSING COVER
7	O-RING-4700 (HOUSING COVER)	
8	O-RING-117x3 (DISPLAY)	
9	DISPLAY	
10	FIXING DISPLAY FRAME (MATERIAL PA06)	
11	SELF-TAPPING SCREW 4x10	TRILOBO SCREW 4x10
12	SELF-TAPPING SCREW 4x10	TRILOBO SCREW 4x10
13	GROWER Ø4	SPRING WASHER Ø4
14	PCB SE58 M	
15	FLAT CABLE	
16	LITHIUM BATTERY	
17	PA6 MAIN HOUSING	ALUMINIUM MAIN HOUSING
18	PG9 CAP	
19	ANTICONDESE CAP	
20	PG11 CABLE GLAND CABLE DIAMETER: Ø5-Ø10mm	
21	GROWER Ø4	SPRING WASHER Ø5
22	SCREW M4x12	SCREW M5x12
23	O-RING-155	
24	VERSION CAP (MATERIAL PA06)	
25	GROWER Ø6	
26	SCREW M6x16	
27	TERMINAL BLOCK SOLID WIRE: 26-16 AWG / 0.129-1.31 mm ² STRANDED WIRE: 26-16 AWG / 0.129-1.31 mm ² TORQUE: 3.0 Lb.In / 0.34 Nm	

SE58 M CONSTRUCTION (STAINLESS STEEL VERSION)


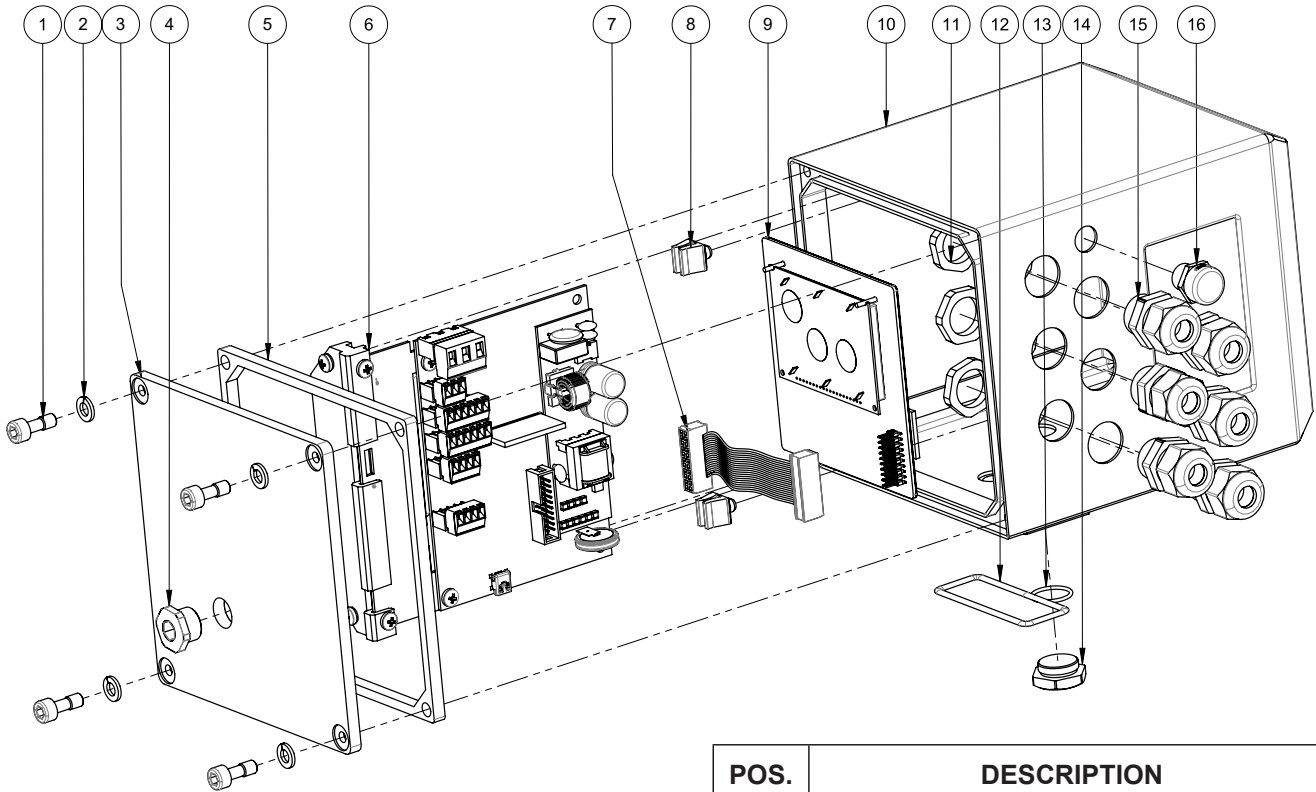


POS.	DESCRIPTION
1	SCREW M6X16
2	GROWER Ø 6
3	POLISHED COVER
4	PG9 CAP IP68
5	GASKET FOR Stainless steel HOUSING
6	BOARD FRAME M3C
7	FLAT CABLE
8	BOARD FIXING CLIPS
9	DISPLAY/BLIND
10	POLISHED Stainless steel HOUSING
11	PG11 NUT
12	FLAT GASKET O-RING 155
13	O-RING ORM 0160-15 Ø16X1.5
14	Stainless steel CAP M18X0.75
15	PG11 CABLE GLANDS
16	ANTICONDENSATION CAP

INTERNAL LAYOUT

Internal Transmitter Views

Remove the main housing cover by removing the 4 screws as shown here below.

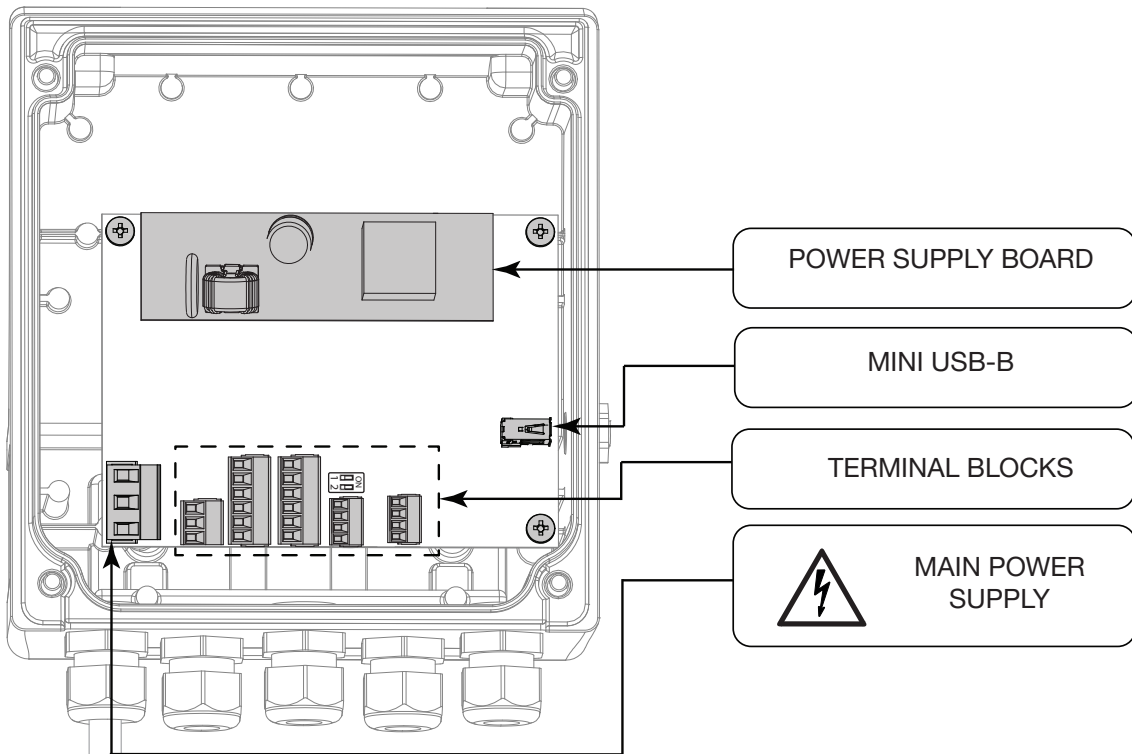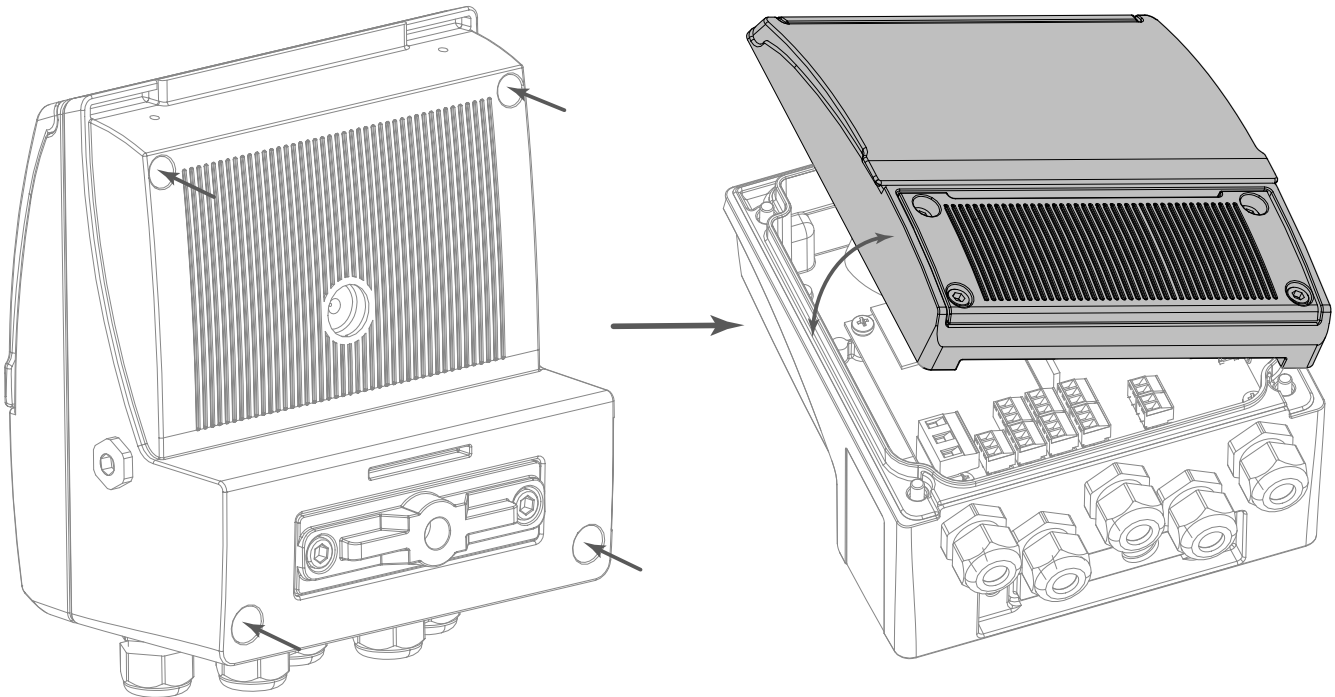


POWER SUPPLY CABLE

ELECTRICAL CONNECTION AND GROUNDING INSTRUCTIONS






Always ensure that the transmitter and the sensor are grounded (earthed) correctly. The grounding of the sensor and transmitter must ensure that the device and liquid are equipotential.

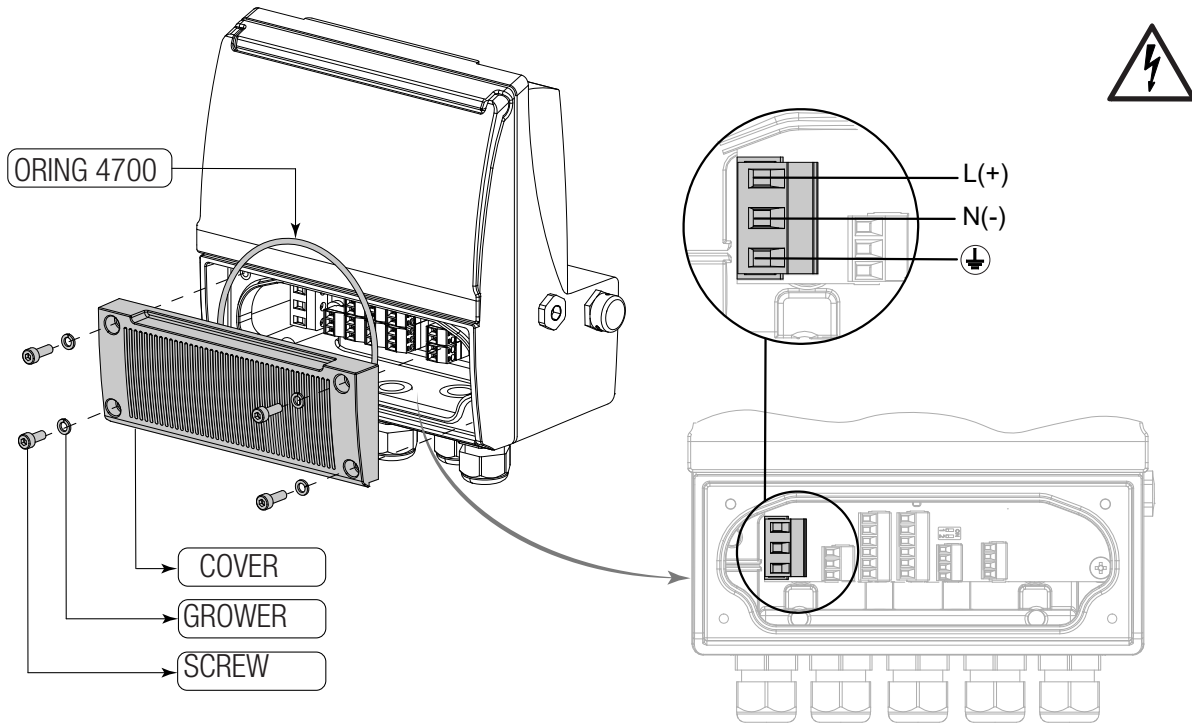


- Before connecting the power supply, verify that the main voltage is within the limits indicated on data plate.
- For the connections use only approved conductor, with fire-proof properties, whose section varies from 0.25 mm² to 1.50 mm², based on distance/power; additionally fix the power supply wires with an additional fastening system located close to the terminal.
- The power supply line must be equipped with an external protection for overload current (fuse or automatic line breaker).
- Provide in close proximity of the transmitter a magnetothermic circuit breaker easily accessible for the operator and clearly identified; whose symbols must conform to the electrical safety and local electrical requirements.
- Ensure that the component complies with the requirements of the standard for electrical safety distance.
- Check chemical compatibility of materials used in the connection security systems in order to minimize electrochemical corrosion. With aluminum housing should avoid direct contact between the ground connection cable and the aluminum housing. It is therefore recommended to connect the safety ground cable, by placing it between the washer and the metal bracket on the related terminal or use an eyelet terminal crimped on the ground protection cable.
- Sensor's hardwired inputs and outputs are connected to the transmitter through terminal blocks located inside the transmitter.
- To locate the terminal block loosen the 4 screws on the terminal block cover. When the front cover is lifted, the terminal block is visible. The terminal block is the hardwire connection of the transmitter to external equipment, including the sensor.
- The following pages give informations on the terminal block numbering, and the respective connecting of the sensor cables, and inputs/outputs.
- The mains power cables must have adequate values for the maximum current of the appliance, and the cable used must house the standards of the IEC 60227 standard or the IEC 60245 standard.

INTERNAL LITHIUM BATTERY

Aluminium and PA6 version

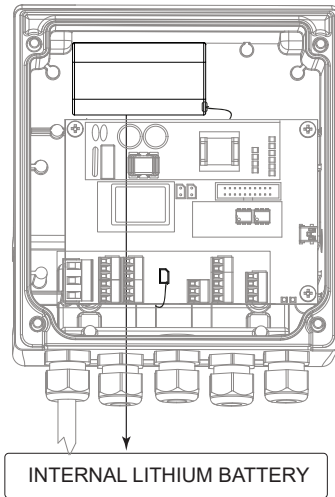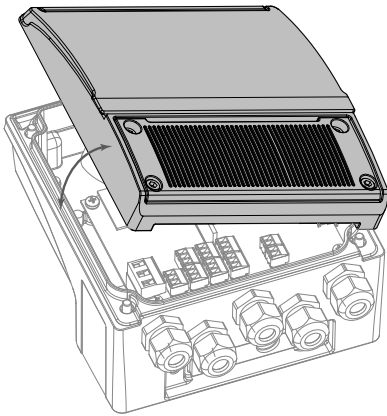

Stainless steel version

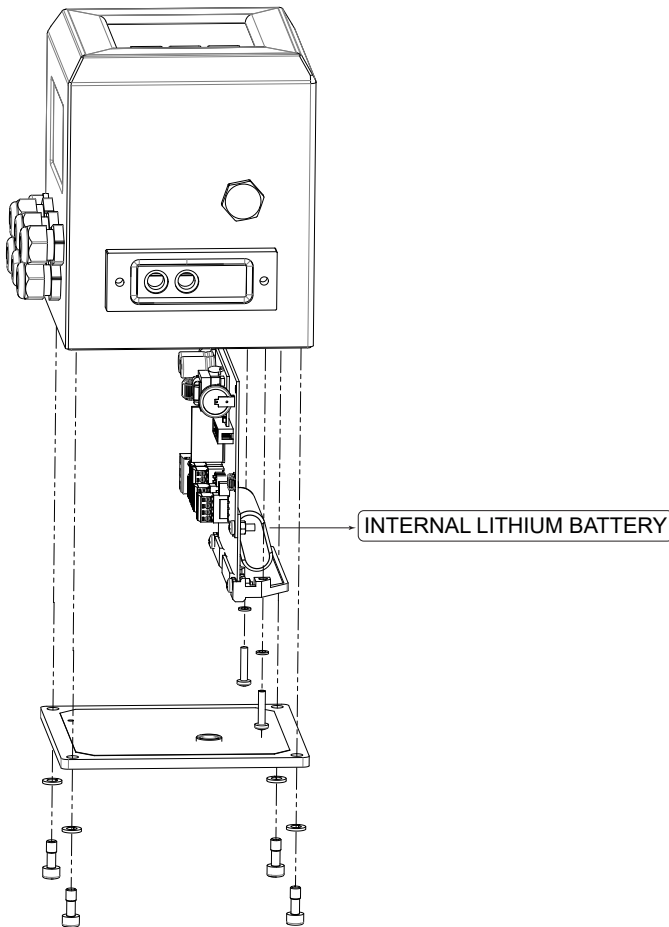

MAN 1000495957 EN Version: B Status: RL (released | freigegeben) printed: 01.04.2022

ATTENTION!

- The internal lithium battery is rechargeable and should never be disconnected from the transmitter card when it is powered by the mains voltage. If this operation should be carried out it could irreparably damage the transmitter board.
- The internal lithium battery is recharged only when the transmitter is connected to the mains supply (LV, LLV, HV), battery charging condition, and not with the USB connection.
- During charging, the battery symbol appears on the MCP display and flashes blue; see “MEANING OF FLAGS” page 27 (the colors of the symbols can only be viewed in the virtual display of the MCP interface)
- When the battery charge falls below the minimum potential, battery low, the fixed red battery symbol appears; see “MEANING OF FLAGS” page 27 (the symbol colors can only be displayed in the virtual display of the MCP interface). Furthermore, in this charging condition below the minimum potential, the measurement does not start when the USB cable is connected.
- The thresholds that identify the condition of Battery low and battery charging are established by the system according to the use and settings assigned and therefore there is no fixed value..
- The two Battery low and battery charging icons can both be present as each one indicates a different condition.

GENERAL OPERATING NOTES


- If the mains voltage is disconnected from the transmitter with HV power supply, the flashing blue icon indicating the charging status can remain active for tens of seconds. This is due to the energy stored in the HV power supply and in the capacities of the circuit that discharge slowly.
- The battery voltage during charging does not rise immediately but gradually. This is related to the parameters set in the transmitter and detected by the controller chip.
- When the battery is physically disconnected the potential measured by the system is not true because the charging circuit checks the battery status by emitting impulses. These load the capacities in the circuit and the average value detected is not to be considered a reliable real value.
- The MCP command [SBCHS] indicates the percentage of charge and is not linear with respect to the battery voltage, however approximately it reads 0% with a voltage equal to about 3.2 V, while 100% occurs with about 4.1 V. These values are influenced by the temperature and the total operating time that worked the battery.

ELECTRICAL CONNECTION TRANSMITTER- SENSOR



Sudden movements of the electrodes cable could introduce noise.


SH = SHIELD OF CABLE internally connected to ground.

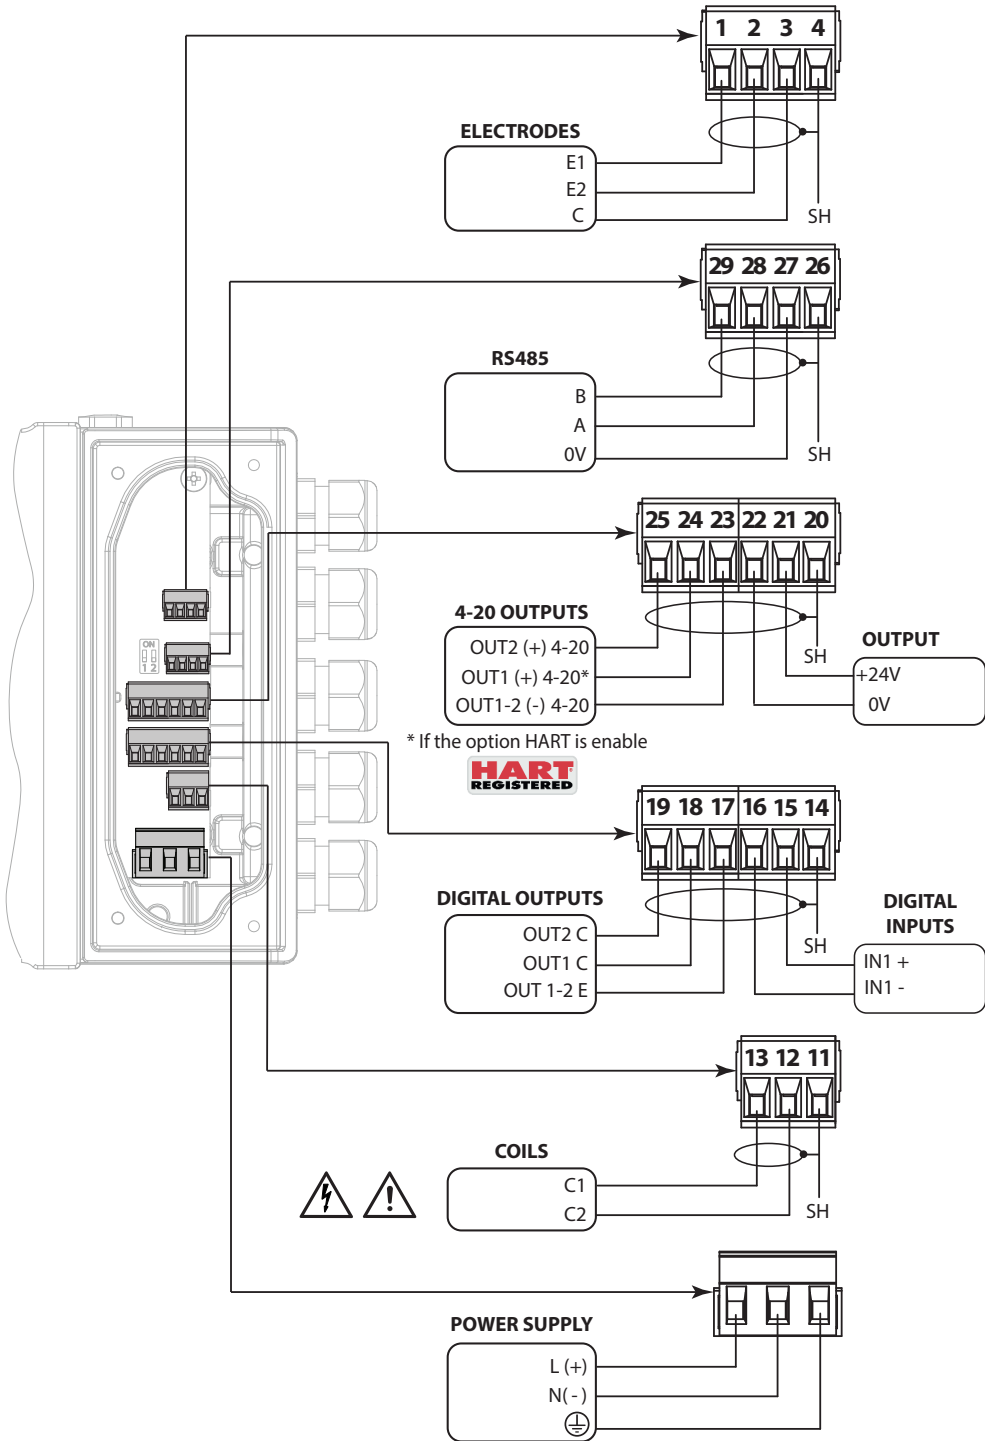


MAN 1000495957 EN Version: B Status: RL (released | freigegeben) printed: 01.04.2022

DIGITAL INPUT ON/OFF OPERATION


EXTERNAL POWER SUPPLY

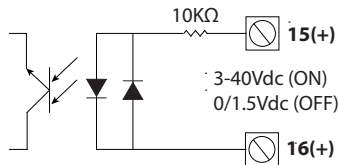

INTERNAL POWER SUPPLY

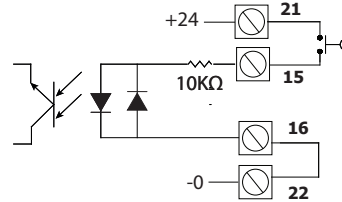


RESET TOTALIZERS

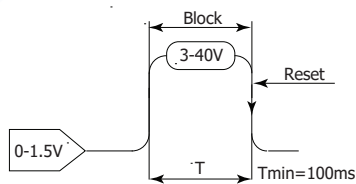

Necessary conditions for enabling the function

- POS. 6.1 see page 36 (T+; total positive set on)
- POS. 6.2 see page 36 (P+; partial positive set on)
- POS. 6.3 see page 36 (T-; total negative set on)
- POS. 6.4 see page 36 (P-; partial negative set on)


BLOCK TOTALIZERS

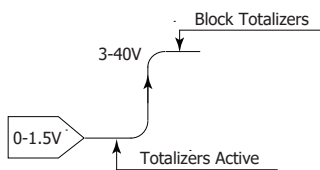

Necessary conditions for enabling the function

- POS. 6.5 see page 36 (Totalizer counting lock command set on)


RANGE CHANGE

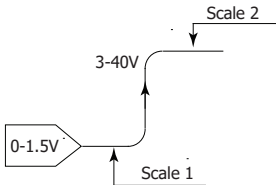

Necessary conditions for enabling the function

- POS. 6.8 see page 36 (Range change set on)

MEASURE LOCK

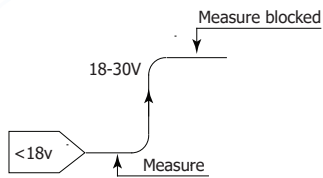

Necessary conditions for enabling the function

- POS. 6.6 see page 36 (Totalizer counting lock command set on)




MUST BE
 $T > T_{min}$

Measure freq.	T MIN
50HZ	20ms
10HZ	100ms
5HZ	200ms
2HZ	500ms


OUTPUTS WIRING

Digital outputs

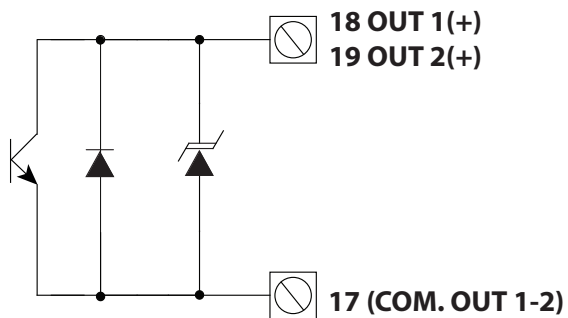

- Opto-insulated output with floating collector and emitter terminals freely connectable
- Maximum switching voltage: 30V ---
- Maximum switching current: 100mA @ 25 °C
- Maximum saturation voltage between collector and emitter @100mA: 1.2V ---
- Maximum switching frequency (load on the collector or emitter, $R_L=470\ \Omega$, $V_{OUT}=24V$ ---): 1250Hz
- Maximum reverse current bearable on the input during and accidental polarity reversion (VEC): 100mA
- Insulation from other secondary circuits: 500V ---


Analog outputs

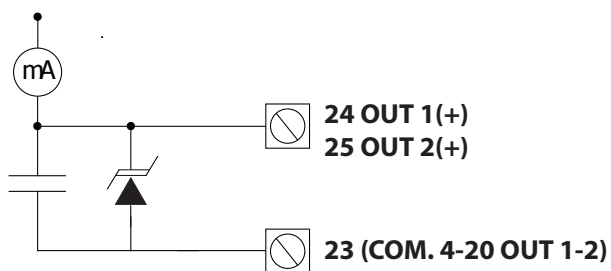

- Opto-insulated output
- Maximum load: 1000 Ω
- Maximum voltage without load: 27V ---
- Refresh frequency is the same of the sample frequency of the connected sensor
- Protected against persistent over voltages to maximum 30V ---


RS485 MODBUS MODULE (OPTIONAL)

Positioning to 'ON' the termination switches 1 and 2, a 120Ω resistance is activated in the RS485 circuit (see terminal block).

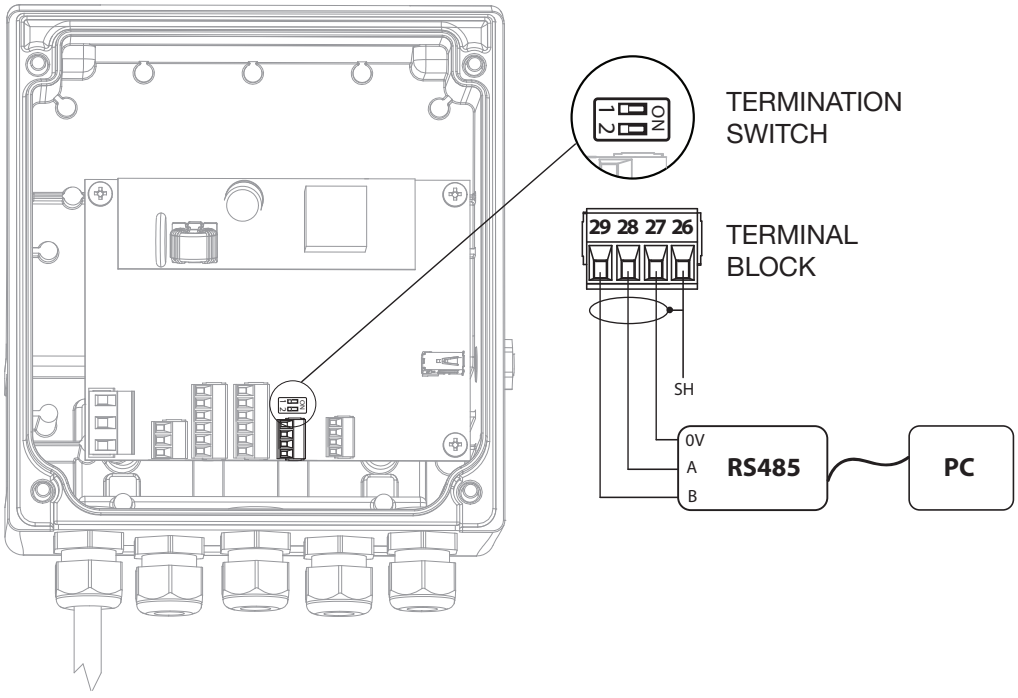

CONNECTORS MIL


The following are the links of the MIL connectors IP68

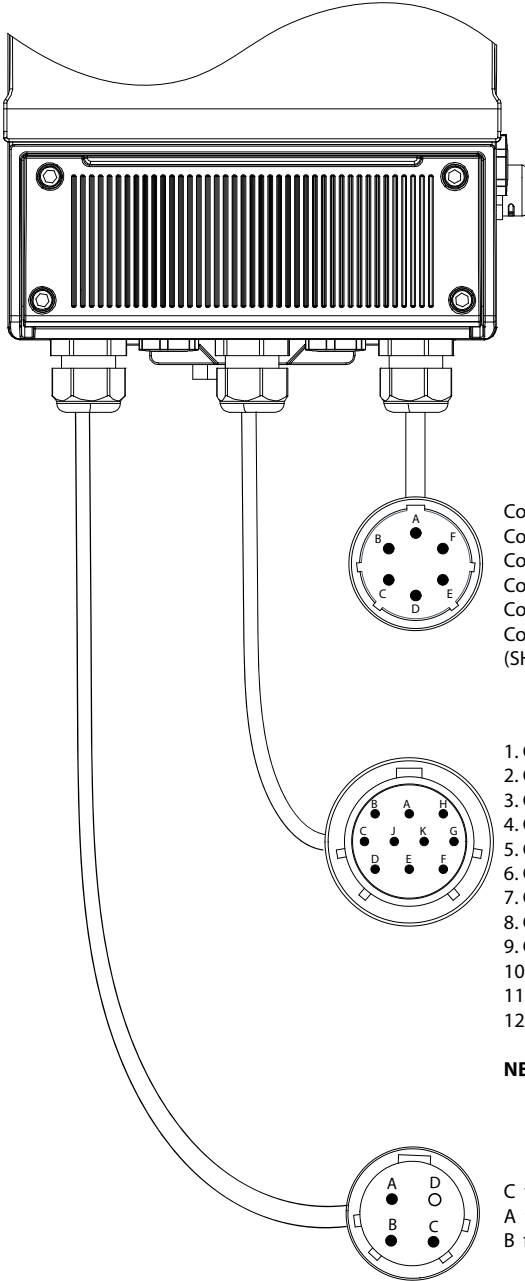

SENSOR SIGNALS

- Contact A from terminal 1 of the transmitter (electrode 1)
- Contact F from terminal 2 of the transmitter (electrode 2)
- Contact A from terminal 3 of the transmitter (COM. Elec.)
- Contact B from terminal 13 of the transmitter (COIL 1)
- Contact C from terminal 12 of the transmitter (COIL 2)
- Contact D from terminal 4 and 11 of transmitter (SHIELD electrodes - COILS)


Connector
6 poles



INPUT/OUTPUT

1. Contact B from terminal 24 of the transmitter (Out1 4-20 +)
2. Contact A from terminal 25 of the transmitter (Out2 4-20 +)
3. Contact H from terminal 23 of the transmitter (Out1-2 4-20 -)
4. Contact C from terminal 21 of the transmitter (+ 24V)
5. Contact J from terminal 22 of the transmitter (0V)
6. Contact K from terminal 15 of the inverter (IN1 +)
7. Contact G from terminal 16 of the transmitter (IN1 -)
8. Contact D from terminal 19 of the transmitter (C Out2)
9. Contact E from terminal 18 of the transmitter (Out1 C)
10. Contact F from terminal 17 of the transmitter (Out1-2 E)
11. Contact C from terminal 28 of the transmitter (RS485 A)
12. Contact J from terminal 29 of the transmitter (RS485 B)

Connector
10 poles




NB: the connections 4 and 5 exclude the use connections 11 and 12.

POWER SUPPLY

- C from terminal L power transmitter (+ dc)
- A from terminal N power transmitter (-dc)
- B from terminal GROUND Power transmitter

Connector
4 poles



NOTE: Military Connector 6 poles for sensor transmitter only provided in the remote version of the transmitter.


START VISUALIZATION PAGES




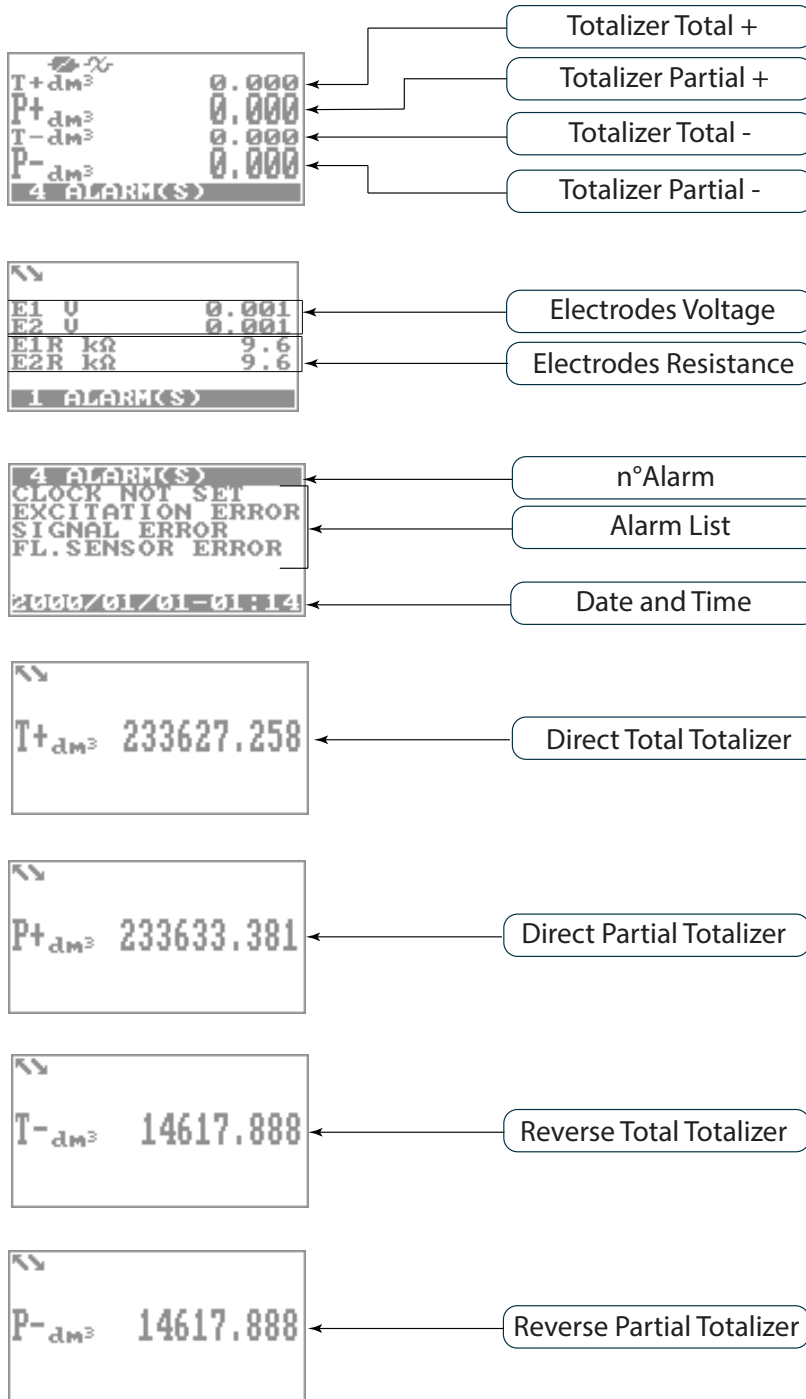
The direct exposure of the transmitter to the solar rays, could damage the liquid crystal display. The visualization pages can be changed according to device's setup.



Push to change visualization

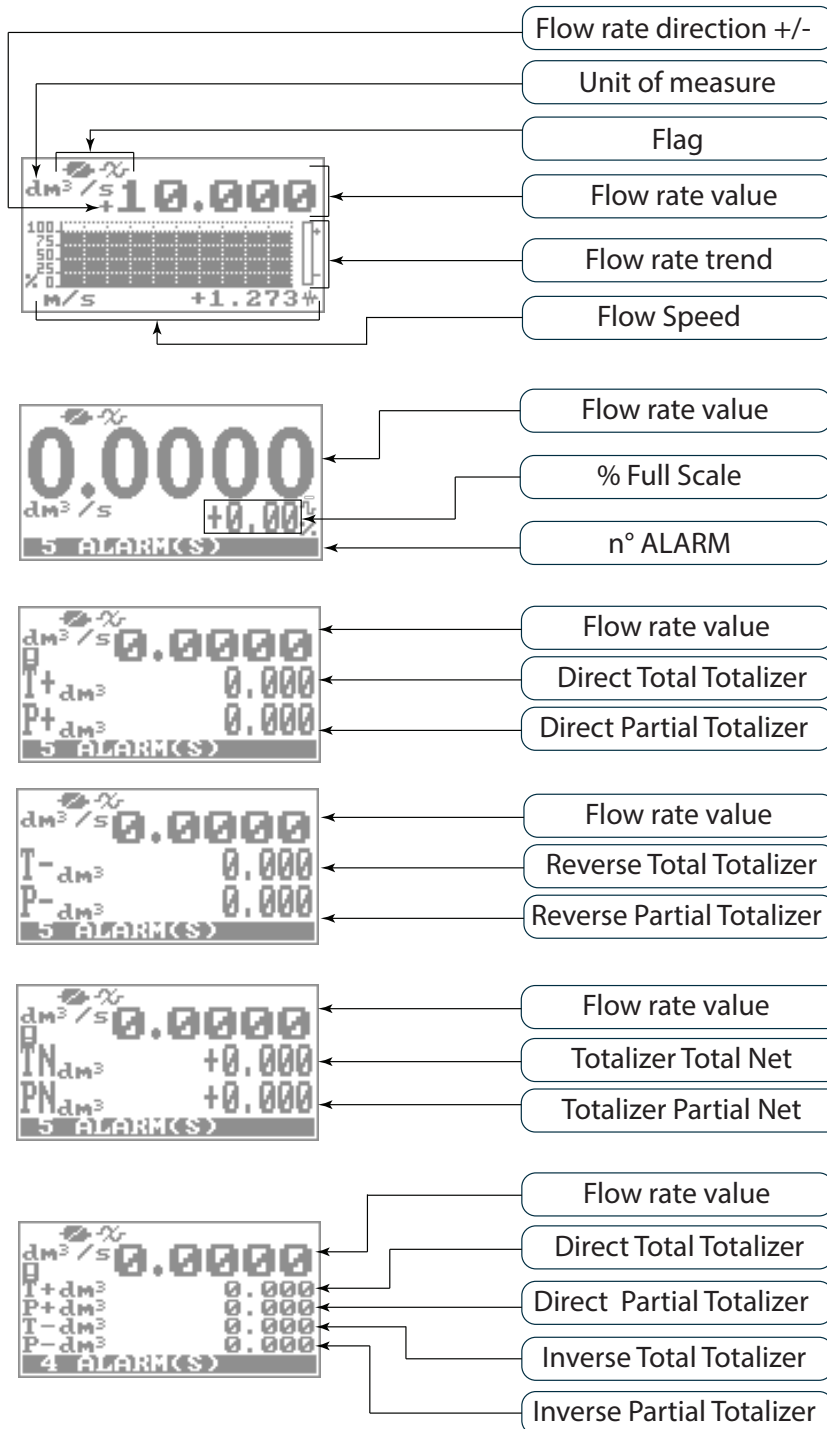


 Push to change visualization



MEANING OF FLAGS

FLAG	DESCRIPTION	FLAG	DESCRIPTION
	EMPTY PIPE		MIN FLOW ALARM
	FILE UPLOAD		MAX FLOW ALARM
	FILE DOWNLOAD		VIDEO TERMINAL CONNECTED
	BATTERY RECHARGE (FLASHING) LOW BATTERY (FIXED)		FLOW RATE OVERFLOW
	FLOW RATE SIMULATION (FLASHING)		PULSE 1 OVERFLOW
	CALIBRATION (FLASHING)		PULSE 2 OVERFLOW
	GENERIC ALARM (FLASHING)		POWERED DEVICE WITH ONE CHARGERS BATTERY (MID-DIRECTIVE)
	GENERAL ALARM ONLY ON PHYSICAL DISPLAY (FLASHING)		
	SIGNAL ERROR		
	EXCITATION ERROR		

MEANING OF LED COLORS

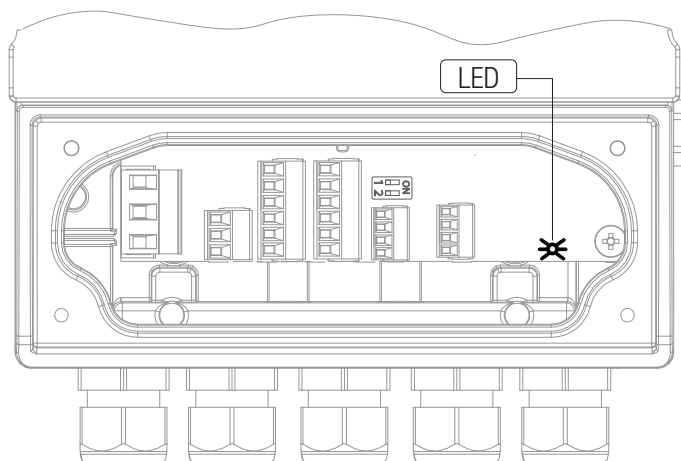


- LED Red: Alarm signal
- LED Blue: USB communication enable
- LED Green: Functioning system correctly

ACCESS TO THE CONFIGURATION MENU

The configuration can be done in two different ways:

- By keypad of transmitter
- By MCP interface (Virtual display of device)

Access Via Keypad

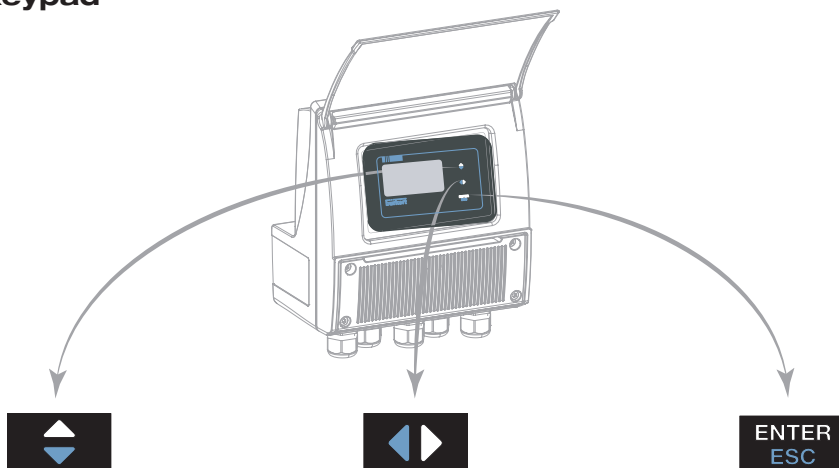

SHORT PRESSING (< 1 SECOND):
Increases the numeric figure or the parameter selected by the cursor
Returns to the previous subject on the menu.

LONG PRESSING (> 1 SECOND):
Decreases the numeric figure or the parameter selected by the cursor.
Proceeds to the next subject on the menu.

SHORT PRESSING (< 1 SECOND):
Moves/positions the cursor rightward on the input field.
Proceeds to the following subject of the menu. Change the display of the process data

LONG PRESSING (> 1 SECOND):
Moves/positions the cursor leftward on the input field. Returns to the previous subject on the menu

SHORT PRESSING (< 1 SECOND):
Enter /leave the selected function
Enables the main menu for the device configuration Cancels the selected function under progress
LONG PRESSING (> 1 SECOND):
Leaves the current menu
Enables the totalizer reset request (when enabled) Confirms the selected function.

Access Via Mcp interface (Virtual Display)

You can access the device configuration menu by MCP.

MCP is a software that can be installed on Microsoft Windows® and allows you to set all the functions of the transmitter and customize the menu. To use the MCP interface, see its own manual.

However any changes using MCP are not recommended, unless:

- after receiving corresponding training by burkert,
- done by professional,
- agreed by the end user, and done inline with the MCP manual

With using this MCP software you agree to the following Software Tools End User License Agreement "MCP" (STEULA):



Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software") to use the Software, and to permit persons to whom the Software is furnished to do so, subject to the conditions of this STEULA.

In a nutshell:


- The Software is intended for use by professionals and professionally, and in connection with our products only;
- While we took care to provide access to a convenient tool, it is not required for the use of our products; we cannot be liable for any consequence in using this Software;
- We will update the Software from time to time based but not regularly and may at any point in time discontinue to offer the Software or its updates for download.
- The Software could include technical or other mistakes, inaccuracies or typographical errors.
- At any time without prior notice, we may make changes to the software pointing to third-party websites or shops or documentation made available on the third-party's website.
- The software may be out of date, and we make no commitment to update such materials.

Legal advise:

1. One registered copy of supplied software may either be used by a single person who uses the software personally on one or more computers, or installed on a single computer used non-simultaneously by multiple people, but not both.
2. You may access to software through a network, provided that you have obtained and agreed to individual licenses for the software covering all computers that will access the software through the network regardless if they access the software program concurrently or at different times.
3. You are not allowed to modify its content, decompose, decompile its components, redistribute, offer or sell the Software.
4. You are solely responsible for determining the appropriateness of using the software and assume any risks associated with your exercise of permissions under this license.
5. THIS SOFTWARE AND ANY ACCOMPANYING FILES ARE GIVEN FREE OF CHARGE "AS IS" AND WITHOUT WARRANTIES, EXPRESS OR IMPLIED, AS TO PERFORMANCE OR MERCHANTABILITY OR NON-INFRINGEMENT OF THIRD PARTY RIGHTS.
6. No advice or information, whether oral or written, obtained by you from us shall create any warranty for the software.
7. Good data processing procedure dictates that any program shall be thoroughly tested in a non-critical environment before using the Software. You must assume the entire risk of using the program. NOTE THAT USING THE SOFTWARE IMPACTS THE OPERABILITY / FUNCTIONALITY OF THE HARDWARE AND MAY HAVE SEVERE CONSEQUENCES FOR THE PRODUCTION OF THE FACILITY THE HARDWARE IS INSTALLED IN.
8. THE SOFTWARE IS IN PARTICULAR NOT DESIGNED, INTENDED, LICENSED, OR AUTHORIZED FOR USE IN ANY TYPE OF SYSTEM OR APPLICATION IN WHICH THE FAILURE OF THE SYSTEM OR APPLICATION COULD CREATE A SITUATION WHERE PERSONAL INJURY OR DEATH MAY OCCURE (E.G., MEDICAL SYSTEMS, LIFE SUPPORT, LIFE-SUSTAINING SYSTEMS, LIFE-SAVING SYSTEMS, OR SECURITY SYSTEMS) OR IN HAZARDOUS ENVIRONMENTS REQUIRING FAIL-SAFE CONTROLS, INCLUDING WITHOUT LIMITATION, THE DESIGN, CONSTRUCTION, MAINTENANCE OR OPERATION OF NUCLEAR FACILITIES, AIRCRAFT NAVIGATION OR COMMUNICATION SYSTEMS, AIR TRAFFIC CONTROL, OR WEAPONS SYSTEMS. LICENSOR SPECIFICALLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR SUCH PURPOSES.
9. IN NO EVENT SHALL WE BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

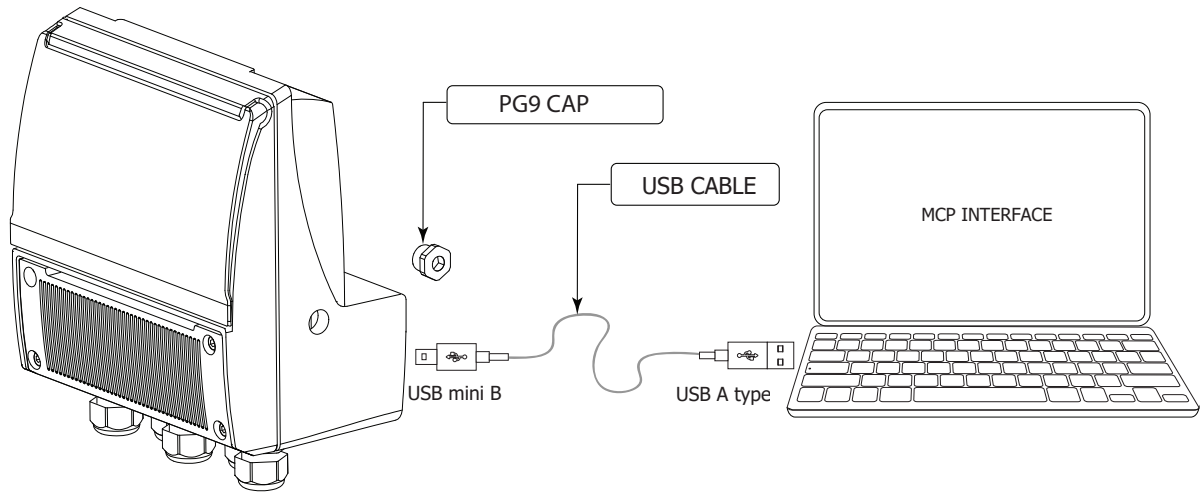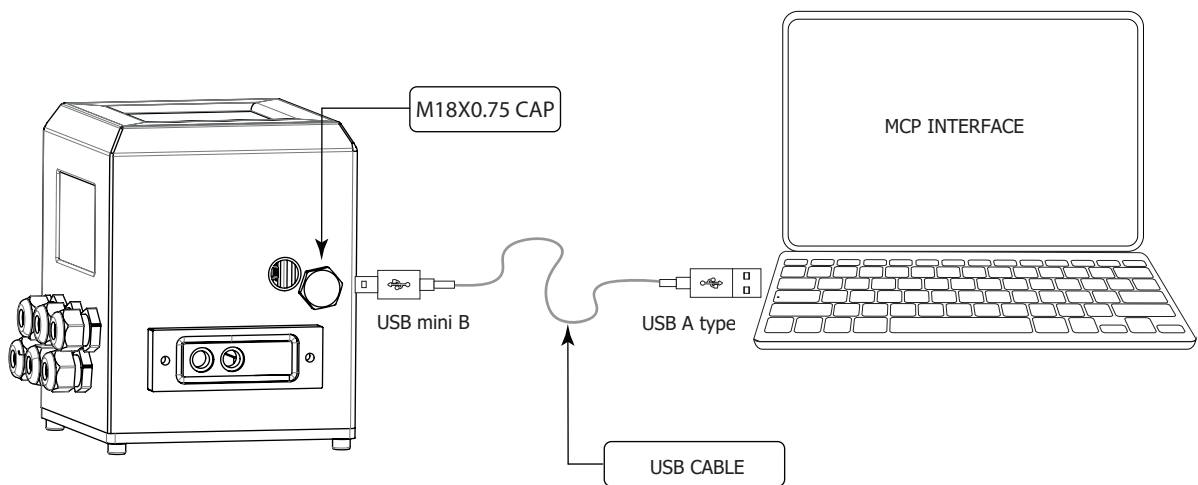USB Position for PA6 and aluminium version**USB Position for stainless steel version**

FLOW RATE VISUALIZATION

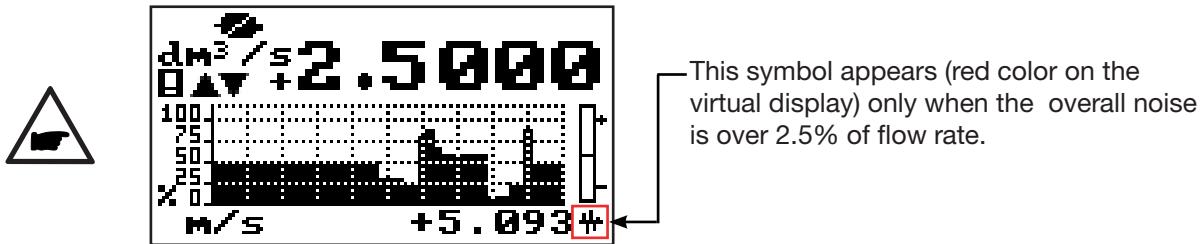


The SE58 M can show a 5 digits display for flow rate units; this mean the maximum flow rate value that can be represented on the display is 99999 (no matter the positioning of the decimal point). The minimum is 0.0025. The representable measure unit depends on sensor flow rate and diameter; the permitted units are those, that permits the device full scale value not exceeding 99999.

Example for DN 300, Full scale value: 3m/s:

- **PERMITTED:** measure unit (example): l/s (216.00); m³/h (777.60); m³/s (0.2160)
- **NOT PERMITTED:** measure unit (example): l/h (777600)


FLOW RATE ALERT

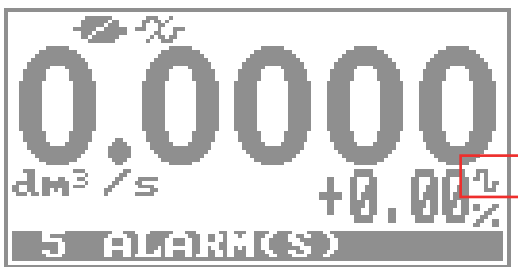

This FLAG becomes active when there is a flow variation (flow rate not stable).

QUICK START MENU

The **QUICK START MENU** allows to the user an immediate access to some of the most commonly used functions; through MCP software it is possible to customize this menu to make it suitable for a specific application.

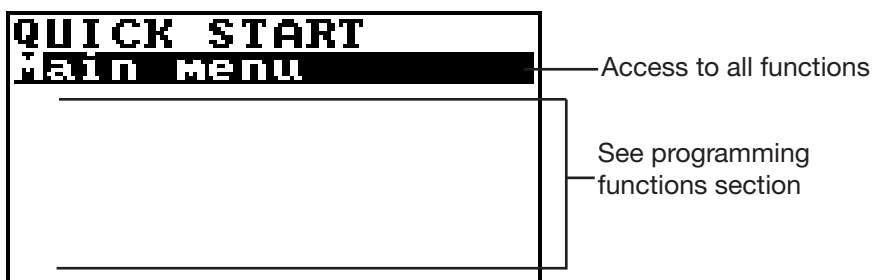


The user has immediate access to the Quick Start menu when the transmitter is powered up by pressing the Enter key. If access to the quick start menu does not occur, then it could be disabled using the function "9.11" page 37 .

TRANSMITTER ACCESS CODE

The access for programming the device is regulated by six access levels logically grouped. Every level is protected by a different code.


- Access Level 1-2-3-4 Freely programmable by user

Access Code Set : Menu 13 System

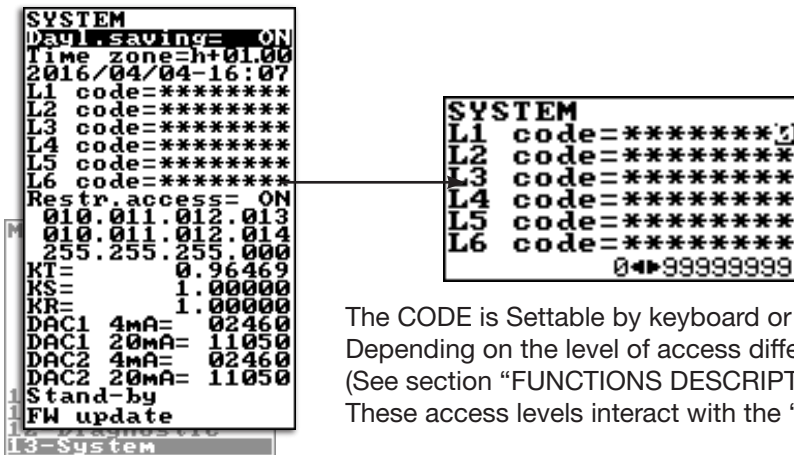

The CODE is Settable by keyboard or MCP interface.
 Depending on the level of access different display functions will be visible.
 (See section "FUNCTIONS DESCRIPTION" page 39)
 These access levels interact with the "Restricted access"

Restricted Access Set : Menu 13 System

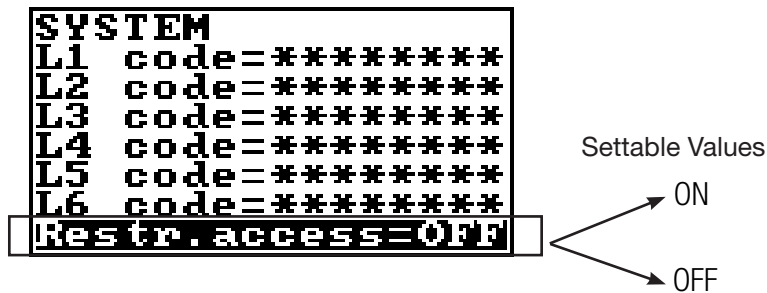

Restrict = ON: Access permitted only to functions provided for a specific level;

Example: If the operator has a code of access level 3, after having set it, he can change only the functions with level 3 access.

Restrict = OFF: It enables to change functions for the selected level and ALL the functions with lower access level.

Example: If the operator has the code of level 3, after having set it, he can change all the functions at level 3 and those at lower levels.




* **WARNING:** take careful note of the customized code, since there is no way for the user to retrieve or reset it if lost.

Factory preset access codes:


- L1: 10000000
- L2: 20000000
- L3: 30000000
- L4: 40000000

The following example shows how to change the Fullscale by Quick Start menu; the second illustrates how to change the function by the Main menu.


EXAMPLE: modifying the full scale value from 4dm³/s to 5dm³/s, from the “Quick start menu”

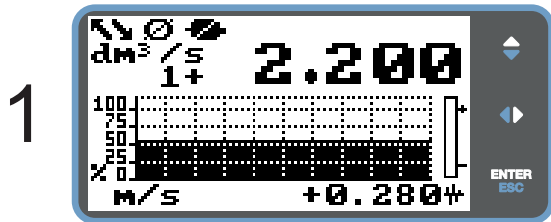


Press the ENTER button to access the Quick Start menu

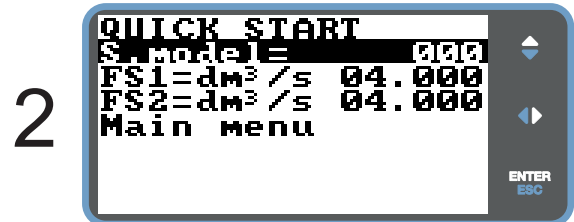


Select this function in the list to be edited

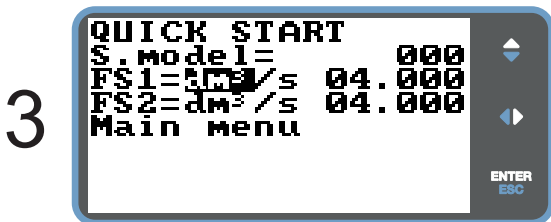


Press the ENTER button to select the function.

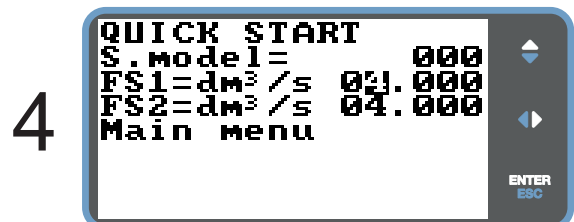


Select the value to be changed

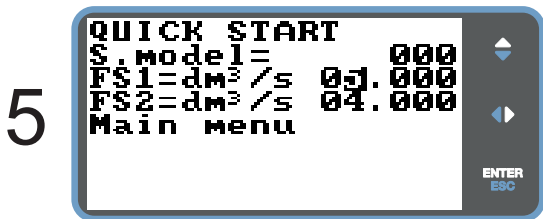


Change the value

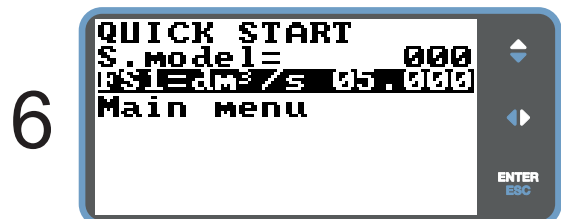

Confirm the new value

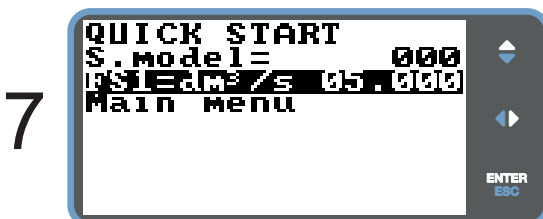


Long Push

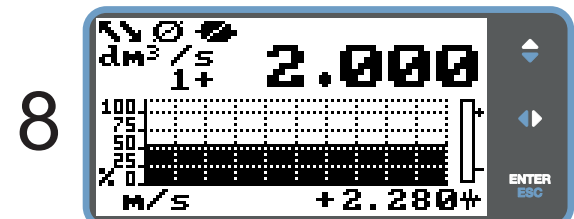


Main Page

EXAMPLE: modifying the full scale value from 4dm³/s to 5dm³/s,
from the "Main Menu" (quick start menu enabled)

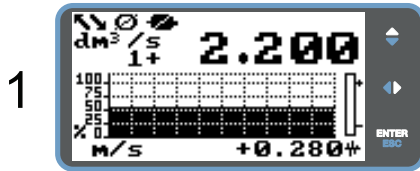


Press the ENTER button to access the Quick Start menu

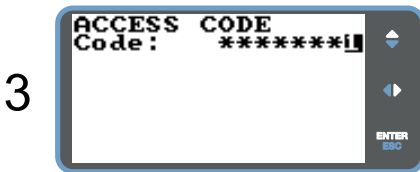


Press ENTER button to confirm value.




Press the ENTER button to access the Main Menu

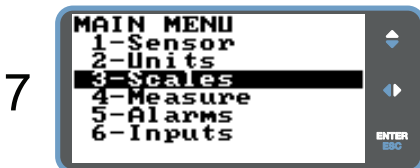


Press the ENTER button to access the "Scale Menu"

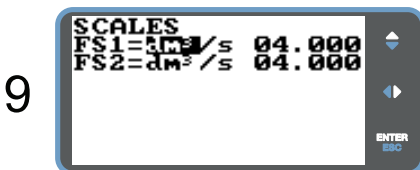


Select the value to be changed

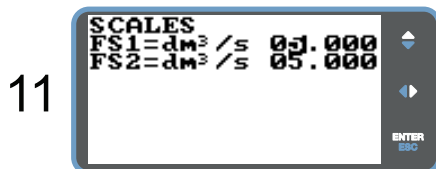

Press the ENTER button
Confirm the new value

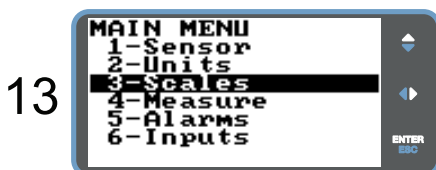

Press Esc

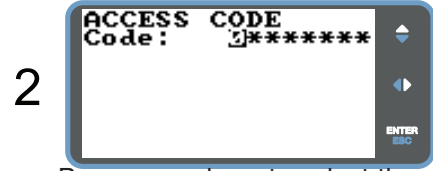


Press arrow keys to select the cell in which to insert the number of the access code.




Select "Main Menu"




Select function

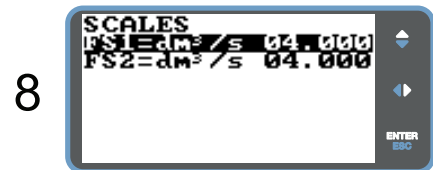


Press the ENTER button to access the "Fs1"

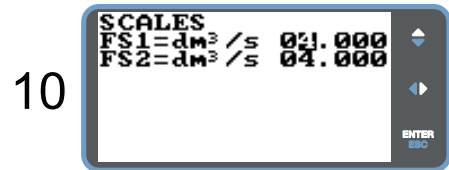

Change the value

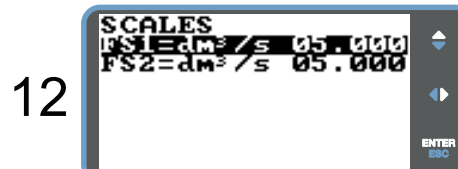

Press Esc

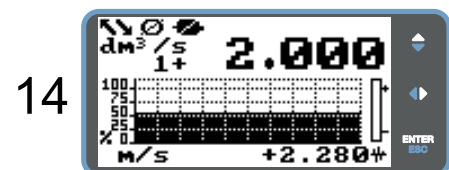

Main page

FUNCTIONS MENU

The main menu is selected from the Quick start menu by pressing the key **ENTER** **ESC** and entering the access code; enter the access code if required. Note: Some functions are displayed only with other functions active, or with optional modules.

SENSOR

SENSOR
S. model = 0
Lining = UNSPEC.
S. type = FULL BORE
U. type = METRIC
Diam mm 00025.0
KA = +00.9637
KA- = -04.4904
KZ = +0000000
HD = +0000000
Ins. position = 0
KP Dinamic = OFF
Ki = 01.8727
Kp = 01.0000
KC = 1.00000
C. curr = 025.0
C.Reg.PB = 004
C.Reg.DH = 008
S. Freq. = Hz 50
Preamplif. = OFF
E.P Detect = ON
R max = kohm 0500
El. Cleaning = OFF
S. cable = m 000
S. err. delay = 010
Sens. verify = OFF
Zeropoint cal
HL 00.00000000

- 1.1 Sensor's model
- 1.2 Flow sensor lining material type
- 1.3 Sensor's type
- 1.4 Type of units for sensor's para.
- 1.5 Sensor's nominal/real diameter
- 1.6 Sensor's coefficient KA
- 1.7 Sensor's coefficient KA Negative
- 1.8 Sensor's coefficient KZ
- 1.9 Sensor coefficient KD
- 1.10 Insertion position
- 1.11 KP dynamic, coefficient for insertion
- 1.12 Sensor coefficient Ki
- 1.13 Sensor coefficient Kp
- 1.14 Sensor coefficient KC
- 1.15 Sensor's excitation current
- 1.16 Current regulator Prop.Band
- 1.17 Current regulator Deriv.Const
- 1.18 Measure sampling frequency
- 1.19 Enables the preamplifier
- 1.20 Empty pipe detection
- 1.21 Maximum input resistance
- 1.22 El.cleaning funct.signal level
- 1.23 Sensor's connecting cable length
- 1.24 Signal error delay (n. sample)
- 1.25 Automatic sensor verify enable
- 1.26 Pipe hydraulic zero calibration
- 1.27 Coefficient KL values

UNITS

UNITS
Diam. mm
S.cable m
FR.unit METRIC
PI1 unit METRIC
PI2 unit METRIC
T+ unit METRIC
T+ unit g
T+ D.P 3
P+ unit METRIC
P+ unit g
P+ D.P 3
T- unit METRIC
T- unit g
T- D.P 3
P- unit METRIC
P- unit g
P- D.P 3
Temp.unit °C
Mass units ON
Sg=kg/dm3 1.0000

- 2.1 Sens.diameter unit of measure
- 2.2 Sens.cable len.unit of measure
- 2.3 Flow rate unit of measure type
- 2.4 Pulse 1 unit of measure type
- 2.5 Pulse 2 unit of measure type
- 2.6 Total.T+ unit of measure type
- 2.7 Total.T+ unit of measure
- 2.8 Total.T+ Decimal point position
- 2.9 Total.P+ unit of measure type
- 2.10 Total.P+ unit of measure
- 2.11 Total.P+ Decimal point position
- 2.12 Total.T- unit of measure type
- 2.13 Total.T- unit of measure
- 2.14 Total.T- Decimal point position
- 2.15 Total.P- unit of measure type
- 2.16 Total.P- unit of measure
- 2.17 Total.P- Decimal point position
- 2.18 Temperature unit of measure
- 2.19 Mass units enabling
- 2.20 Specific gravity coefficient

SCALES

SCALES		
FS1 g/s	4908.7	3.1 Full scale flow rate for range 1
FS2 g/s	4908.7	3.2 Full scale flow rate for range 2
Pls1=g	1000.00	3.3 Output 1 pulse volume value
Tpls1=ms	0050.0	3.4 Output 1 pulse time value
Pls2=g	1000.00	3.5 Output 2 pulse volume value
Tpls2=g	0050.0	3.6 Output 2 pulse time value
Frq1=Hz	1000.00	3.7 Full scale flow rate for range 1
Frq2=Hz	1000.00	3.8 Full scale flow rate for range 2

MEAS.

MEASURES		
Damping	SMART	4.1 Measure damping digital filter
Cut-off= %	00.1	4.2 Measure cut-off threshold
DT Min.	ON	4.3 Automatic calibration verify
Autorange	ON	4.4 Automatic f.scale range change
H.imm.inp.	OFF	4.5 High immunity input noise filter

ALARMS

ALARMS		
Max+ = dm ³ /s	OFF	5.1 Max.pos.flow r.alarm threshold
Max- = dm ³ /s	OFF	5.2 Max.neg.flow r.alarm threshold
Min+ = dm ³ /s	OFF	5.3 Min.pos.flow r.alarm threshold
Min- = dm ³ /s	OFF	5.4 Min.neg.flow r.alarm threshold
Hysteresis=%	03	5.5 Hysteresis on alarm thresholds
mA v.alarm=%	000	5.6 Current output value in case of alarm
Hz v.alarm=%	000	5.7 Frequency value in case of alarm

INPUTS

INPUTS		
T+ reset	OFF	6.1 Totaliz.T+ reset input enable
P+ reset	OFF	6.2 Totaliz.P+ reset input enable
T- reset	OFF	6.3 Totaliz.T- reset input enable
P- reset	OFF	6.4 Totaliz.P- reset input enable
Count lock	OFF	6.5 Totaliz.count.lock input enable
Meas.lock	OFF	6.6 Measure zero lock input enable
Calibration	OFF	6.7 Calibration func.input enable
Range change	OFF	6.8 Flow rate range change input en.

OUTP.

OUTPUTS

Out1	PULSES+	7.1	Output 1 function selection
Out2	PULSES-	7.2	Output 2 function selection
Out mA1	4_22 +/-	7.3	Analog current output 1 range
Out mA2	4_22 +/-	7.4	Analog current output 2 range
A1S	4.9087	7.5	Full scale value for analog out1
A2S	4.9087	7.6	Full Scale value for analog out2

COMM.

COMMUNICATION

HART pr.	05	8.1	HART packet byte preambles
HART O. C.	ON	8.2	HART bus output control
Dev. Addr	001	8.3	Device communication address number
Speed=bps	9600	8.4	MODBUS link speed
Parity=	NO	8.5	MODBUS link parity
Delay=ms	00	8.6	MODBUS reply delay
C. timeout	2	8.7	Maximum delay between chars (frames)
MBUS ID =	220483	8.8	MeterBus Id.Number (Second.Add.)
MBUS Dev.T =	7	8.9	MeterBus Device Type (Media)



DISPLAY

DISPLAY

Language	EN	9.1	Language for all messages
Contrast	5	9.2	Display Contrast adjustment
Disp.time=s	020	9.3	Display/keyboard inactivity time
D.rate=Hz	5	9.4	Display refresh rate
Disp. Fn.	1	9.5	Display function number
Disp.lock	ON	9.6	Display function selection lock
Part. Tot	ON	9.7	Partial totalizer enable
Neg. Tot.	ON	9.8	Negative totalizer enable
Net tot.	ON	9.9	Net totalizer enable
Disp.date	ON	9.10	Time and date display enable
Quick start	ON	9.11	Quick start menu visualization

DATA LOGGER

DATA LOGGER

D.logger en.	ON	10.1	Data logger sampling enable
Meas. units	ON	10.2	Measure units recording enable
Field separat.	;	10.3	Field separator character
Decimal separ.	.	10.4	Decimal separator character
Interv.	01:01:00	10.5	Sampling interval
Log T+	ON	10.6	Totaliz.T+ logging enable
Log P+	ON	10.7	Totaliz.P+ logging enable
Log T-	ON	10.8	Totaliz.T- logging enable
Log P-	ON	10.9	Totaliz.P- logging enable
Log TN	ON	10.10	Tot.Net Total logging enable
Log PN	ON	10.11	Tot.Net Partial logging enable
Log Q (UM)	ON	10.12	Flow rate in unit of meas.enable
Log Q (%)	ON	10.13	Flow rate in percentage enable
Log AL.EU	ON	10.14	Alarm events logging enable
Log STR	ON	10.15	Sensor's test results log.enable
Log BTS	ON	10.16	Board temperatures logging en.
Log IBV	ON	10.17	Internal board volt. log.enable
Log EDC	ON	10.18	Electrodes DC voltage log.enable
Log EAC	ON	10.19	Electrodes AC voltage log.enable
Log EIZ	ON	10.20	Electrodes impedance log.enable
Log SCV	ON	10.21	Sensor's coils values log.enable

FUNCT.
FUNCTIONS

T+ reset	11.1	Totaliz.T+ reset function
P+ reset	11.2	Totaliz.P+ reset function
T- reset	11.3	Totaliz.T- reset function
P- reset	11.4	Totaliz.P- reset function
Load Sens. F. def	11.5	Load sensor factory default val.
Load Conv. F. def	11.6	Load converter factory def. val.
Save Sens. F. def	11.7	Save sensor factory default val.
Save Conv. F. def	11.8	Save converter factory def. val.
Calibration	11.9	Internal circuit calibration

DIAGN.
DIAGNOSTIC

Self test	12.1	Self test diagnostic function
Test display	12.2	Function tests physical display
Sens. verify	12.3	Sens.verify diagnostic function
Flow sim. =	12.4	Flow rate simulation function
Display measures	12.5	Display internal measured values
Disp. Comm. Vars	12.6	Display comm. diagnostic values
Display graphs	12.7	Display measure as graphs
Gen. sens. set	12.8	Generic sensor parameters set
SD card info	12.9	SD card status informations
Firmware info	12.10	Firmware version information
S/N=	12.11	Board serial number (read only)
WT=	12.12	Total working time (read only)

SYSTEM
SYSTEM


Dayl. Saving =	13.1	Daylight saving time change
Time zone =	13.2	Localized time zone
2016/04/04-16:07	13.3	System date and time
L1 code =	13.4	Access level 1 code
L2 code =	13.5	Access level 2 code
L3 code =	13.6	Access level 3 code
L4 code =	13.7	Access level 4 code
L5 code =	13.8	Access level 5 code
L6 code =	13.9	Access level 6 code
Restr. Access=	13.10	Restricted access level
010 . 011 . 012 . 013	13.11	Device IP network address
010 . 011 . 012 . 014	13.12	Client IP network address
255 . 255 . 255 . 000	13.13	Network mask
RT	13.14	Calibration coefficient KT
RS	13.15	Calibration coefficient KF
RR	13.16	Calibration coefficient KR
DAC1	13.17	DAC1 out 4mA calibration point
DAC1	13.18	DAC1 out 20mA calibration point
DAC2	13.19	DAC2 out 4mA calibration point
DAC2	13.20	DAC2 out 20mA calibration point
Stand-by	13.21	Stand-by
FW update	13.22	firmware update

FUNCTIONS DESCRIPTION



Here below the explanation on how the rows of menu are described.

Menu visualized on the transmitter (from 1 to 13)
MENU 1 - SENSOR

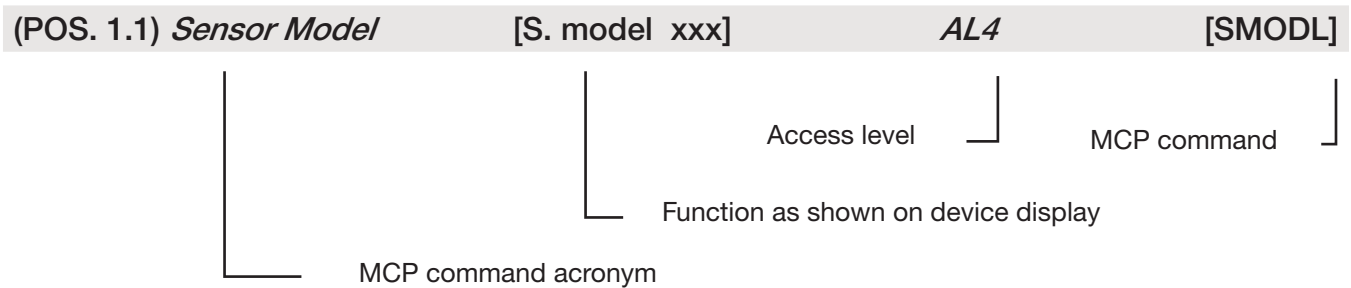

The following picture describes where to find the MCP functions, using MCP-software. For more details see MCP manual.

The screenshot shows the McpPro software interface. On the left, a 'Function list' window displays a tree structure of menu items: Sensor, Units, Scales, [Flow Rate Full Scale 1], [Flow Rate Full Scale 2], [Output 1 Pulse Value], [Channel 1 pulse volume value], OP1PV? : 1,104:MCP ACCESS LEVEL NOT VALID, OP1PV=?, OP1PV=, [Output 1 Pulse Time], [Output 1 Full scale Frequency], [Output 2 Pulse Value], [Output 2 Pulse Time], and [Output 2 Full scale Frequency]. Below this is a 'MCP>' line editor with 'OP1PV=' entered. On the right, a larger window shows the same function list with a callout box pointing to the line editor. The callout box contains the text: 'Line editor for the insertion and execution of MCP commands.' The main window also shows a 'Configuration Files Commands' section with 'READ and SAVE' and 'LOAD and WRITE' buttons, and a 'Path' field.

MAN 1000495957 EN Version: B Status: RL (released | freigegeben) printed: 01.04.2022

MENU 1 - SENSOR

(POS. 1.1) Sensor MODeL *[S. model xxx]* **AL4** [SMODL]

Enter the first two characters of the serial number of the sensor as on the sensor label.

(POS. 1.2) Lining MAterial Type *[Lining= UNSPEC.]* **AL4** [LIMAT]

Flow sensor lining material type. (PFA; PU-TDI; ALON; PEEK; HR; PP; PA-11; PTFE-HT; PTFE)

(POS. 1.3) Sensor TYPE *[S. type= FULL BORE]* **AL4** [STYPE]

Select the sensor type of full-bore or insertion.

(POS. 1.4) Sensor Units TYPE *[U.type= METRIC]* **AL4** [SUTYP]

Select type of measure unit of sensor's parameter. Values metric or imperial (inch).

(POS. 1.5) Pipe DiaMeter Value *[Diam.= mm xxx]* **AL4** [PDIMV]

Select the nominal diameter of the sensor (0-2500). ND is written on the sensor label.

(POS. 1.6) CoeFFicient KA *[KA= + xx.xxx]* **AL4** [CFFKA]

KA factor: calibration coefficient

(POS. 1.7) CoeFFicient KA Negative *[KA= - xx.xxx]* **AL4** [CFKAN]

KA factor: calibration coefficient for negative flow. This function is showed only if at least 1 negative KL value is set.

(POS. 1.8) CoeFFicient KZ *[KZ= +/- xxxxx]* **AL4** [CFFKZ]

Calibration Factor KZ

(POS. 1.9) CoeFFicient KD *[KD= +/- xxxxx]* **AL4** [CFFKD]

Calibration Dynamic Factor.

(POS. 1.10) Sensor Insertion POSition *[Ins.position= x]* **AL4** [SIPOS]

This function is active with POS.1.3 on "Insertion". See the insertion sensor manual for more details

(POS. 1.11) Sensor Insertion Dynamic KP *[Kp = +/- xxxxx]* **AL4** [SIDKP]

This function is active with POS. 1.3 see page 35 set on insertion. See manual of insertion sensor for more details

(POS. 1.12) CoeFFicient Ki *[Ki= +/- xx.xxx]* **AL4** [CFFKI]

This function is active with POS. 1.3 see page 35 set on insertion. See manual of insertion sensor for more details

(POS. 1.13) CoeFFicient KP *[KP dynamic= ON/OFF]* **AL4** [CFFKP]

This function is active with POS. 1.3 see page 35 set on insertion. See manual of insertion sensor for more details

(POS. 1.14) Coefficient KC **[KC= +/- xx.xxx]** **AL4** **[CFFKC]**

Calibration Factor. This function is activated if the sensor model is NOT present on the sensors table standard parameters

(POS. 1.15) Coils EXCitation Current **[C.Curr.= mA xxx.x]** **AL4** **[CEXCC]**

Excitation coils current. This function is activated if the sensor model is NOT present on the sensors table standard parameters

(POS. 1.16) Coils Regulator PProportional Band **[C.Reg.PB= xxx]** **AL4** **[CRPRB]**

Current regulator parameter. This function is activated if the sensor model is NOT present on the sensors table standard parameters

(POS. 1.17) Coils Regulator DERivative constant **[C.Reg. DK = xxx]** **AL4** **[CRDER]**

Current regulator parameter. This function is activated if the sensor model is NOT present on the sensors table standard parameters

(POS. 1.18) PReamplifier INstalled **[Preamplif.= ON]** **AL4** **[PREIN]**

This function enable/disable the presence of the preamplifier. The use of the preamplifier inhibit the possibility to use BIV and Empty Pipe Detection.

(POS. 1.19) Sampling FREQuency **[S.Freq.= Hz xx]** **AL4** **[SFREQ]**

Measure sampling frequency. This function is activated if the sensor model is NOT present on the sensors table standard parameters.

(POS. 1.20) Empty Pipe Detection ENable **[E.P.Detect= ON]** **AL4** **[EPDEN]**

Enables the empty pipe detection function. This function is useful to keep the meter lock to zero when the pipe become empty.

(POS. 1.21) Empty Pipe Detection THreshold **[R max= Kohm xxxx]** **AL4** **[EPDTH]**

Maximum resistance value at the inputs (electrodes) determine the empty pipe condition. This feature is enabled only if the "1.19" page 35 Empty Pipe Detection is ON.

(POS. 1.22) ELeCtrodes CLeaNING **[El. cleaning=AVG]** **AL4** **[ELCLN]**

This function is useful to keep the electrodes clean; the allowed values are: OFF, minimum, average and maximum. It is not recommended to use this function when the liquid has a conductivity less than 100µS/cm (set to OFF).

(POS. 1.23) Sensor CAble LeNgth **[S.cable=m xxx]** **AL4** **[SCALN]**

Length of cable between sensor and transmitter on remote version.

(POS. 1.24) Signal Error ALarm Time **[S.err.delay=m xxx]** **AL4** **[SEALT]**

Delay before generating error. This function is useful to prevent unexpected lock to zero of measure caused by sporadic events (empty pipe, excitation error, signal error)

(POS. 1.25) Automatic Sensor VeriFY Enable **[Sens. verify= OFF]** **AL3** **[ASVFE]**

Enable the Automatic sensor verification (see BIV optional function)

(POS. 1.26) SET KJ value **[Zero point cal.]** **[SETKJ]**

This feature appears only when the process conditions are as follow:
 measure filters recommended (Damping) set to SMART 2 second / 5 second
 stable flow rate and lower than 0.1% of the absolute scale (10 m/s)

It must have elapsed at least 10 minutes after the last significant change of flow rate

When the above conditions are met, the zero point calibration function will appear on the display, press the "Enter / ESC" and automatically the procedure will start.

NOTICE: Be sure that the sensor is completely full of liquid and perfectly still. Even subtle movements of the fluid can cause significant errors, therefore proceed with great care.

(POS. 1.27) SET KL values **[KL=XX +/- XXXXXXXXX]** **AL4** **[SETKL]**

Linearization coefficient for negative flow, reserved to the service. This command is only showed if SMODL = 000.

MENU 1 - SENSOR: ONLY MCP FUNCTIONS

Sensor Coils TiMe A **[MCP ONLY]** **AL4** **[SCTMA]**

Reference sensor coil time A

Sensor Coils TiMe B **[MCP ONLY]** **AL4** **[SCTMB]**

Reference sensor coil time B

Sensor Coils RESistance **[MCP ONLY]** **AL4** **[SCRES]**

Reference sensor coil resistance

Sensor E1 Reference Resistance **[MCP ONLY]** **AL4** **[SE1RR]**

Resistance value of E1 electrodes

Sensor E2 Reference Resistance **[MCP ONLY]** **AL4** **[SE2RR]**

Resistance value E2 electrodes

Sensor Coils Temperature Reference **[MCP ONLY]** **AL4** **[SCTRF]**

sensor data reference temperature. Temperature measured on the coils of the sensor at the time of saving the device reference data for B.I.V. function The temperature value in Celsius degrees, which owns the sensor.

Note: the temperature must be estimated on the basis of the place of the sensor installation.

MENU 2 - UNITS

WARNING: The totalizer value is updated and changed depending on the setting of unit value. The scale change may cause accuracy loss depending of rounding up. For example, if T +=0,234 liters with 3 decimals, it become T += 0.001 m³ losing 0.234 liters in rounding up.

(POS. 2.1) Sensor Diameter Unit of Measure [Diam.= mm] AL2 [SDIUM]

Sensor diameter unit of measure (mm or inch)

(POS. 2.2) Sensor CAble length Unit of Measure [S.Cable= m] AL2 [SCAUM]

Sensor cable length for remote version. Select m or foot.

(POS. 2.3) Flow Rate Unit of Measure Type [FR unit= METRIC] AL2 [FRMUT]

Flow rate type measure unit. Select metric or not metric (Imperial units)

(POS. 2.4) PuLse 1 Unit of measure Type [PL1 unit= METRIC] AL2 [PL1UT]

This function is active with POS. 7.1 see page 37 enable.
This function changes the choice of measure unit POS. 3.4 see page 36
Pulse 1 type measure unit: metric or not metric (Imperial units).

(POS. 2.5) PuLse 2 Unit of measure Type [PL2 unit= METRIC] AL2 [PL2UT]

This function is active with POS. 7.2 see page 37 enable.
This function changes the choice of measure unit POS. 3.6 see page 36
Pulse 2 type measure unit: metric or not metric Imperial units).

(POS. 2.6) Totalizer Total Positive Unit of measure Type [T+ unit= METRIC] AL2 [TTPUT]

Setting total direct totalizer measure unit type: metric or not metric Imperial units).
This function changes the values measure unit on POS. 2.7 see page 35

(POS. 2.7) Totalizer Total Positive Unit of Measure [T+ unit= dm³] AL2 [TTPUM]

Setting total direct totalizer measure unit.
This function visualized on visualization pages.

(POS. 2.8) Totalizer Total Positive Decimal Point position [T+ D.P.= x] AL2 [TTPDP]

Setting total direct totalizer decimal point position.
Example: T+D.P.= 3 visualized value T+dm³ 0.000 / T+D.P.= 2 visualized value T+dm³ 0.00

(POS. 2.9) Totalizer Partial Positive Unit of measure Type [P+ unit= METRIC] AL2 [TPPUT]

This function is active with POS. 9.7 see page 37 enable.
Setting partial direct totalizer measure unit type: metric or not metric (Imperial units).
This function changes the values measure unit on POS. 2.10 see page 35 .
It is visualized on visualization pages.

(POS. 2.10) Totalizer Partial Positive Unit of Measure [P+ unit= dm³] AL2 [TPPUM]

Setting partial direct totalizer measure unit.
This function visualized on visualization pages.

(POS. 2.11) Totalizer Total Positive Decimal Point position **[P+ D.P.= x]** AL2 [TPPDP]

Setting partial direct totalizer decimal point position.

Example: P+D.P.= 3 visualized value P+dm³ 0.000 / P+D.P.= 2 visualized value P+dm³ 0.00

(POS. 2.12) Totalizer Total Negative Unit of measure Type **[T- unit= METRIC]** AL2 [TTNUT]

This function is active with POS. 9.8 see page 37, enabled.

Setting total reverse totalizer measure unit type: metric or not metric (Imperial units).

This function changes the values measure unit on POS. 2.13 see page 35.

It is visualized on visualization pages.

(POS. 2.13) Totalizer Total Negative Unit of Measure **[T- unit= dm³]** AL2 [TTNUM]

Setting total reverse totalizer measure unit.

This function visualized on visualization pages.

(POS. 2.14) Totalizer Total Negative Decimal point position **[T- D.P.= x]** AL2 [TTNDP]

Setting total reverse totalizer decimal point position.

Example: T- D.P.= 3 visualized value T- dm³ 0.000
T- D.P.= 2 visualized value T- dm³ 0.00

(POS. 2.15) Totalizer Partial Negative Unit of measure Type **[P- unit= METRIC]** AL2 [TPNUT]

This function is active with POS. 9.8 see page 37, enable.

Setting partial reverse totalizer measure unit type: metric or not metric (Imperial units).

This function changes the values measure unit on POS. 2.16 see page 35

It is visualized on visualization pages.

(POS. 2.16) Totalizer Partial Negative Unit of Measure **[P- unit= dm³]** AL2 [TPNUM]

Setting partial reverse totalizer measure unit.

This function visualized on visualization pages.

(POS. 2.17) Totalizer Partial Negative Decimal Point position **[P- D.P.= x]** AL2 [TPNDP]

Setting partial reverse totalizer decimal point position.

Example: P- D.P.= 3 visualized value P-dm³ 0.000
P- D.P.= 2 visualized value P-dm³ 0.00

(POS. 2.18) TeMPerature Unit of Measure **[Temp. unit= C°]** AL2 [TMPUT]

Setting temperature measure unit.

(POS. 2.19) MaSS Units Enable **[Mass units= ON/OFF]** AL2 [MSSUE]

Enable or Disable the selection of mass unit of full scale set.

(POS. 2.20) Volume to Mass Specific Gravity Coefficient **[Sg= Kg/dm³ x.xxxx]** AL2 [VMSGC]

Setting specific gravity coefficient. This Function is active with POS. 2.19 see page 35, enable.

MENU 3 - SCALE

(POS. 3.1-2) Flow Rate Full Scale 1-2

[FS1-2= l/s xxxx.x]

AL2

[FRFS1-FRFS2]

The FS2 (full scale flow rate 2) is active with POS. 6.6 see page 36 ,enabled.

The full scale is used to indicate to the maximum meter's flow rate. The full scale should be chosen carefully as it's parameters are used for several other parameters. There are three fields to fill in order to set this parameter, from left to right: 1) measure unit, 2) time unit of measure and 3) numeric value. The selection is made by positioning the cursor on the field to modify. To change the type unit of measure (metric, Imperial units, mass or volume) see POS. 2.3 see page 35 and POS. 2.19 see page 35 and POS. 2.20 see page 35. The value of Fs1-2 depend nominal diameter POS. 1.4 see page 35. The following tables show the units of measure available and the conversion factor by comparison with 1dm³ and 1kg. The transmitter accepts any kind of combination of units of measure satisfying both the following conditions:

Numeric field value 99999

$1/25 \text{ fsmax} \leq \text{numeric field value} \leq \text{fsmax}$.

Where fsmax is the maximum full scale value corresponding to the sensor, equal to a 10m/s liquid speed. The measure units are shown as appear on the display. The Imperial units units are diversified by using capital and small characters.

METRIC		NOT METRIC		MASS UNIT NOT METRIC		MASS UNIT METRIC	
cm ³	Cubic centimeter	in ³	Cubic inch	Oz	Ounce	g	Gram
ml	Milliliter	Gal	American gallon	Lb	Pound	kg	Kilogram
l	Liter	ft ³	Cubic foot	Ton	Short tons	t	Ton
dm ³	Cubic decimeter	bbl	Standard barrel				
dal	Decalitre	BBL	Oil barrel				
hl	Hectolitre	hf ³	Hecto cubic feet				
m ³	Cubic meter	KGL	American Kilo gallon				
ML	Mega Liter	kf ³	Kilo cubic feet				
		ttG	Ten thousand gallons				
		IGL	Imperial gallon				
		IKG	Imperial Kilo gallon				
		Aft	Acre foot				
		MGL	Mega gallon				
		IMG	Imperial mega gallon				

When a measure mass unit is set, the specific gravity function is automatically enabled by the system. Please, note that the mass measure is heavily affected by the temperature. With certain liquids this may cause significant measurement errors. The following measure of time units can be selected: s = second, m = minute, h = hour, d = day .

NOTES FOR USING THE MCP INTERFACE

The command FRFS1 =? and command FRS2 = ?, edited by MCP software, return a list of only the unit compatible with the nominal diameter set.

(POS. 3.3-3.5) OutPut 1-2 Pulse Value **[Pls1-2= dm³ x.xxxxx]** **AL2** **[OP1PV-OP2PV]**

The functions on POS. 7.1 see page 37 and POS. 7.2 see page 37, if enabled and set on pulse value, allow to set a defined amount of volume to get one pulse.

To set pulse value set the 2 fields, from left to right: 1)unit of measure, 2) numeric value.

The selection is performed by positioning the cursor in the field that has to be modified.

To change the unit type (metric, imperial) see menu 2 units.

The value of Pls1-2 depends on nominal diameter (max. flow rate) units.

The available units are described in the function POS. 1.4 see page 35.

(POS. 3.4-3.6) OutPut1-2 Pulse Time **[Tpls1-2= ms x.xxxxx]** **AL2** **[OP1PT OP2PT]**

When the pulse value is defined, also the duration of the pulse shall be set. It's expressed in milliseconds and the range is from 0.4 to 9999.99. Be carefull to set a right value of pulse duration, according to the receiver. It shall be compatible with the external device which receives the pulses.

ATTENTION: If the pulse is too long receiver's coils may burn out or if the pulse is too short, the counter may not be able to recognize the pulses.

(POS. 3.7-3.8) OUtput 1-2 Full scale Frequency **[Frq1-2= x.xxxxx]** **AL2** **[OU1FF-OU2FF]**

Frq1 and Frq2 are activated with POS. 7.1 see page 37 and POS. 7.2 see page 37 enabled and set to the value freq+/-/+- . Setting duration of the pulse generated on channel 1 and 2.

MENU 4 - MEASURE

(POS. 4.1) Measure Filter DaMPing


[Damping=OFF/SMART/(TIME)]

AL3


[MFDMP]

This section of manual is extremely important because the correct setting of the filters allows to obtain a proper response of the device to the measured flow rate and the specific requirements of use; as a general rule, consider that, starting from Damping = OFF (no filter applied to the measure), successive values, introduce increasing damping. The following diagrams show the device's response to changes in flow rate from 0 to 100%, using the different settings of the damping function.

The SMART is an adaptive filter that adapts automatically to most of the processes (recommended value), making the response of the meter very ready to fast changes of flow and at the same time extremely precise and stable for slow variations. It may be convenient to use a constant damping filter time, where there is a pulsating flow (for example generated by peristaltic pumps). With longer times you get a mean value stable, while with short times the measure will closely follow the flow pulses, but consequently more unstable. NOTE: If the rechargeable battery is active, the damping could be set only in "SMART".

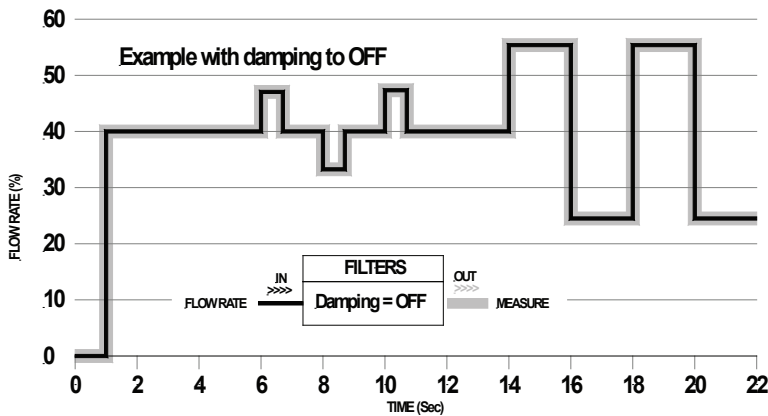

Damping function (OFF). the meter follows the trend of fast changes in flow.

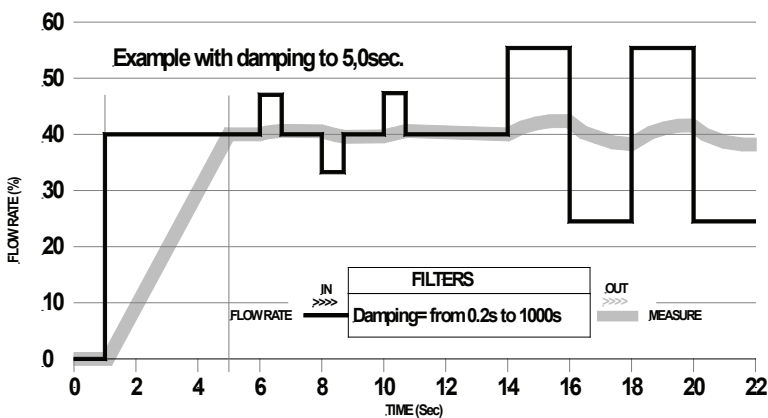

Damping mode based on time (from 0.2s to 1000s) The measure is averaged over a number of samples determined by the value assigned to the dampening function. When the damping parameter is expressed in seconds, the filter works damping the measurement noise and sudden change of flow rate. Increasing the parameter of damping increases the stability of the measurement.

<i>(POS. 4.2) Measure Filter CUt-off Threshold</i>	<i>[Cut-off=% xxx]</i>	<i>AL3</i>	[MFCUT]
--	------------------------	------------	----------------

Setting the low flow cutoff threshold. This function is useful to avoid that flows close to zero, due to the electrical noises from tiny movements of liquid (due for example to vibrations of the pipe) which cause an increasing of the totalizers. The allowed range for this function is 0-25% of full scale set. For most applications a value between 0.5 and 1% is recommended.

<i>(POS. 4.3) Auto CAlibration Verify Enable</i>	<i>[Cal.verify=ON]</i>	<i>AL3</i>	[ACAWE]
--	------------------------	------------	----------------

This function enables an automatic verification of board's coefficients. As the transmitter performs continuously a large number of tests, we recommend to use this function only in presence of wide range of temperature. Instead it is NOT recommended to use it when the device is used in metering applications (batch).

<i>(POS. 4.4) Auto RaNGe Enable</i>	<i>[Aurorange=ON/OFF]</i>	<i>AL3</i>	[ARNGE]
-------------------------------------	---------------------------	------------	----------------

Enables the automatic change of scale. The meter may have two different working ranges in order to suit to the variable process conditions. In order to get the best results out of this function it is important range N.2 (Fs2) if enabled is bigger than N.1 (Fs1). When the flow rate increases and reaches the 100% of the full scale 1, then the meter automatically switches to scale 2. When the flow rate decreases again reaching a value on scale 2 equal to the 90% of full scale N.1, then the active scale It's 1 again. Allowed values for this parameter: ON/OFF.

Notice: when the autorange is enabled, It's not allowed to use the manual range change (POS. 6.6 see page 36). This function does NOT increase the accuracy of the measure; its aim is to increase the resolution of 4/20 mA when the meter work at very low flow rates (typical case the flow rate of water distribution with daytime flow much higher than the night flow). N.B: this function is disabled if the batching function is active

<i>(POS. 4.5) High Immunity INPuts</i>	<i>[H.imm. inp.]</i>	<i>AL4</i>	[HIINP]
--	----------------------	------------	----------------

This function (INPut High Immunity filter) introduces a hardware filter to be used ONLY IN CASE OF ABSOLUTE NECESSITY, when the measure is absolutely unstable or it is NOT possible to make the measure, and every possible attempt to reduce or eliminate the noise do not give a positive result, with particular attention of device ground connection. When this function is activated (HIINP = ON) the measure will be influenced by an unavoidable error estimated around 1%.

MENU 4 - measure: ONLY MCP FUNCTIONS

<i>Measure Filter Cut-off Threshold 2</i>	<i>[MCP ONLY]</i>	<i>AL3</i>	[MFCT2]
---	-------------------	------------	----------------

Setting the low flow cutoff threshold, it is similar to the function in 4.2. The value of this function is NOT visible on display but only with MCP command.

<i>DYNAmic Sample Analysis</i>	<i>[MCP ONLY]</i>	<i>AL4</i>	[DYNSA]
--------------------------------	-------------------	------------	----------------

Reserved to the service

<i>DYNAmic Sample Time</i>	<i>[MCP ONLY]</i>	<i>AL4</i>	[DYNST]
----------------------------	-------------------	------------	----------------

Reserved to the service

MENU 5 - ALARMS

<i>(POS. 5.1) Flow Rate Alarm maX Positive</i>	<i>[Max+=XXXXXX]</i>	<i>AL3</i>	<i>[FRAXP]</i>
--	----------------------	------------	----------------

Maximum value alarm set for direct flow rate set (expressed in technical units). When the flow rate value exceeds such a threshold, then an alarm message is generated. Setting this parameter to zero disables the alarm generation.

<i>(POS. 5.2) Flow Rate Alarm maX Negative</i>	<i>[Max-=XXXXXX]</i>	<i>AL3</i>	<i>[FRAXN]</i>
--	----------------------	------------	----------------

Maximum value alarm set for reverse flow rate set (expressed in technical units). When the flow rate value exceeds such a threshold, then an alarm message is generated. Setting this parameter to zero disables the alarm generation.

<i>(POS. 5.3) Flow Rate Alarm miN Positive</i>	<i>[Min+=XXXXXX]</i>	<i>AL3</i>	<i>[FRANP]</i>
--	----------------------	------------	----------------

Minimum value alarm set for reverse flow rate set (expressed in technical units). When the flow rate value falls below such a threshold, then an alarm message is generated. Setting this parameter to zero disables the alarm generation.

<i>(POS. 5.4) Flow Rate Alarm miN Negative</i>	<i>[Min-=XXXXXX]</i>	<i>AL3</i>	<i>[FRANN]</i>
--	----------------------	------------	----------------

Minimum value alarm set for reverse flow rate set (expressed in technical units). When the flow rate value falls below such a threshold, then an alarm message is generated. Setting this parameter to zero disables the alarm generation.

<i>(POS. 5.5) Alarm Thresholds HYSteresis</i>	<i>[Hysteresis=% XX]</i>	<i>AL3</i>	<i>[ATHYS]</i>
---	--------------------------	------------	----------------

Hysteresis threshold set for the minimum and maximum flow rate alarms. The value of this parameter is expressed as percentage of the full scale value and may be set from 0 to 25%.

<i>(POS. 5.6) Output Current Alarm Condition Value</i>	<i>[mA V.alarm =% XXX]</i>	<i>AL3</i>	<i>[OCACV]</i>
--	----------------------------	------------	----------------

The output current signal can be specified by the user in case of failure of either, empty pipe, coils interrupted, or ADC error. The signal current is set as a percentage (0 to 125%) of the 0/4-20mA current. 125% corresponds to 24mA and does not depend on the selected range (0-20/4-20mA).

The NAMUR NE43 recommendation asks for a alarms signalling value for the current output lower than 3.6mA (<18%) or bigger than 21mA (>105%). It would then be preferable to set the value of this function at the 10%, so that the current value in case of the a.m. cases would be 2 mA, allowing the following diagnostics:

- current < 2mA - 5%: line interrupted, power supply failure or faulty transmitter;
- 2mA -5% * current * 2mA + 5%: hardware alarm;
- 4mA * current * 20mA: normal working range;

20mA < current * 22mA: out of range, measure above 100% f.s.

<i>(POS. 5.7) Output Frequency Alarm Condition Value</i>	<i>[Hz V.alarm=%XXX]</i>	<i>AL3</i>	<i>[OFACV]</i>
--	--------------------------	------------	----------------

This function is active with POS. 7.1 see page 37 and POS. 7.2 see page 37 enable to (FREQ.+ , FREQ.-, FREQ.±) To set the frequency value assigned to the on/off output in one or more of the following failure cases: Empty pipe; Coils interrupted ; ADC error. Allowable range is from 0 to 125% of the frequency full scale value. Although there are no specific rules regulating cases such as these, it would be convenient to use the failure information as follows:

0% Hz * frequency * 100% f.s.: normal working range;

100% f.s. < frequency * 210% f.s.: overflow, measure above the 100% of the f.s.;

115% f.s. * frequency * 125% f.s.: hardware alarm condition.

MENU 6 - INPUTS

WARNING!

This menu is not enabled when the batching function is active.

(POS. 6.1-2) Volume Totalizer Total/Partial Positive reset Enable [T/P+/RESET=ON/OFF] AL3 [VTTPE] [VTPPE]

When one of this function is enabled, the related totalizer + may be reset through the on/off input.

(POS. 6.3-4) Volume Totalizer Total/Partial Negative reset Enable [T/P-/RESET=ON/OFF] AL3 [VTTNE] [VTPNE]

When one of this function is enabled, the related totalizer - may be reset through the on/off input.

(POS. 6.5) Totalizers Count Lock Input Enable [COUNT LOCK= ON/OFF] AL3 [TCLIE]

Totalizers counting lock command enable. When this function is active, applying a voltage on the on/off input terminals the system stops the totalizers no matter which is the flow rate.

(POS. 6.6) MeaSure Lock Input Enable [Meas.lock=ON/OFF] AL3 [MSLIE]

When this function is active (ON), applying a voltage on the on input terminals, the measurement is stopped, the meter will display zero flow.

(POS. 6.7) CALibration Input Enable [Calibration=ON/OFF] AL3 [CALIE]

When this function is active, applying a voltage on the on/off input terminals the meter performs a autozero calibration cycle. ATTENTION: If the voltage pulse is less than 1 sec., the meter performs a calibration cycle to compensate possible thermal drifts. If the voltage pulse is more 1 sec, the meter performs a zero calibration measure. To perform the calibration it is absolutely necessary for the sensor to be full of liquid and that the liquid is perfectly still. Even very small movement of the liquid may affect the result of the calibration, and, consequently, the accuracy of the system.

(POS. 6.8) Scale Range Change Input Enable [RANGE CHANGE=ON/OFF] AL3 [SRCIE]

Range change external command enable. When this function is enabled, applying a voltage on the on/off input terminals the meter switches to the second measuring range (Fs2).

N.B.: the autorange doesn't allow to use the manual range change see (POS. 4.4 see page 36).

MENU 7 - OUTPUTS

(POS. 7.1) OUTput 1 Function [Out1=XXXXXX] AL3 [OUT1F]

Function choice corresponding to digital Output 1. The functions are listed in the table below.

(POS. 7.2) OUTput 2 Function [Out2=XXXXXX] AL3 [OUT2F]

Function choice corresponding to digital Output 2. The functions are listed in the table below.

FUNCTIONS FOR OUTPUTS 1 AND 2

- OFF: DISABLE
- MAX AL. +: MAX DIRECT FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MIN AL. +: MIN DIRECT FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MAX/MIN+/-: MAX/MIN DIRECT FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MAX AL.-: MAX INVERSE FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MIN AL.-: MIN INVERSE FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MAX/MIN-: MAX/MIN INVERSE FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- P.EMPTY: EMPTY PIPE ALLARM OUTPUT (ENERGIZED = AL. OFF)
- HARDWARE AL.: SUM OF ALL ALARMS "energized interrupted " AND "error input signal "
- OVERFLOW: OUT OF RANGE ALLARM OUTPUT (ENERGIZED = FLOWRATE OK)
- ALL ALARMS: SUM OF ALL ALARMS POSSIBLE
- EXT. COMM: OUTPUT MAY TAKE A STATE DEPENDENT ON AN EXTERNAL CONTROL REMOTELY VIA MCP
- FLOW RATE SIGN.: FLOW DIRECTION (ENERGIZED WHEN FLOW IS NEGATIVE)
- SCALE: INDICATION SCALE
- FREQ.+: FREQUENCY POSITIVE FLOWRATE
- FREQ.-: FREQUENCY NEGATIVE FLOWRATE
- FREQ.+/-: FREQUENCY POSITIVE/NEGATIVE FLOWRATE
- PULSES.+: PULSE POSITIVE FLOW RATE
- PULSES.-: PULSE NEGATIVE FLOW RATE
- PULSES+/-: PULSE NEGATIVE/POSITIVE FLOW RATE

(POS. 7.3-4) Analog Output 1/2 ConFiguration [Out mA1/2=X_XX XXX] AL3 [AO1CF] [AO2CF]

This function sets the current output 1 and 2. This function is optional and will not appear unless the option has been requested. There are three fields to modify for this function:


- Scale zero: 4 or 0mA
- Full scale: 20 or 22mA
- Field: + = positive, - = negative, blank = both, -0+ = central zero scale

The values corresponding to the scale points are shown in the following chart:


CURRENT VALUES IN mA ASSOCIATE TO THE % FULL SCALE VALUE					
POSSIBLE FIELD	REVERSE FLOW VALUE		ZERO	DIRECT FLOW VALUE	
	$\leq -210\%$	-100%	0%	+100%	$\geq +210\%$
Out.mA = 0 ÷ 20 +	0	0	0	20	20
Out.mA = 0 ÷ 22 +	0	0	0	20	22
Out.mA = 4 ÷ 20 +	4	4	4	20	20
*Out.mA = 4 ÷ 22 +	4	4	4	20	21.6
Out.mA = 0 ÷ 20 -	20	20	0	0	0
Out.mA = 0 ÷ 22 -	22	20	0	0	0
Out.mA = 4 ÷ 20 -	20	20	4	4	4
Out.mA = 4 ÷ 22 -	21.6	20	4	4	4
Out.mA = 0 ÷ 20	20	20	0	20	20
Out.mA = 0 ÷ 22	22	20	0	20	22
Out.mA = 4 ÷ 20	20	20	4	20	20
Out.mA = 4 ÷ 22	21.6	20	4	20	21.6
Out.mA = 0 ÷ 20 -0+	0	0	10	20	20
Out.mA = 0 ÷ 22 -0+	0	1	11	21	22
**Out.mA = 4 ÷ 20 -0+	4	4	12	20	20
Out.mA = 4 ÷ 22 -0+	2	4	12	20	22

In hardware alarm conditions "HARDW AL." (interrupted coils, empty pipe, measure error) the current value is programmed by the function "mA v.fault" (pos. 5.6) and it is expressed as percentage of a fixed current range, where: 0% = 0mA and 210% = 22mA.

* Example 1: out 4-22 +

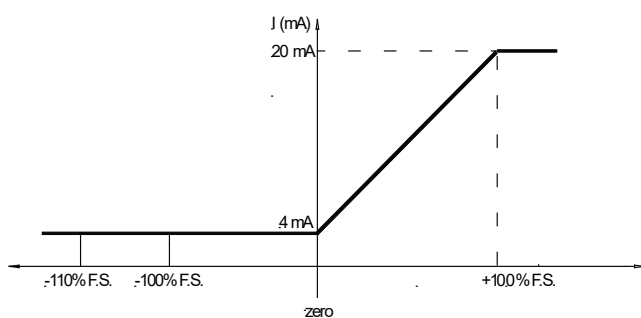

** Example 2: out 4-20 -0+

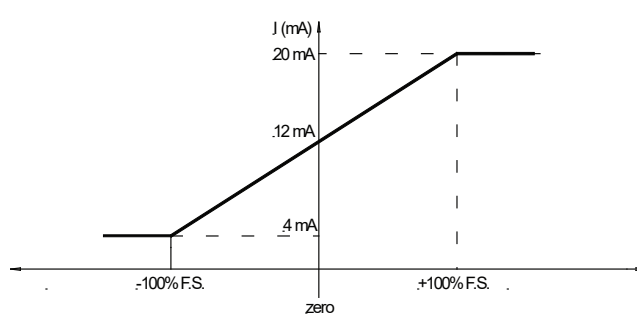

(POS. 7.5) Analog Output 1 Full Scale

[A1S= dm/s x.xxxx]

AL3

[AO1FS]

It allows to set the full scale value for analog output 1 independently from the main scale of the device.

(POS. 7.6) Analog Output 2 Full Scale


[A2S= dm/s x.xxxx]

AL3

[AO2FS]

It allows to set the full scale value for analog output 2 independently from the main scale of the device.

MENU 8 - COMMUNICATION

<i>(POS. 8.1) HART Preambles</i>	<i>[HART pr.=XXXXXX]</i>	<i>AL3</i>	[HARTP]
Number of preamble (Hart function)			
<i>(POS. 8.2) HaRT Output Control</i>	<i>[HART O.C=ON/OFF]</i>	<i>AL3</i>	[HRTOC]
Hart bus output control 4-20mA.			
			
<i>(POS. 8.3) DeVice ADdResS</i>	<i>[Dev. Addr=XXXXXX]</i>	<i>AL3</i>	[DVADD]
Device communication address number.			
<i>(POS. 8.4) MoDBus SPeed</i>	<i>[Speed=XXXXXX]</i>	<i>AL3</i>	[MDBSP]
Modbus link speed.			
<i>(POS. 8.5) MoDBus PArity</i>	<i>[Parity=XXXXXX]</i>	<i>AL3</i>	[MDBPA]
Modbus link parity.			
<i>(POS. 8.6) MoDBus DeLay</i>	<i>[Delay=XXXXXX]</i>	<i>AL3</i>	[MDBDL]
Modbus replay delay.			
<i>(POS. 8.7) MoDBus Chars Timeout</i>	<i>[C. timeout=X]</i>	<i>AL3</i>	[MDBCT]
Maximun delay between chars (frames).			
<i>(POS. 8.8) MeTerbus Identifier NumbeR</i>	<i>[MBUS ID=220483]</i>	<i>AL3</i>	[MTINR]
MeterBus Identifier Number (Secondary.Address)			
<i>(POS. 8.9) MeTerbus Device TYpe</i>	<i>[MBUS Dev.T=7]</i>	<i>AL3</i>	[MTDTY]
MeterBus Device Type (Media)			

MENU 9 - DISPLAY

(POS. 9.1) Layout LANGuage [Language= ITA/EN] AL1 [LLANG]

Choice of the language. There are 8 languages available: GB = English, IT = Italian, TR = Turkish, PL = Polish, DE = German, FR = French, PT = Portuguese, ES = Spanish.

(POS. 9.2) Display CoNTRast [Contrast= x] AL1 [DCNTR]

Display contrast set. The contrast can change according to the room temperature. The allowed range is from 0 to 9.

(POS. 9.3) KeyBoard TiMEout Time [Disp. time=s xxx] AL1 [KBTMT]

This function set display/keyboard inactivity. The set values are from 020 to 255 second.

(POS. 9.4) DISplay Refresh Frequency [D.rate=Hz xx] AL1 [DISRF]

Frequency of the display data update. This parameter effects only the display layout and not the response time of the meter itself. The possible choices are: 1/2/5/10 Hz.

(POS. 9.5) DISplay Function Number [Disp.fn= x] AL2 [DISFN]

This function sets the display of the page making it visible when you start the display. For each display page is associated with a number that corresponds to the position.

(POS. 9.6) Display function LOck Enable [Disp.lock= x] AL2 [DLOKE]

This function locks the scrolling of the display pages selected by the setting. POS. 9.5 see page 37 function.

(POS. 9.7) Partial TOtalizers Enable [Part. tot= ON] AL2 [PTOTE]

This function enables the display of partial totalizer in visualization pages

(POS. 9.8) NEGative value Totalizers Enable [Neg. tot= ON] AL2 [NEGTE]

This function enables the display of negative totalizer in visualization pages

(POS. 9.9) Net Value ToTalizers Enable [Net. tot= ON] AL2 [NVTTE]

This function enables the display of net totalizer in visualization pages

(POS. 9.10) Date And Time Display Enable [Disp.Date= ON] AL2 [DATDE]

This function enables the display of date and time in visualization pages

(POS. 9.11) Quick STart Menu Enable [Quick start= ON] AL2 [QSTME]

This function enables the quick start menu.

MENU 10 - DATA LOGGER

(POS. 10.1) Data LOGger Enable [D.logger en= /OFF] AL3 [DLOGE]

This function enables data logger.

The following functions are activated by [D.logger en= ON]

(POS. 10.2) Data Logger Units of Measure Enable [Meas. units= ON] AL3 [DLUME]

Measure unit recording enable

(POS. 10.3) Data Logger Field Separator Character [Field separ.= ;] AL3 [DLFSC]

This function will set the separator character between data logger data.

(POS. 10.4) Data Logger Decimal Separator Character [Decim.separ.= .] AL3 [DLDSC]

This function will set the separator character between data logger number value.

(POS. 10.5) Data LoGger Sample Interval [Interv.= xx:xx:xx] AL3 [DLGSI]

Sampling interval. This function set the log frequency. [Interv.= Hours : Minutes: Seconds]

(POS. 10.6) Data logger Totalizer Total Positive Enable [Log T+= ON] AL3 [DTTPE]

Enable logging of total positive totalizer.

(POS. 10.7) Data logger Totalizer Partial Positive Enable [Log P+= ON] AL3 [DTPPE]

Enable logging of partial positive totalizer.

(POS. 10.8) Data logger Totalizer Total Negative Enable [Log T-= ON] AL3 [DTTNE]

Enable logging of total negative totalizer

(POS. 10.9) Data logger Totalizer Partial Negative Enable [Log P-= ON] AL3 [DTPNE]

Enable logging of partial negative totalizer

(POS. 10.10) Data Logger totalizer Total Net Enable [Log TN= ON] AL3 [DLTNE]

Enable logging of total net totalizer

(POS. 10.11) Data Logger totalizer Partial Net Enable [Log PN= ON] AL3 [DLPNE]

Enable logging of partial net totalizer

(POS. 10.12) Data logger Flow rate in Technical Units Enable [Log Q(UM)= ON] AL3 [DFTUE]

Enable logging of flow rate in measure unit

(POS. 10.13) Data logger Flow rate in PerCentage Enable [Log Q(%)= ON] AL3 [DFPCE]

Enable recording of the flow rate as a percentage of full scale value set.

(POS. 10.14) Data logger ALarm Events Enable *[Log AL.EV= ON]* *AL3* *[DALEE]*

Enable logging of alarm events

(POS. 10.15) Data logger Sensor Test Results Enable *[Log STR= ON]* *AL6* *[DSTRE]*

Enable logging of sensor test results

(POS. 10.16) Data logger Board TemperatureS Enable *[Log BTS= ON]* *AL6* *[DBTSE]*

Enable logging of board temperature

(POS. 10.17) Data logger Internal Board Voltages *[Log IBV= ON]* *AL6* *[DIBVE]*

Enable logging of internal board voltage

(POS. 10.18) Data logger Electrodes DC Voltages Enable *[Log EDC= ON]* *AL6* *[DEDVE]*

Enable logging of electrodes DC voltage

(POS. 10.19) Data logger Electrodes AC voltages Enable *[Log AEC= ON]* *AL6* *[DEAVE]*

Enable logging of electrodes AC voltage

(POS. 10.20) Data logger Electrodes Source Impedance Enable *[Log EIZ= ON]* *AL6* *[DESIE]*

Enable logging of electrodes impedance

(POS. 10.21) Data logger Sensor Coils Values Enable *[Log SCV= ON]* *AL6* *[DSCVE]*

Enable logging of sensor coils value

MENU 10 - DATA LOGGER: ONLY MCP FUNCTIONS


LoG All Information Enable *[MCP ONLY]* *AL6* *[LGAIE]*

Log all events information. This function save in the event file all MCP commands.

LOGGED DATA EVALUATION (ONLY MCP)

Data are stored on micro SD card; the organization is based on “tree-structure”: the system create a daily folder where it save events and data logger . The data can be downloaded by MCP interface.


MCP INTERFACE

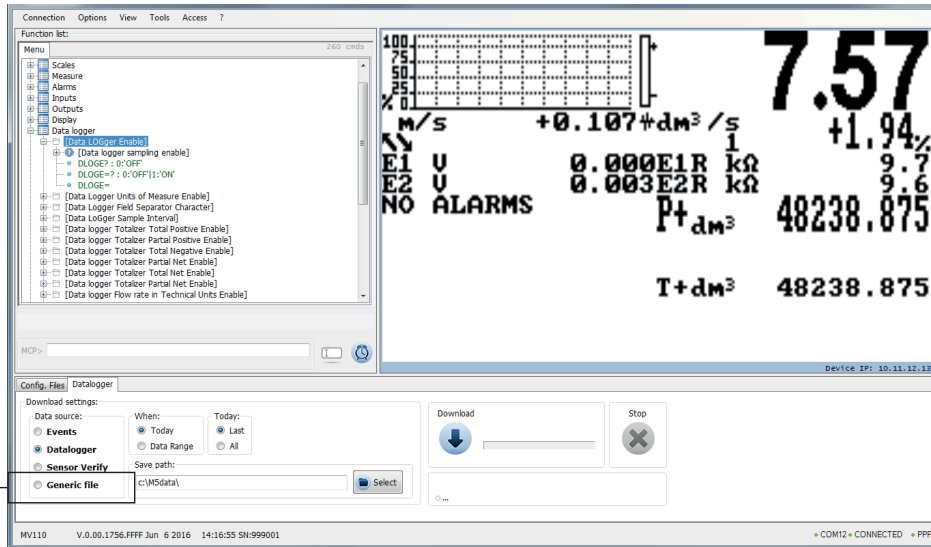

A

Click tab-control data logger to view files.

The sampling data backup depends on the value set by the POS function 10.4 page 25.

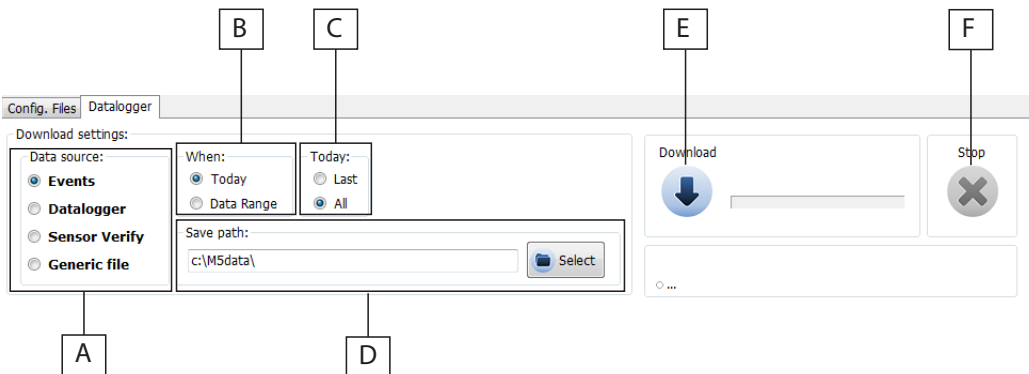

A=Data source

Events: Save the file system events (Example F-RAM hardware data [WORKING AREA] [SUCCESSFULLY LOADED])

Data logger: Save files of the enabled data logger function.

Sensor Verify:

Generic file: Save a specific file in the SD card

B=When

Today; It indicates the download file for the current day

Data range; this option allows you to select the date range for download.

C=Today

Last; this option allows to download the latest files, recorded after the last download
 All; this option allows the download of all the current day of the file

D=Save path:

This option allows you to save files to the folder on your PC


E=Download:

Button to start the download process


F=Stop:

Button to stop the download process

Example: Download Events

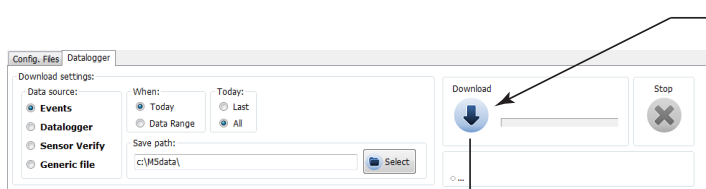


To download all the events of the current day in a specific folder, set the below parameters as follows:
Data source: Events
When: Today
Today: All
Save path: C: /
 The parameters are set then click the Download button.

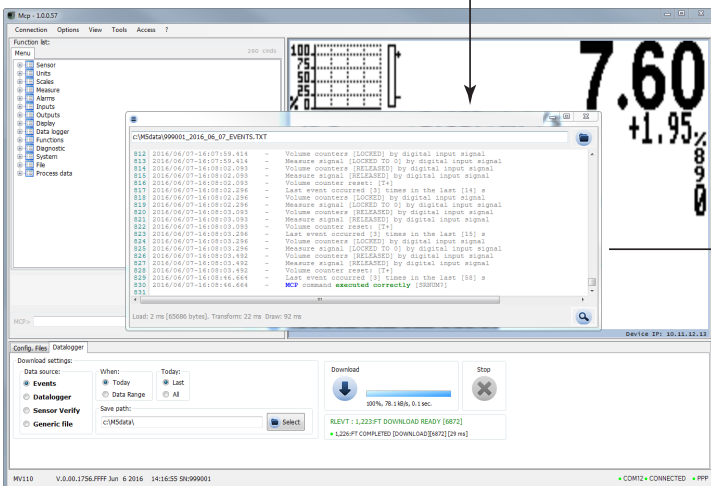

Once the download is completed, a window containing the list of today's events appears. The file is saved in the specified folder in .txt format .

Example: Download Data Logger

Note: it is recommended the date synchronization between transmitter and PC to perform correctly the events and logger reading operations.

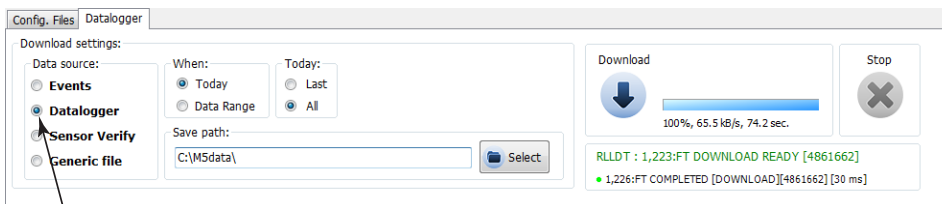

To download all the data of the current day in a specific folder, set the below parameters as follows:
Data source: DATALOGGER
When: Today
Today: All
Save path: C: /
 The parameters are set then click the Download button.

MAN 1000495957 EN Version: B Status: RL (released | freigegeben) printed: 01.04.2022

View downloaded files setting download data logger.

Note: The fields are in a fixed position, regardless if the above fields are active or not. The disabled fields are empty (delimited by the separator but without data).

N°Record. View progressively the number of registered records.	A N°RECORD n°
Date. The recording date viewing for each record.	B DATE ddmmmyy
Hours. Time recording viewing for each record.	C HOURS 0000000
Total positive totalizer value. Form Fields when the send flag is active on the totalizer T+.	D T+ UM dm3 0
Partial positive totalizer value. Form Fields when the send flag is active on the totalizer P+.	E P+ UM dm3 0
Total negative totalizer value. Form Fields when the send flag is active on the totalizer T-.	F T- UM dm3 0
Partial negative totalizer value. Form Fields when the send flag is active on the totalizer P-.	G P- UM dm3 0
Total net totalizer value. Form Fields when the send flag is active on the totalizer TN.	H TN UM dm3 0
Partial net totalizer value. Form Fields when the send flag is active on the totalizer PN	I PN UM dm3 0
Flow rate. Form Fields present when the send flag is on the flow in units of measurement.	J FLOWRATE UM dm3S 0
Flow rate %. Form fields present when the flag of alarm recording is active (only N ° of present total alarms)	K % % 0
N ° active alarms. Form fields present when the flag of alarm recording is active (only N ° of present total alarms)	L NACTIVEALARM UM AL 0
Loss of current measured during insulation test. Available value when recording the sensor test data is active.	M OPT UM MA 0
Time rise A. Available value when recording the sensor test data is active.	N TRISEA UM MS 0
Time rise B. Available value when recording the sensor test data is active.	O TRISEB UM MS 0
Sensor test error code. Available value when recording the sensor test data is active.	P ERR UM CETS 0

Visualization of downloaded file. Access Level 2 (diagnostic level) is required in order to download this type of file.


Voltage measured on electrode E1. Form fields when is active the recording of data on the input voltage (diagnostic value).	U1M V 0	AE E1V 0
Voltage measured on electrode E2. Form fields when is active the recording of data on the input voltage (diagnostic value).	V -0.023	AF E2V AG -0.023
Differential voltage between the two electrodes. Form fields when is active the recording of data on the input voltage (diagnostic value)	V 0	AH V AI 0
Common mode voltage in the electrodes. Form fields when is active the recording of data on the input voltage (diagnostic value).	V 0	AJ V AK 0
Noise at low frequency measured on the electrodes. Form fields when is active the recording of data on the input signal noise levels (diagnostic value).	V 0	AL V AM 0
Differential low frequency noise measured on the electrodes. Form fields when is active the recording of data on the input signal noise levels (diagnostic values).	V 0	AN V AO 0
Low-frequency noise measured input ADC. Form fields when is active the recording of data on the input signal noise levels (diagnostic values).	mV 0	AP mV AQ 0
High frequency noise measured input ADC. Form fields when is active the recording of data on the input signal noise levels (diagnostic values).	mV 0	AR mV AS 0
Measured equivalent resistance on the electrode 1. Form fields when is active the recording of data on the electrode resistance measurements (diagnostic values).	kohm 0	AT kohm AU 0
Measured equivalent resistance on the electrode 2. Form fields when is active the recording of data on the electrode resistance measurements (diagnostic values).	kohm 0	AV kohm AW 0
Coils excitation current. Form fields when is active the recording of data related to the sensor excitation circuit measures (diagnostic value)	mA 0	AX mA AY 0
Measured resistance of the excitation circuit (coil + cable). Form fields when is active the recording of data relative to the sensor excitation circuit measures (diagnostic values).	ohm 0	AZ ohm BA 0
Temperature measured on the sensor coils (indirect measurement). Form fields when the data transmission flag is active relative to the sensor excitation circuit measures (diagnostic values).	°C 0	BB °C BC 0
Temperature T1 (Board sensor 1: located close to the amplifier input). Form fields when the data transmission flag on board the internal temperature measurement is active (diagnostic values).	°C 0	BD °C BE 0
Temperature T2 (sheet sensor 2: located close to the power supply module). Form fields when the data transmission flag on board the internal temperature measurement is active (diagnostic values).	°C 0	BF °C BG 0
CPU temperature. Form fields when the data on the board's internal power supply voltage measurements flag is ON (diagnostic value).	°C 0	BH °C BI 0
Primary power supply of CPU. Form fields when the data on the board's internal power supply voltage measurements flag is ON (diagnostic value).	V 0	BJ V BK 0
Positive supply voltage of analog circuits. Form fields when the data on the board's internal power supply voltage measurements flag is ON (diagnostic values).	V 0	BL V BM 0

Negative supply voltage of the analog circuits. Form fields when the data on the board's internal power supply voltage measurements flag is ON (diagnostic values).	V	BN	BO	BP	BQ	BR	BS	BT	BU
	V	UM	AVCC	UM	BATT1	UM	BATT2	UM	% BATTERY CHARGE
	0								
Voltage measured on the battery B1 (NOT rechargeable battery). Fields when the data on the board's internal power supply voltage measurements flag is ON (diagnostic values).	V								
	V								
	0								
Voltage measured on the battery B2 (or rechargeable battery). Form fields when the data on the board's internal power supply voltage measurements flag is ON (diagnostic values).	V								
	V								
	0								
% Battery charge. Form fields when the data on the board's internal power supply voltage measurements flag is ON (diagnostic values).	%								
	%								
	0								

Example: Sensor Verify

The function "Sensor Verify" creates the "STESTLOG.CSV" file.

If enabled (by order code) the transmitter will perform every hour a measure of sensor's parameters and record a line of the file "STESTLOG.CSV"; it is possible even a manual verification by the command "sens.verify" on the menu "Diagnostic" or through the MCP command "SVERC".

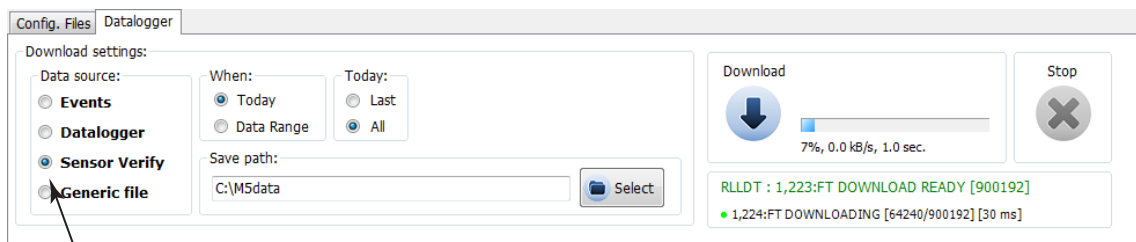


To download all the sensor measure for the current day in a specific folder, set the below parameters as follows:

- Data source:** Sensor Verify
- When:** Today
- Today:** All
- Save path:** C: /

The parameters are set then click the Download button.

Example: Generic File

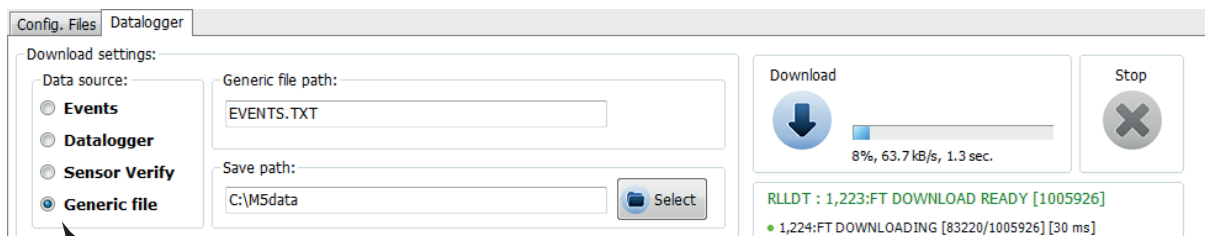

This function allows to select a file in the SD memory and download it. In the "Generic file path" specify the file name contained in the SD and indicate "Save path" where to save the file. Set these values to proceed with the download by clicking the "download".

MENU 11 - FUNCTION

The following functions are activated by first pressing the “ENTER” and then the “ESC” when the screen appears “confirm” to start the function.

<i>(POS. 11.1) Volume Totalizer Total Positive Reset</i>	<i>[T+ RESET= ON]</i>	<i>AL3</i>	<i>[VTTPR]</i>
--	-----------------------	------------	----------------

This function allows to reset the total positive totalizer for direct flow rate (+)

<i>(POS. 11.2) Volume Totalizer Partial Positive Reset</i>	<i>[P+ RESET= ON]</i>	<i>AL3</i>	<i>[VTPPR]</i>
--	-----------------------	------------	----------------

This function allows to reset the partial positive totalizer for direct flow rate (+)

<i>(POS. 11.3) Volume Totalizer Total Negative Reset</i>	<i>[T- RESET= ON]</i>	<i>AL3</i>	<i>[VTTNR]</i>
--	-----------------------	------------	----------------

This function allows to reset the total negative totalizer for direct flow rate (-)

<i>(POS. 11.4) Volume Totalizer Partial Negative Reset</i>	<i>[P- RESET= ON]</i>	<i>AL3</i>	<i>[VTPNR]</i>
--	-----------------------	------------	----------------

This function allows to reset partial negative totalizer for direct flow rate (-)

<i>(POS. 11.5) Load Factory Default Sensor Data</i>	<i>[Load sens.f.def= ON]</i>	<i>AL3</i>	<i>[LFDSD]</i>
---	------------------------------	------------	----------------

This function resets the parameters of the sensor factory default. To Load the saved files see function (11.7).

<i>(POS. 11.6) Load Factory Default Converter Data</i>	<i>[Load conv.f.def= ON]</i>	<i>AL3</i>	<i>[LFDSD]</i>
--	------------------------------	------------	----------------

This function resets the parameters of the transmitter factory default. To Load the saved files see function (11.8).

<i>(POS. 11.7) Save Factory Default Sensor Data</i>	<i>[Save sens.f.def= ON]</i>	<i>AL6</i>	<i>[SFDSD]</i>
---	------------------------------	------------	----------------

This function save the parameters of the sensor factory default.

<i>(POS. 11.8) Save Factory Default Converter Data</i>	<i>[Save conv.f.def= ON]</i>	<i>AL6</i>	<i>[SFDSD]</i>
--	------------------------------	------------	----------------

This function loads the data from a transmitter to another.

<i>(POS. 11.9) CALibration Immediate Command</i>	<i>[Calibration]</i>	<i>AL5</i>	<i>[CALIC]</i>
--	----------------------	------------	----------------

Perform manually a board’s calibration. Press Enter and the message “ EXECUTE?” will be visualized on the display then press long the key Enter to proceed. Press any other key to cancel the operation.

If the sensor table is valid, the calibration is performed also when one of the following parameters have been changed:

SENSOR DIAMETER -> Menu Sensor1

SENSOR MODEL -> Menu Sensor1

Exc. CURRENT -> Menu Sensor1

S. Freq. -> Menu Sensor1

To check the calibration status, active or inactive, type the command MCP Calic? and check as follows:

CALIC = 1 calibration in progress

CALIC = 0 calibration terminated

MENU 11 - Function: ONLY MCP FUNCTIONS

Sensor ReFERENCE Data Save [MCP ONLY] AL4 [SRFDS]
Saving the sensor reference data. "meter data" page 76

MENU 12 - DIAGNOSTIC

(POS. 12.1) AutoTeSt Immediate Command [Self Test] AL3 [ATSIC]

Meter auto-test function. This function stops the normal functions of the meter and performs a complete test cycle on the measure input circuits and on the excitation generator. To activate this function, after select it, push key Enter, at the question: "CONFIRM EXEC.?" Long Push the same key to start auto-test, or any other key for cancel the operation. At the end of operation the transmitter will revert to one of the initial visualization pages. This function is automatically performed when switching on the device. This function restarts the transmitter.

(POS. 12.2) Test display [Test display] AL1 NO MCP COMMAND

This function allows to do a physical test of the graphical display. During this operation, 4 sequences are displayed to test the correct functioning of the device.

(POS. 12.3) Sensor VERify Command [Sens. verify] AL3 [SVERC]

This function performs a manual sensor verification (if BIV is active)

(POS. 12.4) Measure SIMulation ENable [Flow sim=ON] AL3 [MSIEN]

Flow rate simulation enabling. With this function it is possible to generate an internal signal that simulates the flow rate, allowing the outputs and all the connected devices test.

After enabling it, a '▲▼' appears in the top left of the screen and the flow rate simulation can be:

- set: by pushing the key Enter from one of visualization pages, to set the required % flow rate (Fl.rate=%) and the same key to confirm the value;
- finished: by pushing the key Enter from visualization pages and then by long pushing the same key.

(POS. 12.5) Diagnostic Measure VaLueS [Display measures] AL5 [DMVLS]

This Function shows the values of the various internal parameters as listed below :

```

UCPU:U          5.01  LFN_COM:U      0.000
UPS:U           5.41  LFN_DIF:U      0.000
VUSB:U          4.53  HFN_ADC:MU     0.000
+AUCC:U        +10.1  LFN_ADC:MU     0.001
-AUCC:U         -9.9  MEAS_NB:MU     0
UBATT:U         0.000  CAL_I:MU       16.503
IBATT:A         0.000  CAL_U:MU       530.778
VIN1:U          -8.071  CAL_G:MU       32.1622
VIN2:U          -8.065  CAL_O:MA      -0.055
VIN_C:U         -8.068  CAL_C:MA      -0.055
VIN_D:U         -0.006  CAL_R0:MA     1.00000
C_C:MA         25.00  CAL_R1:MA     1.00000
C_U:U           5.0  CAL_R2:MA     1.00000
C_UPK:U         5.5  CAL_R3:MA     1.00000
C_R:Ω          201.9  SYS_F:MHz     50.0512
C_PWR:W        0.126  CURR_K:MA     0.00000
C_T:°C         - - -  PROC1:%%      46.4
C_RT:ms        0.00  PROC2:%%       7.3
C_LK:MA        0.000  PROC3:%%       3.8
C_ST:MA        0.001  PROC4:%%      29.8
S_UER_RSLT:    0000  PROC5:%%      12.6
E1R:kΩ         0.0  CPU_T:°C      +33.12
E2R:kΩ         0.0
    
```

MAN 1000495957 EN Version: B Status: RL (released | freigegeben) printed: 01.04.2022

(POS. 12.6) Diagnostic Communication VaLueS

[Disp. comm. vars]

AL5

DCVLS

Create a list of diagnostic values on the device communication.

```

PPP link status  -> PPP_STATUS:  NETW E_IP_HDR5:      3
MCPI socket status -> MCPI_S: ESTABLISH E_IP_HDR6:     0
                   RxCNT: 1477149 E_IP_HDR7:     0
                   TxCNT: 6515456 E_IP_HDR8:     0
                   E_SR_LINK:      0 E_IP_HDR9:     0
                   E_PAKLEN:      0 E_TCPHDR1:     0
                   E_NETLAYR:     0 E_TCPHDR2:     0
                   E_TSPLAYR:     0 E_UDPHDR1:     0
                   E_ARPHDR1:     0 E_UDPHDR2:     0
                   E_ARPHDR2:     0 E_UDPHDR3:     0
                   E_IP_HDR1:      0 E_ICMPHDR:     0
                   E_IP_HDR2:      0
                   E_IP_HDR3:      0
                   E_IP_HDR4:      0
  
```

Following are the states for the PPP link and MCPI to connect the device.

PPP link status:

- “UNDT” = undetermined
- “DEAD” = dead, link down, persistent condition
- “LCP” = LCP phase, transition condition
- “AUTH” = Authentication phase, transition condition
- “IPCP” = IP and DNS addressess assign phase, transition condition
- “NETW” = network established (normal persistent condition when the link is UP)
- “TERM” = link termination request, transition condition

MCPI link status:

- “CLOSED” = socket closed
- “ACCEPT” = socket awaiting for new connection
- “ESTABLISH” = link established
- “CLS_WAIT” = waiting for closure
- “LAST_ACK” = last ACK sent
- “FIN_WAIT” = (see TCP/IP RFC documentation)
- “TIME_WAIT” = (see TCP/IP RFC documentation)


(POS. 12.7) OscilloSCOPE function

[Display graphs]

AL5

[OSCOPI]

This function displays graphs of input Z, C. current, C. Volt, C.Load, Input 1, Input 2, Input1-Input 2, Analog to Digital Transmitter.

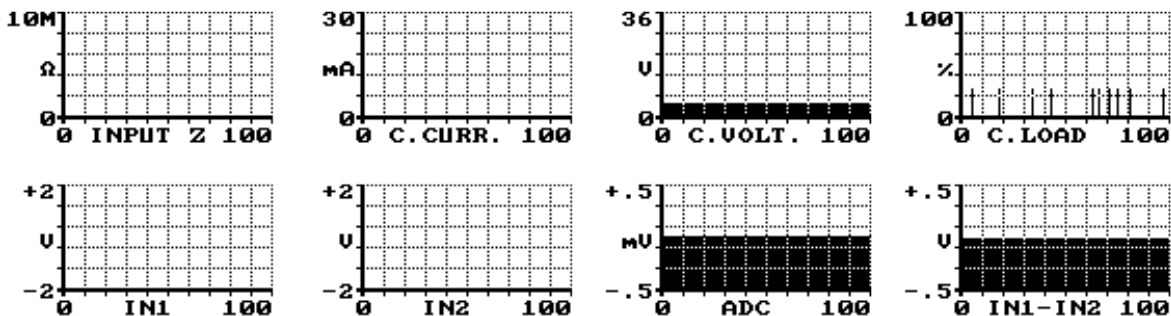*(POS. 12.8) Generic sensor set*

[Gen.sens. set]


AL5

NO MCP COMMAND


Automatic finding of a parameter set for a generic sensor.

(POS. 12.9) SD memory STATus [SD card info] AL0 SDSTA

This function shows the status of the SD card as shown in the following figure.

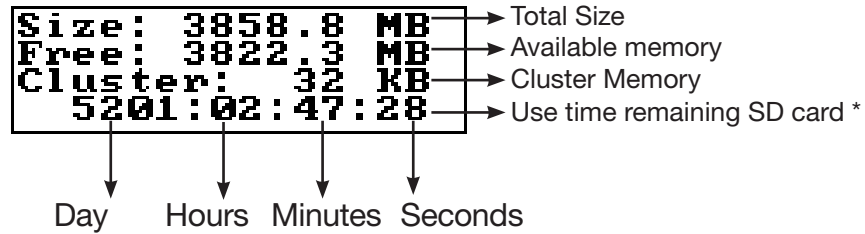

The statistical calculation is performed every time the command SDSTA is invoked. The statistical data are updated AUTOMATICALLY every day (24 hours) or manually each time the function is called to display or send the SDSTA command. However, given that for the detection is necessary a minimum of one hour, the data will not be recomputed before this time interval.

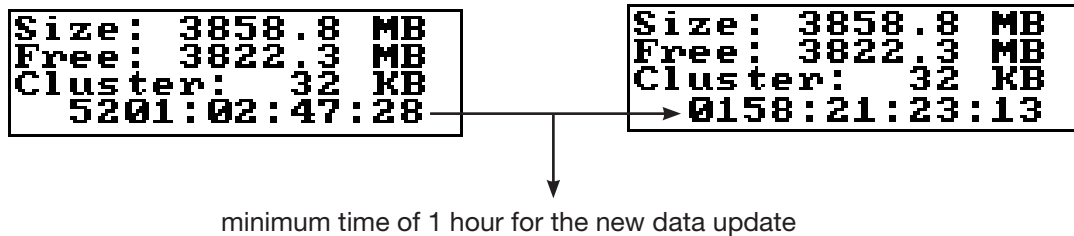

The SD card must be replaced only by the service or authorized personnel. The card must have this characteristics:

Interface	SD 3.0, Class 10, UHS-I
Connector	Standard microSD 8 pin
Outline Dimensions	11 x 15 x 1 mm
Sequential Read Performance (MB/s)	> 10 MB/s
Density Range	4GB to 32GB (SDHC only)
Data Retention	> 5 years
Endurance	> 3000 P/E cycles
Operating Temperature	-25 to +85 °C
MTBF	≥ 3,000,000 hours (0 - 30°C)
Voltage	2.7 – 3.6 V
Power Consumption	Read typically <160 mA - Write typically < 130 mA, Idle typically < 300 uA

(POS. 12.10) MODel and Software Version [Firmware info] AL0 MODSV

Firmware info version/revision

```
U.0.00.1403.FFFF
Apr 22 2016
12:35:47
```

(POS. 12.11) SeRial NUMber [S/N= xxxxxx] AL0 [SRNUM?]

View Board serial number. (read only)

(POS. 12.12) Total Working TiMe [WT= xxxx: xx: xx: xx] AL0 [TWKTM?]

View Total working time device. (read only)

MENU 13 - SYSTEM

(POS. 13.1) DaYlight Saving Time Enable [Dayl. Saving= ON] AL2 [DYSTE]

Daylight saving time change.

(POS. 13.2) Time ZONE [Time zone=h+xx.xx] AL2 [TZONE]

Set time for geographic area

(POS. 13.3) Date and TIME [xxxx/xx/xx-xx:xx] AL2 [DTIME]

Set to system date and time

(POS. 13.4-5-6-7-8-9) Level n° Access CoDe [Ln xxxxxxxx] --- [L1ACD]-> [L6ACD]

This function enables or disables, for each access level code, the main menu functions.

Each level unlocks the functionality of the lower level. (Function siehe Seite 38)

L1 code= ***** Access level value code 1 L4 code= ***** Access level value code 4

L2 code= ***** Access level value code 2 L5 code= ***** Access level value code 5

L3 code= ***** Access level value code 3 L6 code= ***** Access level value code 6

(POS. 13.10) ReStricted Access Rule Enable [Restr. access= ON] AL6 [RSARE]

Enable Or disable access level code. If active displays only the functions related to the level entered access.

IP ADDRESS SETTING (13.11-12-13)

(POS. 13.11) Device IP address [XXX.XXX.XXX.XXX] AL3 [DIPAD]

Device IP network address


(POS. 13.12) Client IP address [XXX.XXX.XXX.XXX] AL3 [CIPAD]

Client IP network address

(POS. 13.13) Network mask [XXX.XXX.XXX.XXX] AL3 [NETMS]

Network mask.

Caution: Changes to the functions of the points 13.11-13.12-13.13 are enabled after the device restart (see function 12.1 Self test for restart transmitter).

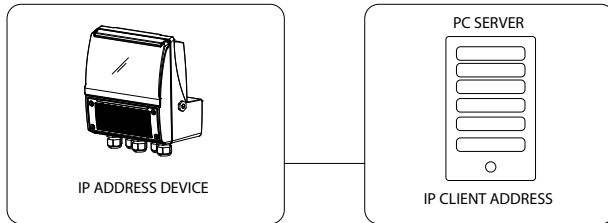

(POS. 13.14) CoeFFicient KT **[KT=X.XXXXX]** **AL6** **[CFFKT]**

Gain correction coefficient (calculated automatically)


(POS. 13.15) CoeFFicient KS **[KS=X.XXXXX]** **AL5** **[CFFKS]**

Correction coefficient constant deviceal

(POS. 13.16) CoeFFicient KR **[KR=X.XXXXX]** **AL5** **[CFFKR]**

Correction coefficient constant deviceal

DIGITAL ANALOG Transmitter (Correction Parameters)(13.17-18-19-20)

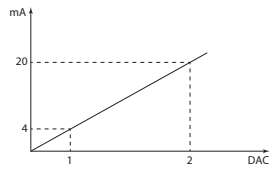

The diagram shows how the DAC4-20mA parameters are setup. The DAC1 value corresponds to 4 mA corresponding to a zero flow rate, while the value of 20mA corresponds to a 100% of the flow rate.

(POS. 13.17) Current output 1 Calibration Point 1 **[DAC1 4mA =XXXXX]** **AL5** **[C1CP1]**

DAC1 out 4mA calibration point. (current output1 calibration point 1)

(POS. 13.18) Current output 1 Calibration Point 2 **[DAC1 20mA=XXXXX]** **AL5** **[C1CP2]**

DAC1 out 20mA calibration point. (current output1 calibration point 2)

(POS. 13.19) Current output 2 Calibration Point 1 **[DAC1 20mA=XXXXX]** **AL5** **[C2CP1]**

DAC2 out 4mA calibration point. (current output2 calibration point 1)

(POS. 13.20) Current output 2 Calibration Point 2 **[DAC2 20mA=XXXXX]** **AL5** **[C2CP2]**

DAC2 out 20mA calibration point (current output2 calibration point 2)

(POS. 13.21) Stand-BY **[STAND-BY]** **AL3** **[SSTBY]**


Enable the transmitter standby state. It is enabled by selecting chargeable battery in hw config

(POS. 13.22) FirmWare UPDate **[FW update]** **AL4** **[FWUPD]**

Enable firmware update. The firmware can be uploaded to the SD card (name.file). MCP interface is activated by the command FWUPD = name.file

MAN 1000495957 EN Version: B Status: RL (released | freigegeben) printed: 01.04.2022



MENU 13 - SYSTEM: ONLY MCP FUNCTIONS

<i>Unique Identity KEY</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[UIKEY]</i>
Device Unique Identity key			
<i>HardWare SET</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[HWSET]</i>
Device hardware configuration			
<i>HardWare CODE</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[HWCOD]</i>
Device hardware code			
<i>CALibration eXecution status Memory</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	<i>[CALXM]</i>
CALXM=1 device calibrated correctly CALXM=0 Invalid calibration / Calibration not completed (invalid calibration (if the function is zero, start the calibration function, MCP CALIC command).			
<i>RTC Adjustment Coefficient</i>	<i>[MCP ONLY]</i>	<i>AL2</i>	<i>[RTCAC]</i>
RTC is used to set a correction factor for the internal clock. For setting the correction date and time with MCP press 			
<i>Function CODE Selection</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[FCODS]</i>
Select the function code			
<i>FuNction Enable State Selection</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	<i>[FNESS]</i>
Select the enable state of function			
<i>All FuNctions State Selection</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	<i>[AFNSS]</i>
Select enable state of ALL function			
<i>Quick Start FuNction Selection</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	<i>[QSFNS]</i>
Select function for quick start menu			
<i>Quick Start All Functions Selection</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	<i>[QSAFS]</i>
Select ALL function transmitter for quick start menu.			
<i>Quick start function Status LiST</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	<i>[QSLST]</i>
List quick start group functions			
<i>Function enable Status LiST</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	<i>[FSLST]</i>
List enable status of functions			

Access CODE [MCP ONLY] ALO [ACODE]

Input the right access code

Example set quick start menu function for MCP.

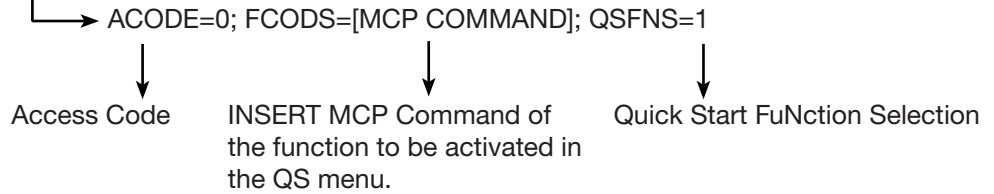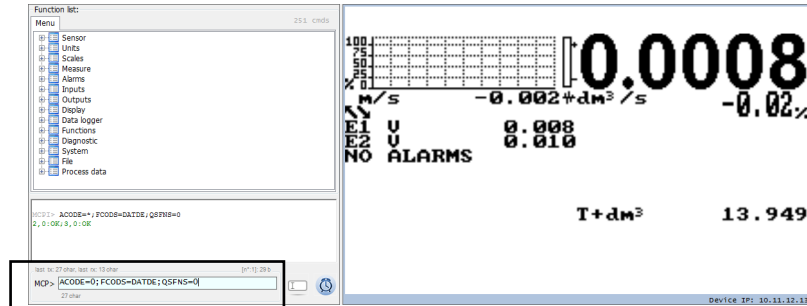

LINK Terminate [MCP ONLY] ALO [LTERM]

Terminate the PPP data link

MCPI session QUIT [MCP ONLY] ALO [MQUIT]

Quit the MCPI connection

Functions LIST [MCP ONLY] ALO [FLIST]

View list of all available transmitter functions.

Functions LISt Compact [MCP ONLY] ALO [FLISC]

View compact list of all available transmitter functions.

Functions Menu SElection [MCP ONLY] ALO [FMSEL]

Select menu for functions list

ConFfiguration LISt [MCP ONLY] ALO [CFLST]

Configuration parameter list. The list with the status / values of the transmitter parameter.

Volume Totalizer Total Positive Set [MCP ONLY] AL4 [VTTPS]

This function allows to set the value of total positive totalizer

Volume Totalizer Partial Positive Set [MCP ONLY] AL4 [VTPPS]

This function allows to set the value of partial positive totalizer

<i>Volume Totalizer Total Negative Set</i>	<i>[MCP ONLY]</i>	<i>AL4</i>	[VTTNS]
--	-------------------	------------	----------------

This function allows to set the value of total negative totalizer

<i>Volume Totalizer Partial Negative Set</i>	<i>[MCP ONLY]</i>	<i>AL4</i>	[VTPNS]
--	-------------------	------------	----------------

This function allows to set the value of partial negative totalizer

<i>Volume Total Positive Overflow Set</i>	<i>[MCP ONLY]</i>	<i>AL4</i>	[VTPOS]
---	-------------------	------------	----------------

This function allows to set the overflow value of the total positive totalizer

<i>Volume Partial Positive Overflow Set</i>	<i>[MCP ONLY]</i>	<i>AL4</i>	[VPPOS]
---	-------------------	------------	----------------

This function allows to set the overflow value of the partial positive totalizer

<i>Volume Total Negative Overflow Set</i>	<i>[MCP ONLY]</i>	<i>AL4</i>	[VTNOS]
---	-------------------	------------	----------------

This function allows to set the overflow value of the total negative totalizer

<i>Volume Partial Negative Overflow Set</i>	<i>[MCP ONLY]</i>	<i>AL4</i>	[VPNOS]
---	-------------------	------------	----------------

This function allows to set the overflow value of the partial positive totalizer

<i>CPU MaX.recorded temperature</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	[CPUMX]
-------------------------------------	-------------------	------------	----------------

CPU maximum recorded temperature

<i>CPU MiN.recorded temperature</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	[CPUMN]
-------------------------------------	-------------------	------------	----------------

CPU minimum recorded temperature

<i>Board T1 MaX.recorded temperature</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	[BT1MX]
--	-------------------	------------	----------------

T1 maximum recorded temperature

<i>Board T1 MiN.recorded temperature</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	[BT1MN]
--	-------------------	------------	----------------

T1 minimum recorded temperature

<i>Board T2 MaX.recorded temperature</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	[BT2MX]
--	-------------------	------------	----------------

T2 maximum recorded temperature

<i>Board T2 MiN.recorded temperature</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	[BT2MN]
--	-------------------	------------	----------------

T2 minimum recorded temperature

<i>Calibration Offset Register 0</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	[COFR0]
--------------------------------------	-------------------	------------	----------------

Calibration offset register 0

<i>Calibration Offset Register 1</i>	[MCP ONLY]	<i>AL6</i>	[COFR1]
Calibration offset register 1			
<i>Calibration GAin Register 0</i>	[MCP ONLY]	<i>AL6</i>	[CGAR0]
Calibration gain register 0			
<i>Calibration GAin Register 1</i>	[MCP ONLY]	<i>AL6</i>	[CGAR1]
Calibration gain register 1			
<i>Calibration GAin Register 2</i>	[MCP ONLY]	<i>AL6</i>	[CGAR2]
Calibration gain register 2			
<i>Calibration GAin Register 3</i>	[MCP ONLY]	<i>AL6</i>	[CGAR3]
Calibration gain register 3			
<i>Calibration GAin Register C</i>	[MCP ONLY]	<i>AL6</i>	[CGARC]
Calibration gain register C			

MAN 1000495957 EN Version: B Status: RL (released | freigegeben) printed: 01.04.2022

MENU 14 - FILE (ONLY MCP)

<i>File Transfer ABoRt</i>	<i>[MCP ONLY]</i>	<i>AL2</i>	[FTABR]
Abort the current File Transfer			
<i>File Transfer STAtE</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	[FTSTA]
Show the File Transfer state			
<i>Read Last EVenTs</i>	<i>[MCP ONLY]</i>	<i>AL2</i>	[RLEVt]
Read the latest system events			
<i>Read All EVenTs</i>	<i>[MCP ONLY]</i>	<i>AL2</i>	[RAEVt]
Read all current system events			
<i>Read Last Logged DaTa</i>	<i>[MCP ONLY]</i>	<i>AL2</i>	[RLLDt]
Read the latest logged data			
<i>Read All Logged DaTa</i>	<i>[MCP ONLY]</i>	<i>AL2</i>	[RLLDt]
Read all current logged data			
<i>Read Last Sensor Verify Data</i>	<i>[MCP ONLY]</i>	<i>AL2</i>	[RLSvD]
Read the latest sensor verify data			
<i>Read All Sensor Verify Data</i>	<i>[MCP ONLY]</i>	<i>AL2</i>	[RASvD]
Read all sensor verify data			
<i>File SEND</i>	<i>[MCP ONLY]</i>	<i>AL2</i>	[FSEND]
Set file name for read operation			
<i>File ReCeivE</i>	<i>[MCP ONLY]</i>	<i>AL5</i>	[FRCvE]
Set file name for write operation			
<i>File ReCeive APpend mode</i>	<i>[MCP ONLY]</i>	<i>AL5</i>	[FRCAP]
Set file name for write-append			
<i>File OFFSet position</i>	<i>[MCP ONLY]</i>	<i>AL2</i>	[FOFFS]
Set file offset position			

<i>ConFiGuration file WRite</i>	<i>[MCP ONLY]</i>	<i>AL2</i>	[CFGWR]
---------------------------------	-------------------	------------	----------------

Save the configuration to a file

<i>ConFiGuration file ReaD</i>	<i>[MCP ONLY]</i>	<i>AL2</i>	[CFGRD]
--------------------------------	-------------------	------------	----------------

Read the configuration from file

<i>FuNCtion list file WRite</i>	<i>[MCP ONLY]</i>	<i>AL2</i>	[FNCWR]
---------------------------------	-------------------	------------	----------------

Save the functions list to file

<i>Function Enable Status WRite</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	[FESWR]
-------------------------------------	-------------------	------------	----------------

Save function enable status to file

<i>Quick Start function Status WRite</i>	<i>[MCP ONLY]</i>	<i>AL6</i>	[QSSWR]
--	-------------------	------------	----------------

Save quick start function enable

MENU 15 - PROCESS DATA (ONLY MCP)

<i>OUTput 1 Set</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	[OUT1S]
---------------------	-------------------	------------	----------------

Set value for digital output 1

<i>OUTput 2 Set</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	[OUT2S]
---------------------	-------------------	------------	----------------

Set value for digital output 2

<i>Digital INput 1 Status</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	[DIN1S]
-------------------------------	-------------------	------------	----------------

Digital input 1 status read

<i>Flow Rate Full Scale in chosen Units</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	[FRFSU]
---	-------------------	------------	----------------

Flow rate full scale in chosen units

<i>Flow Rate Value PerCentage</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	[FRVPC]
-----------------------------------	-------------------	------------	----------------

Flow rate value in percentage

<i>Flow Rate Value Percentage without cut-off</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	[FRVPX]
---	-------------------	------------	----------------

Flow rate in percentage without cut-off

<i>Flow Rate Value Binary without cut-off</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	[FRVBX]
---	-------------------	------------	----------------

Flow rate in binary without cut-off

<i>Flow Rate Value Technical Unit</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[FRVTU]</i>
Flow rate value in unit of measure			
<i>Volume Totalizer Total Positive Value</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[VTTTPV]</i>
Totalizer T+ read value			
<i>Volume Totalizer Partial Positive Value</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[VTPPV]</i>
Totalizer P+ read value			
<i>Volume Totalizer Total Negative Value</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[VTTNV]</i>
Totalizer T- read value			
<i>Volume Totalizer Partial Negative Value</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[VTPNV]</i>
Totalizer P- read value			
<i>Volume Totalizer Total Positive Overflow</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[VTTPO]</i>
Totalizer T+ number of overflows			
<i>Volume Totalizer Partial Positive Overflow</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[VTPPO]</i>
Totalizer P+ number of overflows			
<i>Volume Totalizer Total Negative Overflow</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[VTTNO]</i>
Totalizer T- number of overflows			
<i>Volume Totalizer Partial Negative Overflow</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[VTPNO]</i>
Totalizer P- number of overflows			
<i>Board TeMPeratures</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[BTMPS]</i>
Board temperatures (read-only parameter)			
<i>CPU temperature</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[CPUTP]</i>
CPU temperature (read-only parameter)			
<i>Sensor CoiLs TemPerature</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[SCLTP]</i>
Sensor's coils temperature (read-only parameter)			
<i>LiQuid VELOCITY</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[LQVEL]</i>
Liquid velocity in m/s			
<i>AVerAGe process data Samples Number</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[AVGSN]</i>
Number of samples for averaged values			
<i>ALARM status</i>	<i>[MCP ONLY]</i>	<i>AL0</i>	<i>[ALARM]</i>
Active alarm(s) status			

Sensor TeSt Result Code	[MCP ONLY]	ALO	[STSRC]
Sensor test result code			
Main power status	[MCP ONLY]	ALO	[MPWRS]
Status of main power supply			
INput RESistance	[MCP ONLY]	ALO	[INRES]
Equivalent Input resistance of liquid measured by electrodes			
INput VoLtageS	[MCP ONLY]	ALO	[INVLS]
Electrodes input voltages			
System Battery Voltage	[MCP ONLY]	ALO	[SBVLT?]
View battery voltage			
System Battery Charge Status	[MCP ONLY]	ALO	[SBCHS?]
View system battery charge status			
Measure BUFFers	[MCP ONLY]	ALO	[MBUFF]
Measure buffers data read			
SEQuence NumBer	[MCP ONLY]	ALO	[SEQNB]

This function allows to create a random sequential number to identify the MCP reply messages and verify that the messages are sent in the right sequence.
 The user can combine to MCP comand the command SEQNB=n, with a different n to every sent command.
 The reply that the meter will give, will include the same SEQNB sent number, so you can correctly match each reply with the respective request, maintaining control of the messages time line. With this function you can also monitor if there are missed messages or messages that have not been answered by the device.

METER DATA

The "METER DATA" system allows the import of data up to level 4, included, (working and factory parameters of the card) of the converter to another device and the restoration of the data of a meter in case the electronic card needs to be replaced .

Operation: during normal operation the meter saves all data, including the dynamic data of the totalizers, every hour, on a specific file on the SD card. The file is incremental, so its length increases linearly over the time. Each recording is time-stamped for future use. Currently, automatic data recovery uses only the last valid recording in chronological order.

Data reset: The reset is done manually, after inserting the SD card taken from the meter to be replaced, on the new electronics to be used as a replacement. This operation must be done strictly with the electronics off. Once the SD card has been replaced, wait for the device to restart and connect the MCP interface via the USB connection. Then select the "Data recovery" function on the "Functions" menu and confirm. Wait for the device to restart (the time required will depend on the configuration and the presence or absence of operations with the modem, if installed).

Consequences of restoring data on the SD card: the new electronic card will acquire all the existing data from the old meter. The root directory of the old card will be renamed with the serial number of the new card and no existing data will be altered. The data that belonged to the new card that may have been created during the recovery (data logger or events) are stored in a root directory with the name "<new card series number> .OLD". In any case, no data will be overwritten or deleted.

Limits of data saving and retrieval: Data recovery is possible with the following limitations:

- The new board to be used as a replacement must have the same hardware configuration as the one to be replaced.
- If the device to be replaced is MID, the new board to be used as a replacement must already be preconfigured as MID, with the appropriate functions locked and the CRC comparison value set correctly.
- It is NOT possible to recover any passwords saved for internet connection services (email, FTP, etc.). These will need to be re-entered manually or via a separate configuration file. Restoring data does NOT involve resetting any passwords that may have been pre-configured in the new card.
- It is NOT possible to recover the passwords relating to the access levels of the instrument. Also in this case they will be re-set manually or pre-configured in the new board.
- The data relating to the hardware calibrations of the board are NOT transferred, therefore those stored in the new board remain valid.

The following data are NOT recoverable:


- Function parameters accessible with level 5 and 6 (typically hardware calibration data)
- Passwords and others encrypted data
- Hardware configuration parameters
- Enable status of the functions selected for the "quick-start" menu
- System function enable status

The recovered data are also saved simultaneously in the "FACTORY DEFAULTS" memory and they become the new factory standard values of the board.


Operating procedure to change the transmitter Board




Remove the 4 screws ("SE58 M construction" pag. 14) to remove the main housing. Attention of any electrical cables.

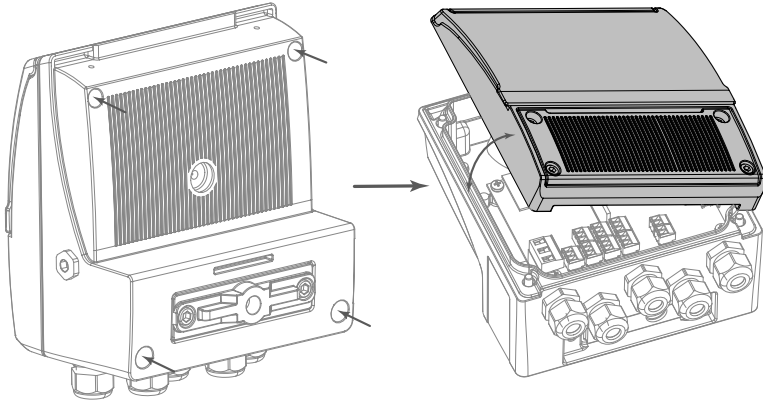

Remove the 4 screws (see "SE58 M construction" pag. 14) to remove the SE58 M board. Attention of any electrical cables. Remove the SD card and insert the new SE58 M board.

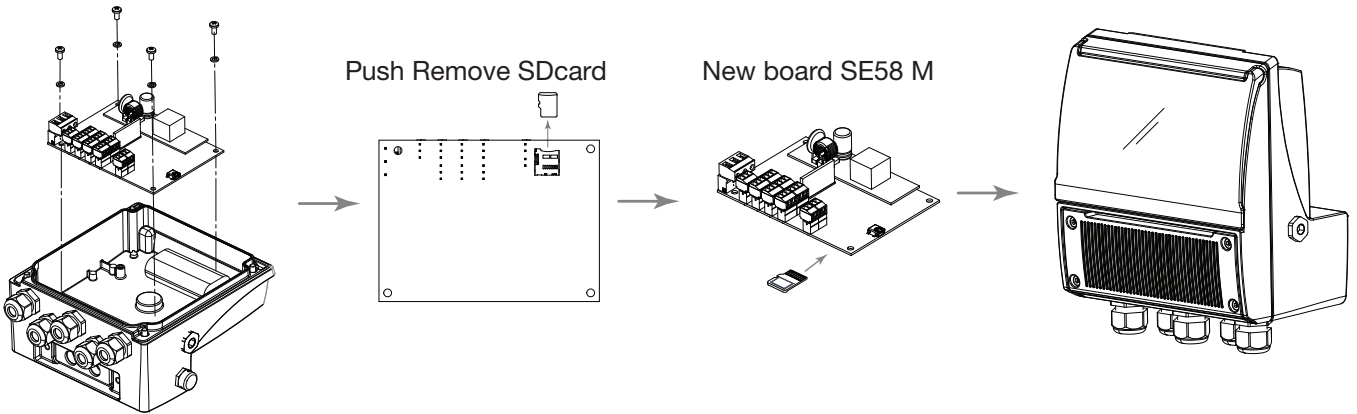

Install the card, turn on the transmitter and enable the function **M.data recovery** to restore data

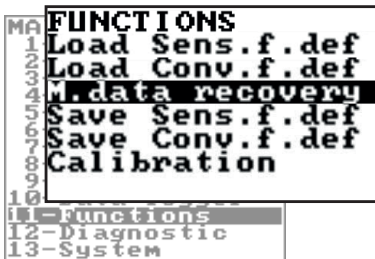

ALARM MESSAGES (CAUSES AND ACTIONS TO BE TAKEN)

MESSAGE	CAUSES	ACTION TO TAKE
NO ALARMS	All works regularly	---
[000] SYSTEM RESTART	---	---
[001] INTERNAL PS FAIL	Internal supply voltage error	Contact the service
[002] CLOCK NOT SET	System Clock not set	Set the system clock from the transmitter menu 13 (see also MCP function).
[003] SD CARD FAILURE	SD card not found or unreadable	check and/or replace SD card
[005] F-RAM ERROR	Error writing / reading Flash-RAM	Contact the service
[006] EXCITATION ERROR	The excitation of the sensor coils resulting from cable is interrupted	Check the connecting cables to the sensor.
[007] SIGNAL ERROR	The measure is strongly effected by external noise or the cable connecting the transmitter to the sensor is broken.	Check the status of the cables connecting the sensor, the grounding connections of the devices and the possible presence of noise sources.
[008] PIPE EMPTY	The measuring pipe is empty or the detection system has not been properly calibrated.	Check whether the pipe is empty or repeat the empty pipe calibration procedure.
[009] FLOW>MAX+	The flow rate is higher than the maximum positive threshold set.	Check the maximum positive flow rate threshold set and the process conditions.
[010] FLOW>MAX-	The flow rate is higher than the maximum negative threshold set.	Check the maximum negative flow rate threshold set and the process conditions.
[011] FLOW<MIN+	The flow rate is lower than the minimum positive threshold set.	Check the minimum positive flow rate threshold set and the process conditions.
[012] FLOW<MIN-	The flow rate is lower than the minimum negative threshold set.	Check the minimum negative flow rate threshold set and the process conditions.
[013] FLOW>FULL SCALE+	The flow rate is higher than the full scale positive value set on the device.	Check the full scale positive value set on the device and the process conditions.
[014] FLOW>FULL SCALE-	The flow rate is higher than the full scale negative value set on the device.	Check the full scale negative value set on the device and the process conditions.
[015] PULSE1>RANGE	The pulse generation output 1 of the device is saturated and cannot generate the sufficient number of impulses.	Set a bigger unit of volume or, if the connected counting device allows it, reduce the pulse duration value.
[016] PULSE2>RANGE	The pulse generation output 2 of the device is saturated and cannot generate the sufficient number of impulses.	Set a bigger unit of volume or, if the connected counting device allows it, reduce the pulse duration value.
[017] CALIBR.ERROR	Calibration Error	Contact the service
[018] SYSTEM FREQ. ERR	System Freq. Error	Contact the service
[019] B.DATA NOT INIT	Uninitialized data system	Contact the service
[020] FL.SENSOR ERROR	Flow rate sensor error	Contact the service
[021] BATTERY LOW	(Rechargeable) battery depleted	Contact the service to Replace the battery

[022] BATTERY V>MAX	Battery voltage (rechargeable)> max. Allowed	Contact the service to Replace the battery
[023] BATTERY I>MAX	Battery charge current> max. allowed	Contact the service to Replace the battery
[024] MAIN PS V.ERR	Main supply voltage (+ 5V) out of tolerance.	Contact the service
[025] USB VOLTAGE ERR	Voltage of USB connection out of tolerance.	Contact the service
[026] SDC ALMOST FULL	SD card space <500 MB.	For more information see function "12.9" pag. 38.
[027] SDC FULL	SD card out of memory	Memory Full. You can not save logger. Contact the service to replace the SD memory.
[028] BATT.TEMP.CRIT	The battery can not be charged. The temperature is out of range (detected temperature <0 C° or temperature >50°)	Wait for the normal temperature reset. View Environmental Use Conditions "Environmental Use Conditions" pag. 5.

ERROR CODE TEST SYSTEM OF SENSOR

The codes are in hexadecimal format, the meaning is given for each bit. There are several possible error simultaneous combinations (more bits active) then that will give the combined numerical codes.

CODE	ANOMALIES DESCRIPTION	ACTION TO TAKE
0000	NO ERROR	---
0001	SENSOR TEST INSULATION: Generator power too low	Contact the service
0002	SENSOR TEST INSULATION: Generator power too high	
0004	SENSOR TEST INSULATION: Phase 1 generator voltage too low	
0008	SENSOR TEST INSULATION: Phase 1 generator voltage too high	
0010	SENSOR TEST INSULATION: Phase 1 terminal voltage coils 1 too low	
0020	SENSOR TEST INSULATION: Phase 1 terminal voltage coils 2 too low	
0040	SENSOR TEST INSULATION: Phase 2 generator voltage too low	
0080	SENSOR TEST INSULATION: Phase 2 generator voltage too high	
0100	SENSOR TEST INSULATION: Phase 2 terminal voltage coils 1 too low	
0200	SENSOR TEST INSULATION: Phase 2 terminal voltage coils 2 too low	
0400	SENSOR TEST INSULATION: Insulation loss, leakage current out of tolerance	Check: wiring between sensor transmitter conditions of use set parameters If the problem persists contact the service
0800	TEST TEMPERATURE (RESISTANCE) COILS: Temperature (resistance) out of tolerance	
1000	TEST TIME GETTING ON CURRENT PHASE (A): Value out of tolerance	
2000	TEST TIME GETTING ON CURRENT PHASE (B): Value out of tolerance	
4000	TEST RESISTANCE INPUTS ELECTRODES: Input value 1 out of tolerance	
8000	TEST RESISTANCE INPUTS ELECTRODES: Input value 2 out of tolerance	
10000	SENSOR EXCITATION TEST: Invalid sensor driving conditions	Contact the service
20000	REFERENCE VALUES TEST: Invalid reference value	
40000	ELECTRODES INPUT RESISTANCE TEST: Empty pipe, test not possible	Check if the pipe is full

At the end of its lifetime, this product shall be disposed of in full compliance with the environmental regulations of the state in which it is located.

MANUAL REVIEWS

REVIEW	DATE	DESCRIPTION
SE58M_EN_BU_R00_1.02.XXXX	23/03/2021	FIRST EDITION
SE58M_EN_BU_R01_1.04.XXXX	18/08/2021	Update for electrical safety certification. Firmware update for adding Mbus protocol
SE58M_EN_BU_R02_1.04.XXXX	08/10/2021	Changes to data relating to digital output
SE58M_EN_BU_R03_1.04.XXXX	02/12/2021	Added note for maintenance
SE58M_EN_BU_R04_1.04.XXXX	26/02/2022	Added notes for MCP and made some corrections on texts

